

JAGUAR XK 120

SPARE PARTS CATALOGUE

LEFT- AND RIGHT-HAND DRIVE OPEN 2-SEATER, FIXED HEAD AND DROP HEAD COUPE MODELS

ENGINE NUMBERS

RIGHT-HAND DRIVE or LEFT-HAND DRIVE - W.1001 ONWARDS
RIGHT-HAND DRIVE or LEFT-HAND DRIVE - F.1001 ONWARDS

NOTE: Suffix /7 or /8 of Engine Number denotes Compression Ratio. Suffix "S" of Engine Number denotes fitment of Special Equipment.

CHASSIS NUMBERS

| RIGHT-HAND DRIVE | OPEN 2-SEATER | - | 660001 ONWARDS |
|------------------|------------------|-----|----------------|
| LEFT-HAND DRIVE | OPEN 2-SEATER | - | 670001 ONWARDS |
| RIGHT-HAND DRIVE | FIXED HEAD COUPE | _ | 669001 ONWARDS |
| LEFT-HAND DRIVE | FIXED HEAD COUPE | - , | 679001 ONWARDS |
| RIGHT-HAND DRIVE | DROP HEAD COUPE | - | 667001 ONWARDS |
| LEFT-HAND DRIVE | DROP HEAD COUPE | - | 677001 ONWARDS |

NOTE: Special Equipment Models Indicated by prefix "S" to Chassis Number.

JAGUAR CARS LIMITED, COVENTRY, ENGLAND

Telephone : Coventry 62677 (P.B.X.)

Code: Bentley's 2nd

Telegraphic Address:
"JAGUAR," COVENTRY
Telex 31622

DIRECTORS:

SIR WILLIAM LYONS, CHAIRMAN AND MANAGING DIRECTOR. W. M. HEYNES, M.I.MECH.E. (A.D.), M.S.A.E.

A. WHITTAKER, GENERAL MANAGER. E. F. HUCKVALE, F.C.C.S., SECRETARY.

INTERPRETATION OF CATALOGUE

Attention is drawn to the lay-out of this catalogue. It will be observed that the heading of each assembly is printed in **BOLD BLOCK LETTERS**, whilst the spares relevant to each assembly are printed in small type and "OFFSET" TO THE RIGHT.

The fact that certain items (printed in small type) are not "offset" indicates that they do not form part of any assembly and must, therefore, be ordered as individual items.

ILLUSTRATIONS

To aid identification of spares, "exploded" illustrations are incorporated in this catalogue.

These illustrations may be used in the following manner:-

- (a) If a Water Pump Seal is required, the index shows that the details for the item are printed on page 6 and that it is illustrated on Plate A. Turning to page 6, the necessary information for the ordering of the part is given, whilst the column headed "Plate No." indicates that reference to item number 137 on Plate A will give a photographic view of the component required.
- (b) The details for each illustrated item are printed in the script in numerical Plate number order. An item may therefore be first identified photographically. For example, if a Driving Gear is required for the Oil Pump, a picture of the part may be found with the engine details on Plate A, together with its Plate reference number. It is now an easy matter to find Plate number "A.65" in the script and the Part No. and Technical Description are at once apparent.

ORDERING

Customers are advised to make themselves familiar with the method of ordering spare parts in accordance with the explanatory notes which follow.

PUBLICATION J.8

PRICE £1.10.0

PUBLISHED OCTOBER, 1950 REPRINTED OCTOBER, 1952 (A.L.I) AMENDED MAY, 1953 (A.L.2) AMENDED JUNE, 1954 (A.L.3) REPRINTED JANUARY, 1958

INSTRUCTIONS FOR ORDERING SPARE PARTS

To avoid delay through inaccurate interpretation, it is of great importance that the information detailed in the following paragraphs be strictly adhered to when placing orders.

CAR TYPE

Always quote the Engine and Chassis numbers except when Stock Orders are placed, in which case the Year and Model must be indicated.

The Engine and Chassis numbers will be found stamped on a brass plate which is fitted to the left-hand side of the scuttle.

DETAILS OF PARTS REQUIRED

When ordering, the most complete information should be given to enable us to deal with your requirements expeditiously and to minimise delay in the despatch of the goods. Therefore we strongly recommend that the following procedure be adopted:—

- (1) Identify part with technical description in catalogue.
- (2) On order, quote (a) part number, (b) technical description. Note: In no case should the illustration plate number be given.
- (3) If doubts exist as to the part number or description, a dimensioned sketch will assist in the interpretation of the order or, alternatively, the old part should accompany the order as a pattern. When patterns are sent, it is most important that they be labelled, indicating the name and address of the sender, together with any reference such as order number, etc. Patterns will not be returned unless instructions to that effect accompany the order. In the absence of such instructions, patterns will be scrapped after retention for a period of ONE WEEK.
- (4) To order in "sets" is misleading. Please, therefore, state the specific quantity required.

SPECIAL ATTENTION

Particular attention is drawn to the fact that when such items as Wings, Doors, Door Glasses, etc., are required, care should be taken to indicate whether they are located on the left- or right-hand side of the car. The position is determined by the driver's own left or right hand when seated.

Orders for Carpets, Casings, etc., should clearly state the precise colour required.

DESPATCH INSTRUCTIONS

The full address of the destination to which the goods are to be sent, together with that of the customer, should be clearly defined.

Whilst every effort will be made to observe customers' wishes as to the mode of transport, it is the normal custom to utilise the quickest possible method, whether it be post, passenger train or road transport, this being dependent upon the size and weight of the package and the destination.

PRICES

Current retail prices, shown in the Master Parts Price List, are subject to alteration without notice and are for delivery at works. Postage, carriage and packing will be charged extra.

DAMAGE BY FIRE OR ACCIDENT

Whilst every precaution is taken, we do not accept liability for damage which may be caused by fire to any motor car or part thereof entrusted to us for any purpose whatsoever. Nor is liability accepted for accidental damage.

| Description. | | Page No. | Plate. | Description. | Page No. | Plate |
|--|-----|---|---|--|--|--|
| • | | • | | • | . 464 110. | |
| CYLINDER BLOCK | | 16C | A . | CYLINDER HEAD—(continued) | | |
| Can Savaura (Sealing Bings) | | 1 | Α | Comphetes | • | |
| Cap Screws (Sealing Rings) Connecting Rod | | 3 | Â | Camshafts | | В |
| Connecting Rod Connecting Rod Bearings (| | 3 | Â | | - | B B |
| Connecting Rod Bearings (| | 3 | Â | 0 1 6 0 500 | | В |
| | | 3 | Â | | | В |
| Crankshaft | | 1-2 | Â | | | В |
| Crankshaft Bearings | | 2 | Â | Camshaft Cover Sealing Plug Camshaft Ring Dowels | | В |
| | | 2 | Â | Camshaft Studs | . 8 | В |
| Crankshaft Damper | | 2 | Â | Conduit (High Tension Leads) | | В |
| Crankshaft Damper Centre | | 2 | Â | Cylinder Head Gasket | _ | В |
| Crankshaft Oil Pump Gear | | 2 | Â | Cylinder Head Oil Pipe | | В |
| | | 2 | Â | Engine Decarbonising Gaskets | | В |
| Crankshaft Pulley | | 2 | Â | Exhaust Manifolds | | В |
| | | 2 | Ä | Exhaust Manifold Gaskets | _ | В |
| | | ī | A | Exhaust Manifold Studs | | В |
| Crankshaft Thrust Washers | | 2 | A | Front Cover | | В |
| | | 2 | Α | High Tension Leads | | В |
| Drain Tube (Bearing Cap) | | 1 | Α | Inlet Manifold | | B |
| Engine Damper | | 6B | | Inlet Manifold Gaskets | | B |
| Engine Overhaul Gaskets | | 6C | | Inlet Manifold Studs | . 9 | В |
| Flywheel | | 2 | Α | Rev. Counter Adapter | . 8A | В |
| Flywheel Dowels | | 2 | Α | Rev. Counter Adapter Oil Seal | . 8A | В |
| | | 6B | A | Rev. Counter Adapter Oil Thrower | | В |
| Front Engine Plate | | 6B | Α | Rev. Counter Adapter Shaft | | В |
| Liners | | 1 | | Sparking Plugs | . 10 | В |
| Oil Cleaner | | 5—6 | Α | Starting Pipe | . 10 | В |
| Oil Cleaner Element | | 5 | Α | Starting Pipe Flange | . 9 | В |
| Oil Cleaner Gasket | | 6 | Α | Thermostat | . 10 | В |
| Oil Cleaner Relief Valve | | 6 | Α | Valves | | В |
| Oil Pipes | | 5 | A | Valve Adjusting Pads | | В |
| Oil Pump | | 4 | Α | Valve Collars | | В |
| Oil Pump Coupling Shaft | | 4 | A | Valve Cottars | | В |
| Oil Pump Delivery Pipe | | 4 | A | Valve Guides | | В |
| Oil Pump Drive Shaft | | 4 | A | Valve Inserts | | В |
| | | 4 | Ą | Valve Springs | | В |
| Oil Pump Gears | | 4 | Ą | Valve Spring Seats | | В |
| Oil Pump Spindle | | 4 | A | Valve Tappets | | В |
| Oil Sump | | 4 | Α | Valve Tappet Guides | | В |
| Oil Sump Deflector | | 5 | | Water Outlet Elbow | . 9 | В |
| Oil Sump Dipstick | ••• | 5 | Α | | | |
| | | _ | | | | |
| 011 6 51 | | 5 | A | | | |
| Oil Sump Element | | 5 | A | TIMING GEAR | . 11—12A | c |
| Oil Sump Element Oil Sump Floating Filter | | 5 4 | A | • | | С |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket | | | AAAA | Adjusting Plate | . !! | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket | | 5 4 5 4 | A A A | Adjusting Plate Camshaft Sprockets | . 11 . 11 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays | | 5 4 5 4 5 | A A A A A | Adjusting Plate | . 11 . 11 . 12 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons | | 5 4 5 4 5 2—3 | A A A A A A | Adjusting Plate | . !! . !! . !2 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings | | 5 4 5 4 5 2—3 2—3 | A A A A A A | Adjusting Plate | . 11 . 11 . 12 . 12 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Rings Rear Cover | | 5 4 5 4 5 2—3 2—3 | A A A A A A A | Adjusting Plate Camshaft Sprockets | . 11 . 11 . 12 . 12 . 12 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting | | 5 4 5 2—3 2—3 1 6B | A A A A A A A A A | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft | . 11 . 12 . 12 . 12 . 11 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) | | 5 4 5 4 5 2—3 2—3 1 6B | ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft | . 11 . 12 . 12 . 12 . 11 . 11 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) | | 5 4 5 2—3 2—3 1 6B | A A A A A A A A A | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) | . 11 . 11 . 12 . 12 . 12 . 11 . 11 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer | | 5 4 5 2—3 2—3 1 6B 1 | ~ | Adjusting Plate Camshaft Sprockets | . 11 . 11 . 12 . 12 . 12 . 11 . 11 . 11 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) | | 5 4 5 2—3 2—3 1 6B | ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets | . 11 . 12 . 12 . 12 . 11 . 11 . 11 | ουυυυυυυυ |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) | | 5 4 5 2—3 2—3 1 6B 1 | ~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket | . 11 . 11 . 12 . 12 . 12 . 11 . 11 . 11 | 000000000000 |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap | | 5 4 5 2—3 2—3 1 6B 1 1 6B | ~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains | . 11 . 11 . 12 . 12 . 12 . 11 . 11 . 11 | 000000000000 |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm | | 5 4 5 2—3 2—3 1 6B 1 6B 1 6C | ~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Bracket Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Bracket Oil Spray Bracket Timing Chains Timing Cover | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | 000000000000 |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump | | 5 4 5 4 5 2—3 2—3 1 6B 1 6B 1 6C 1 6—6A | ~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Bracket Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Cover Gasket | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | 000000000000 |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Pump Water Pump Banjo | | 5 4 5 2—3 2—3 1 6B 1 6B 1 6C 1 6—6A | 444444444 4444 | Adjusting Plate Camshaft Sprockets Chain Tensioner Bracket Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Cover Timing Cover Gasket Timing Cover Gasket Timing Cover Oil Seal | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | 000000000000 |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Banjo Water Pump Banjo Water Pump Driving Dogs Water Pump Fan | | 5 4 5 2—3 2—3 1 6B 1 6C 1 6—6A 6—6A | 444444444 4444 4 | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Gasket Timing Cover Oil Seal Vibration Damper | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | ουυυυυυυυ |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Banjo Water Pump Bearings Water Pump Driving Dogs | | 5 4 5 2—3 2—3 1 6B 1 6B 1 6C 1 6—6A 6—6A 6—6A | ~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Gasket Timing Cover Gasket Timing Cover Oil Seal Vibration Damper | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | υυυυυυυυυυυυυυ |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Banjo Water Pump Banjo Water Pump Banjo gos Water Pump Fan Belt Water Pump Fan Belt | | 5 4 5 2—3 2—3 1 6B 1 6B 1 6C 6—6A 6—6A 6—6A 6—6A | ~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Gasket Timing Cover Oil Seal Vibration Damper | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | υυυυυυυυυυυυυυ |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Rear Cover Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Banjo Water Pump Bearings Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Pulley | | 5 4 5 4 5 2—3 2—3 1 6B 1 6C 6—6A 6—6A 6—6A 6—6A 6—6A 6—6A | ~~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Bracket Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | ουυυυυυυυυυυυυ |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Banjo Water Pump Banjo Water Pump Banjo Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pelt Washers | | 5 4 5 4 5 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 | ~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Gasket Timing Cover Oil Seal Vibration Damper | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | υυυυυυυυυυυυυυ |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Seals Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Hub Water Pump Fan Hub Water Pump Fan Hub Water Pump Fan Felt Washers Water Pump Felt Washers | | 5 4 5 4 5 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 | ~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Gasket Water Pump Gasket Water Pump Impellor | | 5 4 5 2—3 2—3 1 6B 1 6—6A 6—6A 6—6A 6—6A 6—6A 6—6A 6—6A 6— | ~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Gasket Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket CARBURETTER Connecting Shaft | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | 00000000000000000000000000000000000000 |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Banjo Water Pump Bearings Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Belt Washers Water Pump Fan Pulley | | 5 4 5 4 5 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 | ~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket CARBURETTER Connecting Shaft Coupling Shaft | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | 00000000000000000000000000000000000000 |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Gasket Water Pump Gasket Water Pump Impellor | | 5 4 5 2—3 2—3 1 6B 1 6—6A 6—6A 6—6A 6—6A 6—6A 6—6A 6—6A 6— | ~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket Connecting Shaft Coupling Shaft Feed Pipe | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Banjo Water Pump Bearings Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Belt Washers Water Pump Fan Pulley | | 5 4 5 4 5 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 | ~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Cover Timing Cover Gasket Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket CARBURETTER Connecting Shaft Coupling Shaft Feed Pipe Flange Gasket | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Banjo Water Pump Bearings Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Belt Washers Water Pump Fan Pulley | | 5 4 5 4 5 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 | ~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket CARBURETTER Connecting Shaft Coupling Shaft Feed Pipe Flange Gasket Flexible Coupling | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Bearings Water Pump Bearings Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Gasket Water Pump Gasket Water Pump Gasket Water Pump Seal Water Pump Seal Water Pump Seal Water Pump Seal | | 5 4 5 4 5 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 | ~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket CARBURETTER Connecting Shaft Feed Pipe Flange Gasket Flexible Coupling Flexible Pipe Flexible Pi | . 11 . 12 . 12 . 12 . 11 . 11 . 11 . 11 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Banjo Water Pump Bearings Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Belt Washers Water Pump Fan Pulley | | 5 4 5 4 5 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 | ~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket CARBURETTER Connecting Shaft Coupling Shaft Feed Pipe Flange Gasket Flexible Coupling Flexible Coupling Flexible Pipe Float | 11 12 12 12 11 11 11 11 11 11 11 11 11 1 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Bearings Water Pump Bearings Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Gasket Water Pump Gasket Water Pump Gasket Water Pump Seal Water Pump Seal Water Pump Seal Water Pump Seal | | 5 4 5 4 5 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 | ~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Cover Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket CARBURETTER Connecting Shaft Coupling Shaft Feed Pipe Flange Gasket Flexible Coupling Flexible Pipe Float Float Chambers | 11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Drain Tap Water Pump Banjo Water Pump Banjo Water Pump Banjo Water Pump Banjo Water Pump Fan Water Pump Fan Water Pump Fan Water Pump Fan Hub Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Hub Water Pump Fan Pulley Water Pump Fan Pulley Water Pump Fan Hub Water Pump Fan Pulley | | 5 4 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 6 6 6 | ~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Chains Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket CARBURETTER Connecting Shaft Feed Pipe Flange Gasket Flexible Coupling Flexible Pipe Float Float Chambers Front Carburetter | 11 12 12 12 11 11 11 11 11 11 12 12 12 1 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Pistons Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Pump Banjo Water Pump Fan Water Pump Banjo Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Hub Water Pump Fan Pulley Water Pump Gasket Water Pump Gasket Water Pump Seal Water Pump Seal Water Pump Seal Water Pump Spindle CYLINDER HEAD Anti-Blow-Back Valve Anti-Blow-Back Valve Spriibreather Housing | | 5 4 5 4 5 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 | ~~~~~~~~~~~~~~~~~~ | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Cover Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket CARBURETTER Connecting Shaft Feed Pipe Flange Gasket Flexible Coupling Flexible Pipe Float Float Chambers Front Carburetter Gland Spring | 11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Piston Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Pump Banjo Water Pump Banjo Water Pump Bearings Water Pump Bearings Water Pump Fan Belt Water Pump Fan Belt Water Pump Fan Pulley Water Pump Fan Pulle | | 5 4 5 4 5 5 4 5 5 4 6 5 6 6 6 6 6 6 6 6 | 44444444444444444444 B | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Cover Gasket Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket Carburetter Connecting Shaft Coupling Shaft Feed Pipe Flange Gasket Flexible Coupling Flexible Pipe Float Float Chambers Front Carburetter Gland Spring Gland Washers | 11 12 12 12 12 11 11 11 11 11 11 11 11 1 | |
| Oil Sump Element Oil Sump Floating Filter Oil Sump Gasket Oil Sump Seals Oil Sump Trays Pistons Pistons Rings Rear Cover Rear Engine Mounting Ring Dowels (Rear Cover) Sealing Ring (Rear Cover) Stabilizer Studs (Cylinder Head) Torque Arm Water Pump Banjo Water Pump Fan Water Pump Banjo Water Pump Fan Belt Water Pump Fan Hub Water Pump Fan Hub Water Pump Fan Pulley Water Pump Gasket Water Pump Gasket Water Pump Seal Water Pump Seal Water Pump Seal Water Pump Spindle CYLINDER HEAD Anti-Blow-Back Valve Anti-Blow-Back Valve Spriibreather Housing | | 5 4 5 4 5 5 4 5 5 4 6 6 6 6 6 6 6 6 6 6 | AAAAAAAAA AAAA AAAAAAAA B B | Adjusting Plate Camshaft Sprockets Chain Tensioner Chain Tensioner Bracket Chain Tensioner Spring Idler Sprocket Idler Sprocket Eccentric Shaft Intermediate Sprocket (20 Teeth) Intermediate Sprocket (28 Teeth) Intermediate Sprocket Shaft Mounting Brackets Oil Spray Bracket Timing Cover Timing Cover Gasket Timing Cover Oil Seal Vibration Damper Vibration Damper Bracket CARBURETTER Connecting Shaft Coupling Shaft Feed Pipe Flange Gasket Flexible Coupling Flexible Pipe Float Float Carburetter Gland Spring Gland Washers | 11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | |

| Description. | | | | | Page No. | Plate. | Description. | Page No. | Plate |
|--|--|--|------|---|---|--|--|--|-----------------|
| CARBURETTER (con | tinued) | | | | • | | GEARBOX ("S.H." SERIES)(continued) | • | |
| CARBORETTER (CON | tinuedy | | | | | | | | |
| Needle | ••• | ••• | ••• | ••• | 13 & 14A | D | Countershaft | | H |
| Needle and Seat | ••• | ••• | ••• | | 13 & 14A 13 & 14A | D D | Countershaft Gear-Unit Countershaft Needle Rollers | | H |
| Oil Damper Overflow Pipes | ··· | | ••• | ••• | i | D | Countershaft Needle Rollers Countershaft Thrust Washers | | H |
| Rear Carburetter | | | ••• | • ••• | 13 & 14A | Ď | Dipstick | | Ġ |
| Sealing Rings | ••• | | | | 13 & 14A | Ď | Drain Plug | | Ğ |
| Solenoid | | | ••• | | 13 & 14B | D | Extension | | 0000000 |
| Starting Needle | ••• | ••• | ••• | ••• | | D | Extension Bearing | | G |
| Starting Pipe | | ••• | ••• | ••• | 14 & 14C | D D | Front End Cover Front End Cover Oil Seal | | Ğ |
| Suction Chambers Thermostat Jet | ••• | ••• | ••• | ••• | 13 & 14A 14 & 14B | Ď. | Interlock Balls | | Ğ |
| Throttle Lever | ••• | ••• | ••• | ••• | 13 & 14A | Ď | Interlock Roller | | Ğ |
| Throttle Spindles | | | | ••• | 13 & 14A | Ď | Mainshaft | | Н |
| • | | | | | | | Mainshaft Bearings | | G |
| | | | | | | | Mainshaft Flange | | H |
| AIR CLEANERS | | | | | 14D14E | W | Mainshaft Gears | | H |
| | | | | | | | Mainshaft Needle Rollers Mainshaft Operating Sleeve | | H |
| | | | | | | | Mainshaft Synchro Shims | | п |
| ACCELERATOR CON | TDOLS | | | | 1516 | . Е | Mainshaft Synchro Sleeve | | Н |
| ACCELERATOR CON | INOLS | ••• | ••• | ••• | 1310 | _ | Mainshaft Synchro Springs | . 22 | H |
| Accelerator Pedal | ••• | ••• | ••• | ••• | 15 | Ε | Rear End Cover | | G |
| Accelerator Pedal F | | | ••• | ••• | 15 | E | Rear End Cover Oil Seal | | G |
| Accelerator Pedal P | | ••• | ••• | ••• | 15 | E | Reverse Gear | | H |
| Adjustable Bracket Control Rods | | ••• | ••• | ••• | 15 16 | E E | Reverse Slipper Reverse Spindle | - | H |
| Intermediate Bracke | ··· | ••• | ••• | ••• | 16 | É | Selectors | | Ġ |
| Intermediate Thrott | | | ••• | | 16 | Ē | Speedometer Driven Gear | | Ğ |
| Mounting Bracket | | | | ••• | -15 | E | Speedometer Driving Gear | | н |
| Scuttle Bracket | ••• | ••• | ••• | ••• | 15 | E | Striking Rods | | G |
| Socket | ••• | ••• | ••• | ••• | 16 | E | Top Cover | . 21 | G |
| | | | | | | | | | |
| CLUTCH AND CLUT | CH CC | NITO | 01 | | 17—19A | F | | | |
| CLUTCH AND CLUT | CH CC | HIK | OL. | ••• | 17—174 | г | GEARBOX ("J.H." SERIES) | . 23—25 | G & J |
| Adjusting Rod | ••• | ••• | ••• | ••• | 19A | F | Breather Plug | . 24 | G |
| Adjusting Rod Sprin | | ••• | ••• | ••• | 19A 17 & 17A | F F | Casing | | G |
| Anti-Rattle Spring | ••• | • • • | ••• | ••• | 1/ & 1/A | Г | | | _ |
| | | | | | | F | Change-Speed Forks | | G |
| Bearing Housing | ••• | ••• | | ••• | 19A | F | Change-Speed Lever | . 24 | G |
| Clutch Cover | | ••• | ••• | | | F | Change-Speed Lever Change-Speed Lever Bearing | . 24 . 24 | 999 |
| Clutch Cover Clutch Housing Clutch Housing Cov | | ••• | ••• | ••• | 19A 17 & 17A 17—18 18 | F F | Change-Speed Lever | . 24 . 24 . 24 | 9000- |
| Clutch Cover Clutch Housing Clutch Housing Cov Clutch Pedal | ver Plat | e | | | 19A 17 & 17A 17—18 18 19 | F F F | Change-Speed Lever | . 24 . 24 . 24 . 25 | 9000 |
| Clutch Cover Clutch Housing Clutch Housing Cov Clutch Pedal Clutch Shaft | ver Plat | e | | | 19A 17 & 17A 17—18 18 19 | F F F F | Change-Speed Lever | . 24 . 24 . 24 . 25 . 25 | 0000 |
| Clutch Cover Clutch Housing Clutch Housing Cov Clutch Pedal Clutch Shaft Clutch Shaft Lever | er Plat | e | | | 19A 17 & 17A 17—18 18 19 19 | F F F | Change-Speed Lever | . 24 . 24 . 25 . 25 . 25 | G J J |
| Clutch Cover Clutch Housing Clutch Housing Cov Clutch Pedal Clutch Shaft Clutch Shaft Lever Clutch Unit | er Plat | e | | | 19A 17 & 17A 17—18 18 19 | F F F F | Change-Speed Lever | . 24 . 24 . 24 . 25 . 25 . 25 . 25 | |
| Clutch Cover Clutch Housing Clutch Housing Cov Clutch Pedal Clutch Shaft Clutch Shaft Lever | er Plat | e | | | 19A 17 & 17A 17—18 18 19 19 19 | F F F F F | Change-Speed Lever | . 24 . 24 . 24 . 25 . 25 . 25 . 25 . 25 | G J J |
| Clutch Cover Clutch Housing Clutch Housing Cov Clutch Pedal Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter | er Plat | e | | | 19A 17 & 17A 17—18 18 19 19 19 17 & 17A 19 17 & 17A | F F F F F F F | Change-Speed Lever | . 24 . 24 . 24 . 25 . 25 . 25 . 25 . 25 | G J J |
| Clutch Cover Clutch Housing Counch Housing Counch Pedal Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork | ver Plat | e | | | 19A 17 & 17A 17—18 18 19 19 19 17 & 17A 19 17 & 17A 19 | F | Change-Speed Lever | . 24 24 25 . 25 . 25 . 25 . 25 . 25 . 25 . 25 | G J J |
| Clutch Cover Clutch Housing Council Fedal Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Operating Fork Operating Lever | ver Plat | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 17 & 17A 19 19 19 | | Change-Speed Lever | . 24 . 24 . 25 . 25 . 25 . 25 . 25 . 25 . 25 . 25 | 0 0 |
| Clutch Cover Clutch Housing Cov Clutch Housing Cov Clutch Pedal Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft | ver Plat | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 17 & 17A 19 19 19 19 | | Change-Speed Lever | . 24 . 24 . 25 . 25 . 25 . 25 . 25 . 25 . 23 . 25 . 25 . 25 . 25 . 25 . 25 | 0 0 |
| Clutch Cover Clutch Housing Council Fedal Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Operating Fork Operating Lever | ver Plat | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 17 & 17A 19 19 19 | | Change-Speed Lever | . 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 0000 |
| Clutch Cover Clutch Housing Cover Clutch Housing Cover Clutch Pedal Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Lever Operating Shaft Pedal Pad | ver Plat | e | | | 19A 17 & 17A 17—18 19 19 19 17 & 17A 19 19 19 19 19 19 | ******* | Change-Speed Lever | . 24 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 00000 |
| Clutch Cover Clutch Housing Cover Clutch Housing Cover Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing | rer Plat | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 17 & 17A 19 19 19 19A 17 & 17A | ****** | Change-Speed Lever | . 24 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Counch Housing Counch Pedal Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever | rer Plat | e | | ************************************** | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 19 19 19 19 19 19 19 19 19 | ******* | Change-Speed Lever | 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Counch Housing Counch Fedal Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring | | e | | ************************************** | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 17 & 17A 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A | ההההה ההההההההההה | Change-Speed Lever Bearing | . 24 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Counch Housing Counch Pedal Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Lever Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Sealing Ring | | e | | *** | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A 17 & 17A | | Change-Speed Lever Bearing | . 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Counch Housing Counch Fedal Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring | | e | | ************************************** | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 17 & 17A 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A | ****** | Change-Speed Lever Bearing | . 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Cover Clutch Housing Cover Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Operating Fork Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Sealing Ring Spherical Bearings | | e | | *** | 19A 17 & 17A 18 19 19 17 & 17A 19 17 & 17A 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A 17 & 17A 19 & 19A 19 & 19A | ******* *********** | Change-Speed Lever Bearing Change-Speed Lever Bearing Change-Speed Lever Knob Constant Pinion Constant Pinion Oil Thrower Constant Pinion Bearing (Cage) Constant Pinion Shaft Constant Pinion Shaft Constant Pinion Shaft Constant Wheel Countershaft Count | . 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 00000 |
| Clutch Cover Clutch Housing Cover Housing Cover Clutch Housing Cover Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Spherical Bearings Support Bracket | rer Plat | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A 17 & 17A 19 A 19 A | ****** | Change-Speed Lever Bearing | . 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Cover Housing Cover Clutch Housing Cover Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Spherical Bearings Support Bracket | rer Plat | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A 17 & 17A 19 A 19 A | ****** | Change-Speed Lever Bearing Change-Speed Lever Bearing Change-Speed Lever Knob Constant Pinion Constant Pinion Oil Thrower Constant Pinion Shaft Constant Pinion Shaft Constant Pinion Shaft Constant Pinion Shaft Bearing Constant Wheel Countershaft Counte | . 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Cover Housing Cover Clutch Housing Cover Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Spherical Bearings Support Bracket | | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A 17 & 17A 19 A 19 A | ****** | Change-Speed Lever | . 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Cover Clutch Housing Cover Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Lever Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Sealing Ring Spherical Bearings Support Bracket Thrust Springs | | •••••••••••••••••••••••••••••••••••••• | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A 19 & 19A 19 & 19A 11 & 17A 19 & 19A 11 & 17A 11 & 17A 12 & 17A 13 & 17A 14 & 17A 15 & 17A 17 & 17A 18 & 17A 19 & 19 & 19 A 18 & 17 A 17 & 17 A | C ************************************ | Change-Speed Lever Bearing Change-Speed Lever Bearing Change-Speed Lever Knob | . 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Counch Housing Counch Housing Counch Fedal Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Operating Fork Operating Lever Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Sealing Ring Spherical Bearings Support Bracket Thrust Springs GEARBOX ("S.H." SE Breather Plug | | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 17 & 17A 19 19 19 A 17 & 17A 17 & 17A 17 & 17A 17 & 17A 17 & 17A 18 17 & 17A 20—22 21 | C & C | Change-Speed Lever | . 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Counch Housing Counch Housing Council Clutch Shaft Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Operating Fork Operating Lever Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Spherical Bearings Support Bracket Thrust Springs GEARBOX ("S.H." SE Breather Plug Casing | // Plat // | e | | 200 - 100 - | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 17 & 17A 19 19 A 19 A 17 & 17A 17 & 17A 17 & 17A 19 A 19 A 10 A | # # # # # # # # # # # # # # # # # # # | Change-Speed Lever Change-Speed Lever Bearing Change-Speed Lever Knob Change-Speed Lever Knob Constant Pinion Constant Pinion Oil Thrower Constant Pinion Shaft Constant Wheel Countershaft Countershaft Countershaft Countershaft Countershaft Countershaft Countershaft Needle Rollers Countershaft Needle Rollers Countershaft Co | . 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 00 |
| Clutch Cover Clutch Housing Cover the Housing Cover Clutch Housing Cover Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Bearing Release Lever Return Spring Sealing Ring Spherical Bearings Support Bracket Thrust Springs GEARBOX ("S.H." SE Breather Plug Casing Change-Speed Forks | // Plat // | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 17 & 17A 19 19 19 A 17 & 17A 17 & 17A 17 & 17A 17 & 17A 17 & 17A 18 17 & 17A 20—22 21 | | Change-Speed Lever | 24 24 24 25 25 25 25 25 25 25 25 25 25 24 23 23 23 23 23 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 000000 |
| Clutch Cover Clutch Housing Counch Housing Counch Housing Council Clutch Shaft Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Operating Fork Operating Lever Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Spherical Bearings Support Bracket Thrust Springs GEARBOX ("S.H." SE Breather Plug Casing | rer Plat | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 19 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A 17 & 17A 19 19 19 A 17 & 17A 17 & 17A 19 A 10 A 11 A 12 A 13 A 14 A 15 A 16 A 17 A 17 A 18 A 19 A 19 A 19 A 10 A 11 A 12 A 13 A 14 A 15 A 16 A 17 A 17 A 18 A 19 A 19 A 10 A 11 A 12 A 13 A 14 A 15 A 16 A 17 A 17 A 17 A 18 A 19 A 19 A 19 A 19 A 19 A 10 | # # # # # # # # # # # # # # # # # # # | Change-Speed Lever Bearing Change-Speed Lever Bearing Change-Speed Lever Knob Constant Pinion Constant Pinion Oil Thrower Constant Pinion Shaft Constant Pinion Shaft Constant Pinion Shaft Constant Pinion Shaft Bearing Constant Wheel Countershaft Gears Countershaft Gears Countershaft Thrust Washers Dipstick Drain Plug Extension Extension Bearing Front End Cover Front End Cover Front End Cover Oil Seal Interlock Balls Interlock Roller Mainshaft Bearings Mainshaft Gears Mainshaft Synchro Shims Mainshaft Synchro Sleeve Mainshaft Synchro Springs Rear End Cover Rear End Cover Rear End Cover Rear End Cover Mainshaft Synchro Springs Rear End Cover | 24 24 24 25 25 25 25 25 25 25 25 25 25 24 23 23 23 23 23 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 00000000000-00 |
| Clutch Cover Clutch Housing Clutch Housing Cov Clutch Shaft Clutch Shaft Clutch Shaft Clutch Shaft Operating Excluder Driven Plate Operating Fork Operating Lever Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Spherical Bearings Support Bracket Thrust Springs GEARBOX ("S.H." SE Breather Plug Casing Change-Speed Lever Change-Speed Lever Change-Speed Lever Change-Speed Lever | ver Plat | e | | | 19A 17 & 17A 18 19 19 17 & 17A 19 17 & 17A 19 19 19 A 19 A 17 & 17A 17 & 17A 17 & 17A 19 A 17 & 17A 19 A 17 & 17A 19 A 19 A 10 A 10 A 11 A 12 A 13 A 14 A 15 A 16 A 17 A 17 A 18 A 19 A 19 A 10 A 10 A 11 A 12 A 13 A 14 A 15 A 16 A 17 A 17 A 18 A 19 A 19 A 10 A | # # # # # # # # # # # # # # # # # # # | Change-Speed Lever Bearing Change-Speed Lever Bearing Change-Speed Lever Knob Constant Pinion | 24 24 24 25 25 25 25 25 25 25 25 25 25 24 23 23 23 23 23 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 00000000000-000 |
| Clutch Cover Clutch Housing Cover Clutch Housing Cover Clutch Shaft Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Spherical Bearings Support Bracket Thrust Springs GEARBOX ("S.H." SE Breather Plug Casing Change-Speed Lever Change-Speed Lever Change-Speed Lever Change-Speed Lever Change-Speed Lever Constant Pinion | rer Plate | | | | 19A 17 & 17A 18 19 19 19 17 & 17A 19 19 19 19 19 19 19A 17 & 17A 17 & 17A 19A 19 & 19A 17 & 17A 20—22 21 20 21 21 22 | $oldsymbol{H}$ | Change-Speed Lever Bearing Change-Speed Lever Bearing Change-Speed Lever Knob Constant Pinion Constant Pinion Oil Thrower Constant Pinion Bearing (Cage) Constant Pinion Shaft Constant Pinion Shaft Constant Pinion Shaft Constant Wheel Countershaft Countershaft Countershaft Rearing Countershaft Needle Rollers Countershaft Thrust Washers Dipstick Drain Plug Extension Extension Bearing Front End Cover Oil Seal Interlock Roller Mainshaft Bearings Mainshaft Synchro Shims Mainshaft Synchro Shims Mainshaft Synchro Sheve Mainshaft Synchro Sheve Mainshaft Synchro Sheve Mainshaft Synchro Springs Rear End Cover Rear End Cover Oil Seal Reverse Gear Reverse Spindle | 24 24 24 25 25 25 25 25 25 25 25 25 25 24 23 23 23 23 23 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 00000000000-000 |
| Clutch Cover Clutch Housing Cover Housing Cover Housing Cover Clutch Shaft Clutch Shaft Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Bearing Release Bearing Spherical Bearingss Support Bracket Thrust Springs GEARBOX ("S.H." SE Breather Plug Casing Change-Speed Forks Change-Speed Lever Change-Speed Lever Change-Speed Lever Constant Pinion Constant Pinion Oil | rer Plat | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 17 & 17A 19 19 19 19 19 19 19 19 19 19 19 19 19 | # | Change-Speed Lever Bearing Change-Speed Lever Bearing Change-Speed Lever Knob Constant Pinion Constant Pinion Oil Thrower Constant Pinion Bearing (Cage) Constant Pinion Shaft Constant Pinion Shaft Constant Pinion Shaft Bearing Constant Wheel Countershaft Gears Countershaft Gears Countershaft Thrust Washers Dipstick Drain Plug Extension Extension Bearing Front End Cover Front End Cover Front End Cover Oil Seal Interlock Balls Interlock Roller Mainshaft Bearings Mainshaft Gears Mainshaft Gears Mainshaft Synchro Shims Mainshaft Synchro Shims Mainshaft Synchro Springs Rear End Cover Rear End Cover Rear End Cover Rear End Cover Oil Seal Reverse Gear Reverse Spindle Selectors | 24 24 24 25 25 25 25 25 25 25 25 25 25 24 23 23 23 23 23 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 00000000000-000 |
| Clutch Cover Clutch Housing Cover Housing Cover Housing Cover Clutch Shaft Lever Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Operating Fork Operating Lever Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Spherical Bearings Support Bracket Thrust Springs GEARBOX ("S.H." SE Breather Plug Casing Change-Speed Lever Change-Speed Lever Change-Speed Lever Change-Speed Lever Constant Pinion Oil Constant Pinion Bes | ver Plat | e | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A 18 17 & 17A 17 & 17A 19 19 20 20 21 21 22 22 22 22 | # # # # # # # # # # # # # # # # # # # | Change-Speed Lever Bearing Change-Speed Lever Bearing Change-Speed Lever Knob Constant Pinion Constant Pinion Oil Thrower Constant Pinion Bearing (Cage) Constant Pinion Shaft Constant Pinion Shaft Constant Pinion Shaft Bearing Constant Wheel Countershaft Gears Countershaft Gears Countershaft Thrust Washers Dipstick Drain Plug Extension Extension Bearing Front End Cover Front End Cover Oil Seal Interlock Balls Interlock Roller Mainshaft Bearings Mainshaft Gears Mainshaft Gears Mainshaft Gears Mainshaft Gears Mainshaft Synchro Shims Mainshaft Synchro Shims Mainshaft Synchro Springs Rear End Cover Rear End Cover Reverse Spindle Selectors Speedometer Driven Gear | 24 24 24 25 25 25 25 25 25 25 25 25 25 24 23 23 23 23 23 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 00000000000-000 |
| Clutch Cover Clutch Housing Cover the Housing Cover Housing Cover Clutch Shaft Clutch Shaft Lever Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Gaiter Operating Fork Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Bearing Release Lever Return Spring Sealing Ring Spherical Bearings Support Bracket Thrust Springs GEARBOX ("S.H." SE Breather Plug Casing Change-Speed Lever Change-Speed Lever Change-Speed Lever Change-Speed Lever Constant Pinion Oil Constant Pinion Bea | rer Plat rer Plat te Bearing Knob Throw | ee | | | 19A 17 & 17A 18 19 19 19 17 & 17A 19 19 19 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A 19 19 19 & 19A 17 & 17A 17 & 17A 19 20 20 21 21 22 22 22 22 22 | # # # # # # # # # # # # # # # # # # # | Change-Speed Lever Bearing Change-Speed Lever Bearing Change-Speed Lever Knob Constant Pinion | 24 24 24 25 25 25 25 25 25 25 25 25 25 24 23 23 23 23 23 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 00000000000-000 |
| Clutch Cover Clutch Housing Cover Housing Cover Housing Cover Clutch Shaft Lever Clutch Shaft Lever Clutch Unit Draught Excluder Driven Plate Operating Fork Operating Lever Operating Shaft Pedal Pad Pedal Stem and Pla Pressure Plate Release Bearing Release Lever Return Spring Spherical Bearings Support Bracket Thrust Springs GEARBOX ("S.H." SE Breather Plug Casing Change-Speed Lever Change-Speed Lever Change-Speed Lever Change-Speed Lever Constant Pinion Oil Constant Pinion Bes | rer Plate | ee | | | 19A 17 & 17A 17—18 18 19 19 17 & 17A 19 19 19 19 19 19A 17 & 17A 17 & 17A 17 & 17A 18 17 & 17A 17 & 17A 19 19 20 20 21 21 22 22 22 22 | # # # # # # # # # # # # # # # # # # # | Change-Speed Lever Bearing Change-Speed Lever Bearing Change-Speed Lever Knob Constant Pinion Constant Pinion Oil Thrower Constant Pinion Bearing (Cage) Constant Pinion Shaft Constant Pinion Shaft Constant Pinion Shaft Bearing Constant Wheel Countershaft Gears Countershaft Gears Countershaft Thrust Washers Dipstick Drain Plug Extension Extension Bearing Front End Cover Front End Cover Oil Seal Interlock Balls Interlock Roller Mainshaft Bearings Mainshaft Gears Mainshaft Gears Mainshaft Gears Mainshaft Gears Mainshaft Synchro Shims Mainshaft Synchro Shims Mainshaft Synchro Springs Rear End Cover Rear End Cover Reverse Spindle Selectors Speedometer Driven Gear | 24 24 24 25 25 25 25 25 25 25 25 25 25 24 23 23 23 24 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | 00000000000-00 |

| Description. | Page No. | Plate. | Description. | Page No. | Plate. |
|--|------------|--------|--|---------------------------|-----------|
| GEARBOX (" J.L." SERIES) | 25A25C | | REAR AXLE (SALISBURY) | 28C—28G | XL |
| Breather Plug Casing | 25B 25A | | | 28D & 28G | XL |
| Change-Speed Forks | 25B | | Crown Wheel and Lock Strap | 28C & 28E 28C & 28E | XL XL |
| Change-Speed Lever | 25B | | | 28C & 28E | ΧĹ |
| Change-Speed Lever Bearing | 25B | | Differential Bearing (Diff. Case) | 28C & 28E | XL |
| Change-Speed Lever Knob Constant Pinion | 25B | | Differential Bearing (Inner end of Differential Bearing (Outer end of | | Χľ |
| Constant Pinion Bearing (Cage) | 25C | | | 28C & 28E | χĹ |
| Constant Pinion Oil Thrower | 25C | | Differential Bolts Lock Plates . | 28C & 28E | ΧĻ |
| Constant Pinion Shaft Constant Pinion Shaft Bearing | 25C 25A | | | 28C & 28F | ΧL |
| Constant Pinion Shaft Bearing Constant Wheel | 25A | | Differential Unit Pinion Mate Gea Differential Unit Side Gears | rs 28C & 28F 28C & 28F | XL XL |
| Countershaft | 25C | | | 28D & 28G | ΧĽ |
| Countershaft Gears | 25C | | Hub Bearings | 28D & 28F | XL |
| Countershaft Needle Rollers Countershaft Thrust Washers | 25C | | | 28D & 28F | ΧĽ |
| Dipstick | 25B | | | 28D & 28F 28C & 28E | XL XL |
| Drain Plug | 25A | | Oil Filler Plug | | ΧĹ |
| Front End Cover | 25A | | Pinion Companion Flange | | XL |
| Front End Cover Oil Seal Interlock Bails | 25A 25A | | | 28D & 28E | XL |
| Interlock Roller | 25A | | Rear Axle Casing | | ΧĽ |
| Mainshaft | 25C | | Rear Axle Shafts Oil Seal | 28D & 28F | XL |
| Mainshaft Bearings Mainshaft Flange | 25A 25B | | Rear Axle Shafts Spacer | 28C & 28E | XL |
| Mainshaft Flange Mainshaft Gears | 25B | | | | |
| Mainshaft Needle Rollers | 25C | | FRONT SUSPENSION | 29—31A | M-N-P |
| Mainshaft Operating Sleeve | 25C | | | 21 | • P |
| Mainshaft Synchro Shims Mainshaft Synchro Sleeve | 25C | | | 31 31A | P |
| Mainshaft Synchro Sleeve Mainshaft Synchro Springs | 25C | | | 31 | P |
| Rear End Cover | 25A | | Anti-Roll Bar Buffer | 31A | P |
| Rear End Cover Oil Seal | 25A | | | 30 | N |
| Reverse Gear Reverse Slipper | 25C | | | 30 31 | N N |
| Reverse Slipper Reverse Spindle | 25C | | | 31 | ., |
| Selectors | 25A | | Front Shock Absorbers | 31 | N |
| Speedometer Driven Gear | 25A | | | 31 | N |
| Speedometer Driving Gear Striking Rods | 25C 25A | | | 31 29 | M |
| Top Cover | 25A | | | 29 | M |
| | | | | 31 | N |
| | | | 11. | 30 29 | N M |
| PROPELLER SHAFT | 26 | K | | 30 | N |
| Journal | 26 | K | Stub Axle Carrier | 30 | N |
| Needle Bearings Sliding End | 26 26 | K | Stub Axle Shaft Stub Axle Shaft Grease Retainer | 31 31 | N N |
| Sliding End | 26 | | | 31 31 | Ñ |
| | | | Torsion Bar | 31A | Р |
| REAR AXLE (E.N.V.) | 27—28B | L | | 31A | P |
| Abutment Bracket (Handbrake Cable) | | | | 31A 31A | P P |
| Brake Drums | 28B | | | 31A | М |
| Crown Wheel and Pinion | 28 | Ļ | | 29 | М |
| Differential Adjusting Nut Differential Adjusting Shims | 28 28 | L L | | | |
| Differential Adjusting Snims Differential Bearing (Diff. Box) | 28 | Ĺ | ROAD WHEELS | 32 | |
| Differential Bearing (Pinion Head) | 28 | L | Date to Miles Dies | 32 | |
| Differential Bearing (Pinion Shank) | 28 28 | Ł L | Dolor NA/-I-bas | 32 | |
| Differential Bolts Differential Bolt Lock Plates | 28 | Ĺ | Inner Tube | 32 | |
| Differential Case | 28 | L | | 32 | |
| Differential Unit | 28—28A | Ļ | Wheel Disc | 32 | |
| Differential Unit Pinion Mate Gears Differential Unit Side Gears | 28 28 | L L | | | |
| Dipstick | 27 | L | BRAKES for Chassis No. 660001 to 6 | | Q |
| Hub Bearings | 28A | Ļ | 670001 to 6 669001 to 6 | | |
| Hub Bearing Housing Hub Bearing Housing Oil Seal | 28A 28A | L L | 679001 to 6 | | |
| Hub Bearing Housing Oil Seal Hub Bearing Housing Shims | 28A | i | 44. 6 | 33 | 0 |
| Oil Filler Plug | 27 | L, | Brake Drums | 34B | Q |
| Pinion Companion Flange | 28D | L | | 33 | Q |
| Pinion Housing Pinion Housing Oil Seal | 27 28 | L L | Frank Darley Channel | 33 34 | 90 |
| Rear Axle Assembly | 27 | | e b t ct c c | 33 | ŏ |
| Rear Axle Casing | 27 | Ļ | Front Wheel-Cylinders | 33 | Q |
| Rear Axle Shafts Rear Axle Shaft Oil Seal | 28A 28A | L L | | 33 33 | 000000000 |
| Rear Axle Shaft Oil Seal | 28A | L | Front Wheel-Cylinder Gaskets | 33 | Ų |

| Description. | | | Page No. | Plate. | Description. | | Page No. | Plate |
|--|------------|------------------------|----------|----------|---|---------|---------------------|----------------|
| BRAKES for Chassis No | . 660001 1 | to 660979 | | | BRAKE CONTROLS | | | |
| | 670001 | to 672048 | | | for Chassis No. 660980 and subs | | 19A39D | AR |
| | | to 669002 | | | 672049 and subs 669003 and subs | | | |
| | | to 679621 | | | 679622 and subs | | | |
| | | continued) | | _ | Bleeder Tube | | 39D | |
| Front Wheel-Cylinder | | ••• | 33 | Q | Bleeder Wrench | ••• | 39D | |
| Front Wheel-Cylinder Rear Brake Assembly | | | 3434B | 9 | Brake Pedal | | 39A | AR |
| Rear Brake Backplate | | | 34—34B | 0000000 | Brake Pedal Bearing | ••• | 39A | AR |
| Rear Brake Shoes | | ••• | 34A34B | õ | Brake Pedal Draught Excluder | ••• | 39A 39A | AR |
| Rear Brake Shoe Spri | | | 34—34B | Q | Brake Pedal Pad Brake Pedal Return Spring | ••• | 39A | AR AR |
| Rear Wheel-Cylinders | | • • • • | 34A | Q | Brake Pedal Shaft | | 39A | |
| Rear Wheel-Cylinder | | | 34A | Q | Brake Pedal Stem and Plate | | 39A | AR |
| Rear Wheel-Cylinder Rear Wheel-Cylinder | | | 34A | ŏ | Brake Pedal Support Bracket | | 39A | AR |
| Real Wileel-Cylinder | 1 1300113 | ••• | 547 | ~ | Hydraulic Pipes (R.H. Drive cars) | | 39B—39C | AR |
| | | | | | Hydraulic Pipes (L.H. Drive cars) | ••• | 39C 39A | AR AR |
| DDAWEG C . Charle No. | //0000 | | 246 245 | 40 | Master Cylinder Master Cylinder Adapters | • • • • | 39A | AR |
| BRAKES for Chassis No | | and subs. and subs. | 34C—34E | AQ | Master Cylinder Adapter Seals | ••• | 39A | AR |
| | | and subs. | | | Master Cylinder Banjos | | 39B | AR |
| | | and subs. | | | Master Cylinder Boot | ••• | 39A | AR |
| Brake Drums | | | 34E | AQ | Master Cylinder Gaskets | ••• | 39B | AR |
| Front Brake Assembly | <i>,</i> | ••• | 34C | AQ | Master Cylinder Pistons Master Cylinder Piston Seals | ••• | 39A 39A | AR AR |
| Front Brake Backplate | ė | | 34C | AQ | Master Cylinder Piston Seals | | 39B | AR |
| Front Brake Bridge P | | | 34C | AQ | Matser Cylinder Springs | | 39A | AR |
| Front Brake Shoes Front Brake Shoe Spr | | | 34D | AQ AQ | Master Cylinder Stop Master Cylinder Valve | ••• | 39 A | AR |
| Front Wheel-Cylinder | | ••• | 34C | ÃQ | Master Cylinder Valve | ••• | 39A | AR |
| Front Wheel-Cylinder | | | 34C | ÃQ | Master Cylinder Valve Seals | ••• | 39A | AR |
| Front Wheel-Cylinder | | | 34C | AQ | Supply Tank | ••• | 39B | AR |
| Front Wheel-Cylinder | | | 34C | AQ | | | | |
| Rear Brake Adjuster | ••• | | 34D—34E | AQ | | | | _ |
| Rear Brake Assembly Rear Brake Backplate | | | 34D—34E | AQ AQ | STEERING | ••• | 4041A | S |
| | | ••• | 34E | ÂQ | Connecting Tubes | ••• | 4141A | S |
| Rear Brake Shoe Spri | | | 34D-34E | AQ | Connecting Tube Ball Joints | ••• | . 41. | S |
| Rear Wheel-Cylinders | | | 34D—34E | AQ | Connecting Tube Seals | ••• | 41—41A | . S |
| Rear Wheel-Cylinder | | | 34D—34E | AQ | Drop Arm End Plate Oil Seal | ••• | 40 40 | S S |
| Rear Wheel-Cylinder | | | 34D—34E | AQ AQ | Idle Lever | ••• | 41 | S |
| Rear Wheel-Cylinder | Seai | ••• | 340—346 | AQ | Idle Lever Filler Plug | | 41 | Š |
| | | | | | Idle Lever Shaft | ••• | 41 | ************** |
| | | | | | Inner Column | ••• | 40 | S |
| BRAKE CONTROLS for Chassis No. | 440001 + | . 440070 | 35—39 | R | Inner Column Main Nut Inner Column Main Nut Balls | ••• | 40 40 | ٥. |
| for Chassis 140. | 670001 to | | 3337 | K | Outer Column Main Nut Balls | ••• | 40 | Š |
| | 669001 to | | | | Rocker-shaft | ••• | 40 | Š |
| | 679001 to | 679621 | | | Rocker-shaft Oil Seal | ••• | 40 | S |
| Bleeder Tube | | ••• | 37 | R | Steering Box | ••• | 40 | S |
| | ··· ··· | ••• | 37 | R | Steering Box Balls | ••• | 40 | S |
| | ••• | ••• | 35 | R | Steering Column Control Steering Unit | ••• | 41A 40 | 2 |
| Brake Pedal Bearing Brake Pedal Draught | | ••• | 35 | R R | Steering Unit Steering Wheel | ••• | 41A | Š |
| | | ••• | 35 | R | Track Rod | ••• | 41 | S |
| Brake Pedal Return S | | | 35 | R | Track Rod Ends | ••• | 41 | S |
| | | *** | 35 | R | Track Rod End Seals | ••• | 41 | S S |
| Brake Pedal Stem and | | ••• | 35 | R R | Trunnion Bracket | ••• | 40 | 3 |
| Brake Pedal Support Compensator | | ••• | 30 | R | | | | |
| | ••• ••• | ••• | 39 | Ŕ | CHACCIC | | 42—44C | т |
| Compensator Rod Spi | | ••• | 38 | Ŕ | CHASSIS | ••• | | |
| Handbrake Cable | | ••• | 39 | R | By-Pass Water Hose | ••• | 44C | Ţ |
| Handbrake Cable Bra | | ••• | 39 | R | Chassis Frame | ••• | 42 | T T |
| Handbrake Lever Handbrake Lever Rate | chat | ••• | 38 | R R | Exhaust System Jack Socket Plug | ••• | 44—44A 42 | ή |
| Handbrake Lever Shall | | ••• | 38 | R | Petrol Pipes | ••• | 44B | Ť |
| Hydraulic Pipes (R.H. | | | 36—37 | Ŕ | Petrol Tank | ••• | 44A | Т |
| Hydraulic Pipes (L.H. | | | 37 | R | Petrol Tank Element | ••• | 44A | Ţ |
| Master Cylinder | | ••• | 35 | R | Radiator Block | ••• | 44B | Ţ |
| Master Cylinder Banjo | | ••• | 35 | R | Radiator Drain Tap | ••• | 44B | T T |
| Master Cylinder Cups | | ••• | 35 | R R | Radiator Filler Cap Radiator Thermostat | ••• | 44B 44C | ť |
| Master Cylinder Filler Master Cylinder Gask | | ••• | 36 | Ŕ | Radiator Tie Rods | | 44B | Ť |
| Master Cylinder Pisto | | ••• | 35 | Ř | Radiator Water Hoses | ••• | 44C | Ť |
| Master Cylinder Shiel | d | ••• | 36 | R | Rebound Buffers | ••• | 44 | Т |
| Master Cylinder Sprin | g | ••• | 35 | R | Rear Axie Rebound Strap | ••• | 43 | Ţ |
| Master Cylinder Valve | | ••• | 35 | R | Rear Road Spring | ••• | 43 43 | T T |
| Operating Lever Supply Tank | ••• ••• | ••• | 38 | R R | Rear Road Spring Bush Rear Road Spring Gaiters | ••• | 43 | τ̈́ |
| Juppiy Talik | ••• | ••• | 36 | | aking editals | | | • |

| Description. | Page No. | Plate. | Description. | Page No. | Plate. |
|---|----------------------|--------|---|------------------|--------|
| CHASSIS—(continued) | | | BODY CHASSIS NO. 660001 TO 660058 | • | |
| Rear Road Spring Shackle | 42 | т | 670001 TO 670184 | | |
| Rear Road Spring "U" Bolt | 42 | ÷ | —(continued) | | |
| Shock Absorbers | 43 | Ť | Rear Wing Supports | 54 | |
| Spare Wheel Tray | 44C | T | Seats | | |
| | | | Seat Cushions | | |
| | | | Scuttle Casings | 46 60 | |
| BODY CHASSIS NO. 660001 TO 660058 | 4561 | | Side Curtains Fixing Knobs | 61 | |
| 670001 TO 670184 | | | Side Curtains Fixing Rods | | |
| Backlight | 60 | | Starting Handle Bracket | 57 | |
| Battery Container | 48 | | Toggie Clamps Tonneau Cover | 60 60 | |
| Battery Cover | 48 | | Windscreen Assembly | 40 | |
| Body Mounting | 4516 | | Windscreen Centre Pillar | 48 | |
| Body Shell Bonnet | 45 55 | | Windscreen Side Pillars | 49 | |
| Bonnet Badge | 56 | | | | |
| Bonnet Buffers | 56 | | | | |
| Bonnet Catch | 55 | | BODYCHASSIS NO. 660059 AND SUBS | 6279B | U |
| Bonnet Catch Hook and Striker | 56 | | 670185 AND SUBS | | U |
| Bonnet Control Wire Bonnet Hinges | 56 55 | | | | ., |
| Bonnet Prop | 55 | | Backlight Battery Container | 79A 65 | U |
| Carpets | 47 | | Battery Cover | 65 | |
| Clutch/Gearbox Cover | 47 | | Body Mounting | 62 | |
| Commission Number Plate Cushions | 58 | | Body Shell | 62 | U |
| Doors | 59 4 9 | | Bonnet | 73 | Ü |
| Door Buffers | 50—51 | | Bonnet Badge | 75 74 | U |
| Door Casings | 51 | | Bonnet Catch | 74 | ŭ |
| Door Hinges | 51 | | Bonnet Catch Hook and Striker | - : | ŭ |
| Door Locks | 4950 | | Bonnet Catch Control Wire | 74 | U |
| Door Striker | 51 50—51 | | Bonnet Hinge | | Ü |
| Facia Board | 46 | | Bonnet Prop | 73 73 | IJ |
| Felts | 47 | | Car Heater Assembly | 63A | O |
| Floorboards | 47 | | Car Heater Air Ducts | 63B | |
| Front Bumper | 56 | | Car Heater Air Duct Brackets | 63C | |
| Front Bumper Spring Bars Front Bumper Support Struts | 56 57 | | Car Heater Air Duct Hoses | 63B | |
| Front End Assembly | 54 | | Car Heater Boxes Car Heater Brackets | 63B 63C | |
| Front Number Plate | 58 | | Car Heater Channels | 63C | |
| Front Wings | 54 | | Car Heater Demister | 63B | |
| Front Wing Stoneguards Gauntlets | 54 | | Car Heater Demister Escutcheon | 63C | |
| Gauntlets Grab Rail | 48 58 | | Car Heater Hoses | 63A | |
| Hood Cloth | 60 | | Car Heater Hose Banjos | 63A 63A | |
| Hood Sticks | 59 | | Car Heater Return Pipes | 63B | |
| Instrument Panel | 46 | | Car Heater Rheostat Cables | 63B | |
| Interior Mirror Interior Trimming | 49 58 | | Car Heater Rheostat Switch | 63B | |
| Licence Holder | 58 | | Car Heater Sealing Rubbers Car Heater Tie Plate | 63A 63B | |
| Luggage Compartment | 5152 | | Car Heater Valve | 63A | |
| Luggage Compartment Carpet | 52 | | Car Heater Valve Knob | 63A | |
| Luggage Compartment Floor | 51 | | Carpets | 64 | |
| Luggage Compartment Lid Luggage Compartment Lid Casing | 52 52 | | Clutch/Gearbox Cover Commission Number Plate | 65 | |
| Luggage Compartment Lid Handle | 52 | | Door | 76 67 | U |
| Luggage Compartment Lid Hinges | 53 | | Door Buffer | 69 | ŭ |
| Luggage Compartment Lid Lock | 52 | | Door Casings | 69 | Ŭ |
| Luggage Compartment Lid Prop Petrol Filler Box | 53 53 | | Door Hinges | 69 | ม |
| Petrol Filler Cap | 53 | | Door Hinge Pivot Pin Door Locks | 69 67 | U |
| Petrol Filler Door | 53 | | Door Lock Anchor Bracket | 68 | บั |
| Petrol Filler Door Lock | 53 | | Door Lock Cover Plate | 6769 | ŭ |
| Pin Bead | 60 | | Door Lock Link | 68 | u |
| Propeller Shaft Tunnel Radiator Grille | 47 56 | | Door Lock Safety Catch | 68 | Ü |
| Rear Number Plate | 58 | | Door Lock Striker Door Lock Tension Lever | 69 68 | U |
| Rear Over-Riders | 57 | | Floorboards | 64 | ŭ |
| Rear Over-Riders Spring Bars | 57 | | Front Bumper | 75 | ŭ |
| Rear Over-Riders Support Brackets | 57 | | Front Bumper Extension | 75 | Ü |
| Rear Over-Rider Tie Brackets Rear Quarter Casings | 57 59 | | Front Bumper Spring Bars | 75 | Ü |
| Rear Wings | 58 5 4 | | Front Bumper Support Member Front Bumper Support Strut | 75 75 | Ü |
| Rear Wing Cover | 54 | | Front Number Plate | 75 7 6 | J |
| Rear Wing Cover Escutcheons | 55 | | Front Wing | 71A | U |
| Rear Wing Cover Locks | 54 | | Front Wing Steady | 72 | - |
| Rear Wing Stoneguards | 5 5 | | Front Wing Valance | 71A—71B | U |

| Description | | Page No. | Plate. | Description. | Page No. | Plate. |
|---|---|----------------------|---------|---|-----------------|---------|
| Description. | _ | 1 age 140. | i lace. | | rage ito. | 1 1010. |
| BODY—CHASSIS NO. 660059 AND SUB 670185 AND SUB | | | | ELECTRICAL EQUIPMENT—(continued) | 88 | |
| —(continued | | | | Chassis Harness Cigar Lighter | 82—82A | ٧ |
| Front Wing Ventilators | | 71B | | Cigar Lighter Element | | v |
| Front Wing Ventilator Adjusting Plate | | 71B | | Control Box | 00 | v |
| Front Wing Ventilator Doors Front Wing Ventilator Gauze | | 71B 71B | | Dipper Switch | 85 | Ÿ |
| Front Wing Ventilator Hinges | | 71B | | Distributor | 81 | |
| Front Wing Ventilator Seals | ••• | 71B | | Distributor Bearings Distributor Brush and Spring | 81 81 | |
| Gauntlets Grab Rail | ••• | 6 4 77 | U | Distributor Condenser | 81 | |
| Headlamp Container | | 72 | ŭ | Distributor Contacts | 81 | |
| Hood Cloth | ••• | 79 | | Distributor Cover | 81 81 | |
| Hood Sticks Hood Stick Retainers | ••• | 78—79 79 | U | Distributor Rotor Arm Distributor Vacuum Unit | 81 | |
| Hood Stick Retainers Hood Stick Toggle Clamps | ••• | 79 | | Dynamo | 80 | ٧ |
| Instrument Panel | ••• | 63 | | Dynamo Armature | 80 80 | |
| Interior Mirror | ••• | 66 77 | U | Dynamo Bearings Dynamo Brushes | 80 | |
| Interior Trimming Licence Holder | ••• | 77 | | Dynamo Field-Coil | 80 | |
| Luggage Compartment | ••• | 69 | U | Dynamo Pulley | 80 89 | |
| Luggage Compartment Floor | ••• | 69 69 | U U | Earth-Leads Fuse Box | 00 | ٧ |
| Luggage Compartment Floorboards Luggage Compartment Lid | • | 70 | Ü | Grommets | 90A | • |
| Luggage Compartment Lid Casing | ••• | 70 | Ū | Headlamps | | V |
| Luggage Compartment Lid Handle | ••• | 70 | U U | Headlamp Adapters Headlamp Bulbs | 83—84 83—84 | v |
| Luggage Compartment Lid Hinges Luggage Compartment Lid Lock | ••• | 71 70 | Ü | Headlamp Dipper Switch | 84 | V |
| Luggage Compartment Lid Prop | | 71 | Ū | Headlamp Reflector (with Glass) | 0.3 | V |
| Petrol Filler Box | ••• | 71 | U | Headlamp Rims Horns | | v |
| Petrol Filler Cap Petrol Filler Door | ••• | 71 71A | Ü | Horn Contacts | 86 | • |
| Petrol Filler Door Petrol Filler Hinge | ••• | 71A | Ū | Horn Relay Box | | V |
| Petrol Filler Lock | ••• | 71A | Ų | Horn-Push | 86 86 | V |
| Petrol Filler Striker Pin Bead | ••• | 71A 79A | U | Ignition Coil | 81 | Ý |
| Propeller Shaft Tunnel | ••• | 65 | U | Ignition Switch | | V |
| Propeller Shaft Tunnel Cover | ••• | 77 | Ü | Instrument Panel Lighting Switch | | V |
| Racing Windscreen | ••• | 66 74 | U U | Lighting Switch Luggage Boot Harness | 00 | • |
| Radiator Grille Rear Number Plate | ••• | 76 | • | Number Plate Lamp | | V |
| Rear Over-Riders | ••• | 75 | Ü | Number Plate Lamp Bulb Panel Harness | | ٧ |
| Rear Over-Rider Spring Bar | ••• | 75 76 | U | Panel Harness | 00 00 4 | ٧ |
| Rear Over-Rider Support Bracket Rear Wing | ••• | 72 | ŭ | Petrol Gauge | 82—82A | ٧ |
| Rear Wing Cover | ••• | 73 | Ü | Petrol Pump Petrol/Oil Switch | 0.0 | V |
| Rear Wing Cover Escutcheon Rear Wing Cover Lock | ••• | 73 73 | U | Reverse Lamp | | Ÿ |
| Rear Wing Cover Lock Rear Wing Piping | ••• | 72 | . • | Reverse Lamp Bulb | | V |
| Rear Wing Steady | ••• | 72 | | Reverse Lamp Switch Rev. Counter and Clock | | V |
| Replica Plate Scuttle Assembly | ••• | 77 62 | | Rev. Counter and Clock Rev. Counter Cable | | |
| Scuttle Assembly Scuttle Casings | ••• | 63 | Ų | Side Lamps | 85 | V |
| Seats | ••• | 77—78 | U | Side Lamp Bulbs Speedometer | 85 82B—82C | V |
| Seat Cushions Seat Hinges | ••• | 78 78 | U | Speedometer | 83 | • |
| Seat Runners | ••• | 78 | | Starter | 80 | ٧ |
| Side Curtains | ••• | 79A | U | Starter Armature | 80 80 | |
| Side Curtain Fixing Knobs Side Curtain Fixing Rods | ••• | 79B 79B | | Starter Bushes | 80 | |
| Spare Wheel Tray | ••• | 71 | U | Starter Drive | 80 | |
| Spare Wheel Tray Clamp | ••• | 71 79A | U | Starter Field-Coil Starter Pinion and Sleeve | 80 80 | |
| Tonneau Cover Windscreen Assembly | ••• | 65 | U | Starter Solenoid Switch | 81 | ٧ |
| Windscreen Centre Pillar | | 65 | Ŭ. | Starter Springs | 03 03 4 | ٧ |
| Windscreen Side Pillars | ·••. | 66 | U | Starter Switch Stator Tube | | v |
| Windscreen Washer | ••• | 63C—63D | | Steering Column Control | 86 | S |
| | | | | Tail/Stop Lamps | | V |
| ELECTRICAL FOLIRMENT | | 80—90A | ٧ | Tail/Stop Lamp Bulbs Tail/Stop Lamp Housing | | ٧ |
| ELECTRICAL EQUIPMENT | ••• | | | Tail/Stop Lamp Switch | 86 | V |
| Ammeter | ••• | 82—82A | ٧ | Thermometer Gauge | ~ ~ | V |
| Battery Battery Cables | ••• | 88 88 | | Trafficator Switch Windscreen Wiper | 07 074 | ٧ |
| Body Harness | ••• | 88 | | Windscreen Wiper Arm | 87—87A | V |
| Boot Light | ••• | 83 | V | Windscreen Wiper Blade | 87—87A | V |
| Boot Light Switch | ••• | 83 89 | ٧ | Windscreen Wiper Drive Windscreen Wiper Motor | 07 074 | V |
| Cables Cable Clips | ••• | 90—90A | | Windscreen Wiper Switch | 00 004 | v |
| • | | | | · · · · · · · · · · · · · · · · · · · | | |

| Description. | | Page No. | Plate. | Description. | | | | Page No. | Plate. |
|--|---------|------------------------------------|--------|---|------------|---|-----|-------------------------------|--------|
| TOOL KIT | | 91 | | LIST OF EXTRAS—(c | ontinued) | | | | |
| LIST OF EXTRAS | | 92—95D | | Floorboards (for R Fog Lamps Luggage Rack Racing Screens | acing Seat | ••• | | 95D 92 92 95B | |
| Auxiliary Petrol Tank Hoses Auxiliary Petrol Tank Pipes | | 95A 95A 95A 95A | | STANDARD PARTS | | | | 96—100 | |
| Auxiliary Petrol Tank Tubes Bucket Seats (Racing Type) | | 95A 95D 9295 | | Bolts Clevis Pins Coach Bolts | | | | 96 100 97 | |
| Car Radio Aerial Car Radio Condenser | | 92 & 94 92—94 93—94 | | Dowels Nuts Rivets | | • ••• | ••• | 100 98 100 | |
| Car Radio Receiver Unit Car Radio Resistor | | 92 & 94 92—95 92 & 94 95C | | Setscrews Split Pins Washers | | | | 97—98 100 99 | |
| Chassis Frame Undershield | ··· ··· | 93C | | Woodscrews | ••• | • | ••• | 99 | |

| C.2331/1 CYLINDER BLOCK | Part No. | Description. | No. | No. per Unit. | Remarks. |
|--|-----------|--|--------|------------------|---|
| C.317 Plug, Core, on left and right hand sides A.2 2 C.315 Plug, Core, on left and right hand sides A.3 7 C.2305 Plug, in front end of Oil Gallery (½" A.N.F.) A.4 1 C.2352 Plug, in side of Oil Gallery (½" A.N.F.) A.5 6 C.2296/3 Washer, Copper, on Oil Gallery (½" A.N.F.) A.5 6 C.2296/2 Washer, Copper, on rear Plug A.5 6 C.2296/2 Washer, Copper, on rear Plug A.5 1 C.2296/2 Washer, Copper, on rear Plug A.8 1 C.2296/3 Washer, Copper, on rear Plug A.8 1 C.2354 Tap, Water Drain, in left hand side of Block A.9 1 C.2354 Tap, Water Drain, in left hand side of Block A.9 1 C.2355 Dowel on front face of Block A.11 2 C.2258 Cover on rear face of Block A.12 1 C.2258 Cover on rear face of Block A.12 1 C.2354 Dowel, Ring, between Rear Cover and Block A.13 1 C.2318/18/3D Bolt, Centre, securing Rear Cover to Block A.14 1 C.2318/18/3D Bolt, Centre, securing Rear Cover to Block A.15 2 C.2332 Ring, Sealing, on Rear Cover to Block A.16 3 C.2332 Ring, Sealing, on Rear Cover to Block A.16 3 C.2332 Ring, Sealing, on Rear Cover A.17 1 C.2294 Cap, Bearing, Front Cap, Bearing, Front Bearing Cap C.2204 Cap, Bearing, Front Cap, Bearing, Centre A.18 1 C.2202 Cap, Bearing, Rear Cover Cap, Bearing, Centre Cap, Cap, Bearing, Centre Cap, Cap, | C.2331/1 | CYLINDER BLOCK | A.1 | 1 | |
| C.317 Plug, Core, on left and right hand sides C.315 Plug, Core, on left and right hand sides C.335 Plug, in front end of Oil Gallery (§* A.N.F.) C.2352 Plug, in side of Oil Gallery (§* A.N.F.) C.2296/3 Washer, Copper, on Oil Gallery Plugs C.2296/3 Washer, Copper, on Far Plug C.2354 Tap, Water Drain, in left hand side of Block C.2354 Tap, Water Drain, in left hand side of Block C.2355 Dowel on front face of Block C.2356 Dowel on front face of Block C.2358 Cover on rear face of Cylinder Block C.2358 Cover on rear face of Cylinder Block C.2359 Bott, Centre, securing Rear Cover to Block C.2331 Dowel, Ring, between Rear Cover to Block C.2332 Ring, Sealing, on Bolts C.2334 Ring, Sealing, on Rear Cover C.2460 Cap, Bearing, Front C.2200 Cap, Bearing, Front C.2200 Cap, Bearing, Rear C.2202 Cap, Bearing, Rear C.2203 Washer, Locking Bolts securing Front Bearing C.2365 Dowel, between Bearing Cap C.2365 Washer, Locking Bolts securing Front Bearing C.2365 Stud, securing Cylinder Head C.2207 Stud, Securing Cylinder Head C.2208 Stud, Dowel, securing Cylinder Head C.2209 Cap, Bearing Caps C.2461 Liner, Cylinder C.2461 Liner, Cylinder C.2461 Liner, Cylinder C.2461 Washer at each side of Union C.2467 Washer at each side of Union C.2468 Adapter for Union C.2468 Adapter for Union C.2469 Adapter for Union C.2469 Adapter for Union C.2461 Liner, Cylinder C.2467 Washer at each side of Union C.2468 Adapter for Union C.2469 Adapter for Union C.2468 Adapter for Union C.2469 Adapter for Union C.2469 Adapter for Union C.2469 Adapter for Union C.2461 Cap, Bade and Rear each side of Union C.2469 Adapter for Union C.2461 Cap, Bade and Sade of Union C.2461 Cap, Bade and Rear each side of Union C.2468 Adapter for Union C.2468 Adapter for Union C.2469 Adapter for Union C.2469 Adapter for Union C.2460 Adapter for Union C.2461 | C.4820 | CYLINDER BLOCK | | 1 | |
| C.315 Plug, Core, on left and right hand sides | C.317 | Plug, Core, on left and right hand sides | A.2 | 2 | |
| C.2305 Plug, in front end of Oil Gallery (§* A.N.F.) A.4 1 C.2352 Plug, in side of Oil Gallery (§* A.N.F.) A.5 6 C.2296/3 Washer, Copper, on Oil Gallery Plugs A.6 6 C.2296/2 Washer, Copper, on Oil Gallery Plugs A.8 1 C.2296/2 Washer, Copper, on rear Plug A.8 1 C.2354 Tap, Water Drain, in left hand side of Block A.9 1 C.2354 Tap, Water Drain, in left hand side of Block A.9 1 C.2355 Dowel on front face of Block A.9 1 C.2356 Dowel on front face of Block A.11 2 C.2357 Dowel on rear face of Block A.12 1 C.2373 Dowel, Ring, between Rear Cover and Block A.13 2 NB.131 /D Bolt, Centre, securing Rear Cover to Block A.14 1 NB.131 /B5D Bolt, Centre, securing Rear Cover to Block A.15 2 C.2332 Ring, Sealing, on Rear Cover Block A.16 3 C.2332 Ring, Sealing, on Rear Cover Block A.17 1 C.2300 Cap, Bearing, Front C.2200 Cap, Bearing, Front C.2200 Cap, Bearing, Intermediate C.2202 Cap, Bearing, Intermediate C.2202 Cap, Bearing, Rear Coper Bearing Caps A.20 1 C.2346 Dowel, between Bearing Caps A.20 1 C.2347 Washer, Locking Bolts securing Front Bearing Cap Cap C.2447 Washer, Locking Bolts securing Centre, Intermediate A.20 1 C.2448 Washer, Locking Bolts securing Centre, Intermediate A.20 1 C.2299 Stud, securing Cylinder Head A.21 13 C.2290 C.2407 Washer, Locking Bolts securing Centre, Intermediate A.21 13 C.2290 Stud, Securing Cylinder Head A.21 13 C.2290 C.2407 Washer, Locking Bolts securing Centre, Intermediate A.21 15 C.2290 Stud, Dowel, securing Caps A.20 1 C.2401 Liner, Cylinder Head A.21 15 C.2290 Stud, Dowel, securing Caps A.20 1 C.2401 Liner, Cylinder Head A.21 15 C.2290 Stud, Dowel, securing Cylinder Head A.21 15 C.2401 Liner, Cylinder Head A.21 15 C.2402 Cap Golt A.202 1 C.2403 Cap Caps Caps Caps Caps Caps Caps Caps | | | | | |
| C.2296/3 Washer, Copper, on Oil Gallery Plugs C.2157 Plug in rear end of Oil Gallery (f' A.N.F.) C.2298/2 Washer, Copper, on rear Plug C.2354 Washer, Copper, on rear Plug C.2355 Washer, Copper, on water Drain Tap C.2196/3 C.2356 Dowel on rear face of Block C.2355 Dowel on rear face of Block C.2355 Dowel on rear face of Block C.2353 Cover on rear face of Cylinder Block C.2373 Dowel, Ring, between Rear Cover and Block A.12 NB.131/7D Bolt, Cuter, securing Rear Cover to Block C.2332 Ring, Sealing, on Rear Cover to Block C.2332 Ring, Sealing, on Rear Cover C.2340 C.2340 C.2340 C.2340 C.2340 C.2470 Screw, Cap, securing Sealing Ring and Rear C.2346 C.2470 C.2470 C.2470 C.2470 C.2470 Washer, Locking Bolts securing Cap C.2470 C.2470 Washer, Locking Bolts securing Front Bearing C.2470 C.2470 C.2470 Washer, Locking Bolts securing Front Bearing C.2469 C.2470 Stud, securing Cylinder Head C.2470 C.2504 C.2505 C.269 C.2470 Stud, securing Cylinder Head C.2502 C.2500 Cap, Bearing, Caps C.2270 Stud, Dowel, securing Cipliner Head C.2502 C.2503 C.2503 C.2504 C.2505 C.2504 C.2505 C.2505 C.2506/4 Washer at each side of Union C.2478 Adapter for Union Washer at each side of Union Adapter for Union Washer at each side of Union And Side of Block A.12 A.21 C.2470 C.2470 C.2461 C.2461 C.2470 C.2470 C.2506/4 C.2470 C.2506/4 C.2470 C.2506/4 C.2507 C.2506/4 C.2508 C.2509 C.2509 C.2509 C.2509 C.2500 C | | | A.4 | 1 | |
| C.2157 Plug in rear end of Oil Gallery (Gr Å.N.F.) A.7 1 C.2296/2 Washer, Copper, on rear Plug C.2354 Tap, Water Drain, in left hand side of Block C.2296/3 Washer, Copper, on Water Drain Tap C.2365 Dowel on rear face of Block C.2365 Dowel on front face of Block C.2373 Dowel, Ring, between Rear Cover and Block C.2373 Dowel, Ring, between Rear Cover to Block NB.131/D Bolt, Centre, securing Rear Cover to Block C.2332 Ring, Sealing, on Rear Cover to Block C.2332 Ring, Sealing, on Rear Cover C.2394 Dowel, Ring, between Sealing Ring and Rear Cover C.2470 Screw, Cap, securing Sealing Ring to Rear Cover C.2204 Cap, Bearing, Front C.2204 Cap, Bearing, Intermediate C.2202 Cap, Bearing, Rear C.2203 Tube, Drain, in Rear Bearing Cap C.2246 Cap, Bearing, Rear C.2268 Tube, Drain, in Rear Bearing Caps C.2427 Washer, Locking Bolts securing Front Bearing C.2420 Stud, securing Sealing Caps C.2425 Washer, Locking Bolts securing Front Bearing C.2269 Stud, securing Cylinder Head C.2200 Stud, Dowel, securing Cylinder Head C.2201 Stud, Dowel, securing Cylinder Head C.2202 Cap Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 Liner, Cylinder C.2461 Liner, Cylinder C.2478 Washer at each side of Union Adapter for Union C.2478 Masher at each side of Union C.2479 Masher at each side of Union C.2479 Fitted from Eng. No. | | | A.5 | | |
| C.2396/2 Washer, Copper, on rear Plug C.2354 Tap, Water Drain, in left hand side of Block C.2296/3 Washer, Copper, on Water Drain Tap D.106/4) Dowel on rear face of Block C.2355 Dowel on front face of Block C.2356 Cover on rear face of Cylinder Block C.2373 Dowel, Ring, between Rear Cover and Block NB.131/7D Bolt, Centre, securing Rear Cover to Block NB.131/7D Bolt, Centre, securing Rear Cover to Block NB.131/7D Bolt, Centre, securing Rear Cover to Block NB.131/7D Bolt, Outer, securing Rear Cover to Block NB.131/7D Bolt, Centre, securing Rear Cover to Block NB.131/7D Dowel, Ring, Sealing, on Rear Cover to Block NB.131/7D NB.13 | C.2296/3 | | A.6 | 6 | |
| C.2354 | C.2157 | | A.7 | | |
| C.2296/3 Ob. 106/41 Dowel on rear face of Block C.2258 Cover on rear face of Cylinder Block C.2373 Dowel, Ring, between Rear Cover and Block A.11 2 Ob. 106/41 Dowel, Ring, between Rear Cover to Block A.12 2 NB.131/7D Bolt, Centre, securing Rear Cover to Block A.14 1 Bolt, Centre, securing Rear Cover to Block A.15 2 FG.105/X C.2332 Ring, Sealing, on Rear Cover C.2470 C.2374 Dowel, Ring, between Sealing Ring and Rear C.2204 C.2904 Cap, Bearing, Front C.2346 Cap, Bearing, Rear C.2209 Cap, Bearing, Rear C.2209 Cap, Bearing, Rear C.2209 Cap, Bearing, Rear C.2200 Cap, Bearing, Rear C.2202 Cap, Bearing, Rear C.2203 Cap, Bearing, Bearing Caps C.2365 Dowel, between Bearing Caps C.2427 Washer, Locking Bolts securing Front Bearing C.2427 Washer, Locking Bolts securing Front Bearing C.2427 Cap C.2427 Washer, Locking Bolts securing Front Bearing C.2427 Cap C.2427 Washer, Locking Bolts securing Front Bearing C.2427 Cap C.2427 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps Stud, securing Cylinder Head C.2270 Stud, Dowel, securing Cylinder Head C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2461 C.2461 Liner, Cylinder C.2478 Adapter for Union Annual Annual Apter for Union Annual Cap Cover A.11 2 A.11 2 A.11 1 A.12 A.13 A.14 1 A.15 2 A.16 3 A.17 1 A.17 1 A.18 2 C.2496/4 A.18 2 A.19 2 A.19 2 A.19 2 A.19 1 A.10 A.10 A.10 A.11 2 A.11 1 A.12 A.12 1 A.13 A.22 1 Fitted to Eng. No. W.3686 and subs. Also to certain individual Engines prior to this number C.2461 C.2461 Liner, Cylinder C.2478 Adapter for Union Augustant Annual Cap A.21 1 Fitted from Eng. No. Fitted from Eng. No. | C.2296/2 | Washer, Copper, on rear Plug | A.8 | 1 | |
| OD.106/41 C.2365 Dowel on rear face of Block C.2365 Dowel on front face of Block C.2258 Cover on rear face of Cylinder Block C.2373 Dowel, Ring, between Rear Cover and Block C.2373 Dowel, Ring, between Rear Cover to Block C.2374 Dowel, Ring, between Rear Cover to Block C.2375 C.2382 C.2394 Dowel, Ring, between Rear Cover to Block C.2394 Dowel, Ring, between Sealing Ring and Rear C.2394 C.2394 C.2394 C.2394 C.2394 C.2470 C.2470 C.2594 C.2470 C.2595 C.2200 C.29 Bearing, Front C.2200 C.29 Bearing, Front C.2200 Cap, Bearing, Rear C.2306 C.2306 C.2306 C.2306 C.2306 C.2306 C.2427 Washer, Locking Bolts securing Front Bearing C.2420 C.2427 Washer, Locking Bolts securing Front Bearing C.2420 C.2427 Cap C.2427 Cap C.2427 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2420 C.2427 Cap C.2427 Cap C.2428 C.2428 Stud, securing Cylinder Head C.2200 C.2427 Stud, Dowel, securing Cylinder Head C.2200 C.2427 Vasher, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2427 Cap C.2427 Cap C.2428 C.2428 Stud, securing Cylinder Head C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2448 Adapter for Union C.2448 Adapter for Union Dowel on rear face of Cylinder Block A.11 A.1 A.21 A.22 A.23 A.24 A.25 A.26 A.27 Fitted from Eng. No. Fitted from Eng. No. Fitted from Eng. No. | C.2354 | Tap, Water Drain, in left hand side of Block | A.9 | | |
| C.2365 Dowel on front face of Block A.11 2 C.2253 Cover on rear face of Cylinder Block A.12 1 C.2373 Dowel, Ring, between Rear Cover and Block A.13 2 NB.131/7D Bolt, Centre, securing Rear Cover to Block A.14 1 NB.131/8-5D Bolt, Centre, securing Rear Cover to Block A.15 2 FG.105/X Washer, Spring, on Bolts A.16 3 C.2332 Ring, Sealing, on Rear Cover A.17 1 C.2394 Dowel, Ring, between Sealing Ring and Rear A.18 2 C.2470 Screw, Cap, securing Sealing Ring to Rear Cover A.19 2 C.2204 Cap, Bearing, Centre 1 C.2204 Cap, Bearing, Centre 1 C.2202 Cap, Bearing, Rear 4 C.2202 Cap, Bearing, Rear 4 C.2202 Cap, Bearing, Caps A.20 1 C.2355 Dowel, between Bearing Caps and Block C.2262 C.2427 Washer, Locking Bolts securing Front Bearing C.2426 C.2427 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps A.21 C.2269 Stud, securing Cylinder Head A.21 13 C.2270 Stud, Dowel, securing Cylinder Head A.22 1 C.2260 Plug, on left hand side of Block, sealing aperture for Heater Element C.2353 C.2461 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2448 Adapter for Union 1 Fitted from Eng. No. C.2448 Adapter for Union 1 Fitted from Eng. No. C.2447 Washer at each side of Union 1 Fitted from Eng. No. C.2461 C.2478 Adapter for Union 1 Fitted from Eng. No. C.2488 Adapter for Union 1 Fitted from Eng. No. C.2490 Cap | C.2296/3 | Washer, Copper, on Water Drain Tap | A.10 | | |
| C.2258 | OD.106/4J | Dowel on rear face of Block | | | |
| C.2373 NB.131/7D NB.131/7D NB.131/8-5D Bolt, Centre, securing Rear Cover to Block NB.131/8-5D Ring, Sealing, on Rear Cover C.2394 C.2394 C.2394 C.2470 C.2470 C.2204 C.2204 C.2204 C.2200 C.240, Bearing, Front C.2346 C.2202 Cap, Bearing, Rear Cover C.2208 Tube, Drain, in Rear Bearing Caps Bolt, securing Bearing Caps Bolt, securing Bearing Caps Bolt, securing Bearing Caps C.2427 C.2427 C.2427 C.2427 C.2428 C.2427 Cap Masher, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2427 C.2425 Cap Masher, Locking Bolts securing Centre, Intermediate and Rear Bearing Cylinder Head C.2270 C.2425 Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 C.2461 C.2461 C.2461 C.2478 C.2478 Adapter for Union C.2478 C.2478 Cap Cap Cover Cover A.19 2 A.19 2 A.19 2 A.19 1 NOT SERVICED NOT SERVICED NOT SERVICED A.20 1 A.20 1 Fitted to Eng. No. W.3686 and subs. Also to certain individual Engines prior to this number Fitted from Eng. No. W.3686 and subs. Also to certain individual Engines prior to this number Fitted from Eng. No. Fitted from Eng. No. | C.2365 | Dowel on front face of Block | A.11 | | |
| NB.131/PD NB.131/8-5D Bolt, Centre, securing Rear Cover to Block NB.131/8-5D Bolt, Outer, securing Rear Cover to Block PG.105/X C.2332 C.2332 C.2394 Dowel, Ring, Sealing, on Rear Cover C.2470 C.2470 C.2204 Cap, Bearing, Front C.2200 Cap, Bearing, Centre C.2346 C.2346 C.2202 Cap, Bearing, Rear C.2298 Tube, Drain, in Rear Bearing Cap C.2208 C.2427 C.2427 C.2427 C.2427 C.2427 C.2427 C.2428 C.2427 C.2428 C.2427 C.2428 C.2427 C.2429 C.2429 C.2429 C.2425 C.2427 C.2425 C.2427 C.2426 C.2427 C.2426 C.2427 C.2426 C.2427 C.2428 C.2427 C.2428 C.2427 C.2428 C.2428 C.2428 C.2428 C.2429 C.2429 C.2429 C.2420 C.2420 C.2420 C.2420 C.2421 C.2421 C.2421 C.2422 C.2422 C.2424 C.2424 C.2424 C.2424 C.2425 C.2425 C.2425 C.2426 C.2426 C.2426 C.2426 C.2426 C.2427 C.2426 C.2427 C.2426 C.2427 C.2426 C.2427 C.2426 C.2427 C.2428 C.24 | C.2258 | Cover on rear face of Cylinder Block | | | |
| NB.131/8-5D | C.2373 | | A.13 | | |
| FG.105/X C.2332 Ring, Sealing, on Rear Cover C.2334 C.2334 C.2334 C.2345 C.2470 C.2470 C.2204 C.297 C.2204 C.2306 C.2346 C.2348 C.2348 C.2347 C.2346 C.2348 C.2346 | NB.131/7D | Bolt, Centre, securing Rear Cover to Block | | | |
| C.2332 Ring, Sealing, on Rear Cover A.17 1 C.2394 Dowel, Ring, between Sealing Ring and Rear A.18 2 C.2470 Screw, Cap, securing Sealing Ring to Rear Cover C.2204 Cap, Bearing, Front C.2200 Cap, Bearing, Intermediate A.2346 Cap, Bearing, Intermediate A.2020 Cap, Bearing, Intermediate A.2020 Cap, Bearing, Rear C.2298 Tube, Drain, in Rear Bearing Cap A.20 1 C.2365 Dowel, between Bearing Caps and Block C.2262 Bolt, securing Bearing Caps A.20 1 C.2427 Washer, Locking Bolts securing Front Bearing Cap Cap Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps Stud, securing Cylinder Head A.21 13 C.2269 Stud, securing Cylinder Head A.21 13 C.2570 Stud, Dowel, securing Cylinder Head A.22 1 C.5022 Plug, on left hand side of Block, sealing aperture for Heater Element Fitted to Eng. No. W.3686 and subs. Also to certain individual Engines prior to this number C.2461 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block 1 C.2296/4 Washer at each side of Union 1 C.2478 Adapter for Union 1 Titled from Eng. No. | | | | | |
| C.2394 Dowel, Ring, between Sealing Ring and Rear Cover Cover Cover Cover Cap, securing Sealing Ring to Rear Cover A.19 2 C.2204 Cap, Bearing, Front 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | | | | | |
| C.247 | | | | | |
| C.2470 C.2204 Cap, Bearing, Front C.2200 Cap, Bearing, Centre C.2346 C.2202 Cap, Bearing, Centre C.2202 Cap, Bearing, Rear C.2202 Cap, Bearing, Rear C.2203 Cap, Bearing, Rear C.2204 Cap, Bearing, Rear C.2205 Cap, Bearing, Rear C.2206 Cap, Bearing, Rear C.2207 Cap, Bearing, Rear C.2208 Tube, Drain, in Rear Bearing Cap C.2365 Dowel, between Bearing Caps and Block C.2427 Washer, Locking Bolts securing Front Bearing Cap C.2427 Cap C.2425 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps Cap C.2269 C.2269 Stud, securing Cylinder Head C.2270 C.2270 Stud, Dowel, securing Cylinder Head C.2370 C.2461 Liner, Cylinder C.2361 Union, connecting Oil Feed Pipe to Cylinder Block C.2364 Washer at each side of Union C.2465 Vasher for Union C.2466 C.2366/4 Washer at each side of Union C.2478 Adapter for Union C.2478 Adapter for Union C.2502 Cap, Bearing, Front Cap, Bearing, Front Cap, Bearing, Cap Adapter for Union Cap, Bearing, Front Cap, Bearing, Centre Cap, Bearing, Centre Cap, Bearing, Cap Adapter for Union Cap, Bearing, Centre Cap, Bearing, Cap Adapter for Union Cap, Bearing, Centre Cap, Bearing, Centre Cap, Bearing, Centre Cap, Bearing, Cap Adapter for Union Cap, Bearing, Centre Cap, Bearing, Cap Adapter for Union A.20 Adapter for Union Cap, Bearing, Cap Adapter for Union Cap, Bearing, Cap Adapter for Union A.20 I Fitted from Eng. No. Fitted from Eng. No. Fitted from Eng. No. Fitted from Eng. No. | C.2394 | | A.18 | 2 | |
| C.2204 Cap, Bearing, Front C.2200 Cap, Bearing, Centre C.2346 Cap, Bearing, Intermediate C.2202 Cap, Bearing, Rear C.2208 Tube, Drain, in Rear Bearing Cap C.2262 Bolt, securing Bearing Caps and Block C.2427 Washer, Locking Bolts securing Front Bearing Cap C.2425 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2426 Stud, securing Cylinder Head C.2270 Stud, Dowel, securing Cylinder Head C.2270 Ascuring Cylinder Head C.2027 Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2278 Adapter for Union Cap NOT SERVICED | C 2470 | | Δ 10 | 2 | |
| C.2200 Cap, Bearing, Centre C.2346 Cap, Bearing, Intermediate C.2202 Cap, Bearing, Rear C.2298 Tube, Drain, in Rear Bearing Cap C.2365 Dowel, between Bearing Caps and Block C.2262 Bolt, securing Bearing Caps C.2427 Washer, Locking Bolts securing Front Bearing Cap C.2425 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2269 Stud, securing Cylinder Head C.2270 Stud, Dowel, securing Cylinder Head C.2370 Stud, Dowel, securing Cylinder Head C.2502 Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2296/4 Washer at each side of Union C.2478 Adapter for Union Cap NOT SERVICED NOT SERVICED 1 Fitted to Eng. No. V.3686 and subs. Also to certain individual Engines prior to this number Fitted from Eng. No. Fitted from Eng. No. | | | A.17 | | |
| C.2346 C.202 Cap, Bearing, Rear C.2208 Tube, Drain, in Rear Bearing Cap C.2365 Dowel, between Bearing Caps and Block C.2427 Washer, Locking Bolts securing Front Bearing Cap C.2425 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2425 C.2269 C.2269 Stud, securing Cylinder Head C.2070 C.2070 Stud, Dowel, securing Cylinder Head C.5022 Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2478 Adapter for Union Cap Chapter A.20 1 Fitted to Eng. No. W.3686 and subs. Also to certain individual Engines prior to this number Fitted from Eng. No. Fitted from Eng. No. Fitted from Eng. No. | | | | | |
| C.2202 Cap, Bearing, Rear C.2298 Tube, Drain, in Rear Bearing Cap C.2365 Dowel, between Bearing Caps and Block C.2427 Washer, Locking Bolts securing Front Bearing Cap C.2425 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2425 Stud, securing Cylinder Head C.2270 Stud, securing Cylinder Head C.2270 Stud, Dowel, securing Cylinder Head C.2022 Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2296/4 Washer at each side of Union Adapter for Union C.2478 Adapter for Union C.2478 Fitted from Eng. No. Fitted from Eng. No. Fitted from Eng. No. Fitted from Eng. No. | | | | | NOT SERVICED |
| C.2298 C.2365 C.2365 Dowel, between Bearing Caps and Block C.2427 Washer, Locking Bolts securing Front Bearing Caps C.2425 C.2425 C.2425 C.2426 C.2426 C.2426 C.2427 C.2425 C.2426 C.2427 C.2426 C.2427 C.2428 C.2428 C.2428 C.2428 C.2429 C.242 | | | | | |
| C.2365 C.2427 C.2427 C.2427 C.2427 C.2428 C.2428 C.2428 C.2429 C.2425 C.2425 C.2425 C.2425 C.2426 C.2426 C.2426 C.2426 C.2426 C.2427 C.2426 C.2427 C.2426 C.2427 C.2426 C.2428 C. | | | A.20 | | |
| C.2262 Bolt, securing Bearing Caps C.2427 Washer, Locking Bolts securing Front Bearing Cap C.2425 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2269 Stud, securing Cylinder Head C.270 Stud, Dowel, securing Cylinder Head C.5022 Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2478 Adapter for Union C.2478 Fitted from Eng. No. | | | , ,,=0 | - | |
| C.2427 Washer, Locking Bolts securing Front Bearing Cap C.2425 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2269 Stud, securing Cylinder Head C.2270 Stud, Dowel, securing Cylinder Head C.5022 Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2296/4 Washer at each side of Union Adapter for Union Adapter for Union C.2478 Adapter for Union Cap 2 C.2462 Liner, Locking Bolts securing Front Bearing 2 C.2463 A.21 13 Fitted to Eng. No. W.3686 and subs. Also to certain individual Engines prior to this number 6 C.2464 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2478 Adapter for Union 1 Fitted from Eng. No. | | | | | |
| C.2425 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2269 C.2270 Stud, securing Cylinder Head C.2502 Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 C.2461 C.2461 C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2296/4 Washer at each side of Union Adapter for Union C.2478 Adapter for Union Cincil Central individual Engines prior to this number Fitted to Eng. No. W.3686 and subs. Also to certain individual Engines prior to this number 6 C.2461 C.2461 Fitted from Eng. No. | | | | | |
| C.2425 Washer, Locking Bolts securing Centre, Intermediate and Rear Bearing Caps C.2269 Stud, securing Cylinder Head C.2270 Stud, Dowel, securing Cylinder Head C.5022 Plug, on left hand side of Block, sealing aperture for Heater Element C.4461 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2296/4 Washer at each side of Union C.2478 Adapter for Union C.2478 Fitted from Eng. No. Fitted to Eng. No. W.3686 and subs. Also to certain individual Engines prior to this number Fitted from Eng. No. Fitted from Eng. No. | | | | _ | |
| C.2269 Stud, securing Cylinder Head A.21 13 C.2270 Stud, Dowel, securing Cylinder Head A.22 1 C.5022 Plug, on left hand side of Block, sealing aperture for Heater Element Plug, on left hand side of Block, sealing aperture for Heater Element | C.2425 | | | 12 | |
| C.2270 C.5022 Stud, Dowel, securing Cylinder Head A.22 Plug, on left hand side of Block, sealing aperture for Heater Element A.22 Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 C.2461 C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2353 C.2296/4 Washer at each side of Union Adapter for Union Adapter for Union Stud, Dowel, securing Cylinder Head A.22 1 Fitted to Eng. No. W.3686 and subs. Also to certain individual Engines prior to this number 6 C.2461 C.2461 Fitted from Eng. No. | | | | | |
| C.5022 Plug, on left hand side of Block, sealing aperture for Heater Element C.2461 Liner, Cylinder C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2296/4 Washer at each side of Union C.2478 Adapter for Union C.5022 Plug, on left hand side of Block, sealing aperture 1 Fitted to Eng. No. W.3686 and subs. Also to certain individual Engines prior to this number 6 C.2461 Fitted from Eng. No. | C.2269 | Stud, securing Cylinder Head | A.21 | 13 | |
| for Heater Element W.3686 and subs. Also to certain individual Engines prior to this number C.2461 C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2296/4 Washer at each side of Union 2 C.2478 Adapter for Union 1 Fitted from Eng. No. | C.2270 | Stud, Dowel, securing Cylinder Head | A.22 | | |
| C.2461 Liner, Cylinder 6 C.2353 Union, connecting Oil Feed Pipe to Cylinder Block 1 C.2296/4 Washer at each side of Union 2 C.2478 Adapter for Union 1 Fitted from Eng. No. | C.5022 | | | 1 | Fitted to Eng. No. |
| C.2461 Liner, Cylinder 6 C.2353 Union, connecting Oil Feed Pipe to Cylinder Block 1 C.2296/4 Washer at each side of Union 2 C.2478 Adapter for Union 1 Fitted from Eng. No. | | for Heater Element | | | W.3686 and subs. |
| C.2461 Liner, Cylinder 6 C.2353 Union, connecting Oil Feed Pipe to Cylinder Block 1 C.296/4 Washer at each side of Union 2 C.2478 Adapter for Union 1 Fitted from Eng. No. | | | | | Also to certain individual Engines prior to |
| C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2296/4 Washer at each side of Union C.2478 Adapter for Union 1 Fitted from Eng. No. | | | | | this number |
| C.2353 Union, connecting Oil Feed Pipe to Cylinder Block C.2296/4 Washer at each side of Union C.2478 Adapter for Union 1 Fitted from Eng. No. | C 2441 | Linea Culinder | | 4 | |
| C.2296/4 Washer at each side of Union 2 C.2478 Adapter for Union 1 Fitted from Eng. No. | | | | | |
| C.2478 Adapter for Union 1 } Fitted from Eng. No. | | | | | |
| | | | | | Fitted from Eng. No. |
| Transition to William | | | | | |
| | C.2270/4 | AA TO HELL RUGEL LIEUR OF WAShrel. | | | **.1001 to **.1030 |

| C.2239 | CRANKSHAFT | A.23 | 1 | Fitted from Eng. No. W.1001 to W.1746 |
|----------|---------------------------------------|-------|--------|--|
| C.2239/1 | CRANKSHAFT | | 1 | Fitted from Eng. No. W.1747 to W.2645 |
| C.4808 | CRANKSHAFT | | 1 | Fitted to Eng. No. W.2646 and subs. |
| C.2467 | Washer, locking Starter Jaw | A.24 | 1 | |
| C.544 | Piece, Distance, under Locking Washer | A.24A | 2 | |
| C.2372 | Jaw, Starter | A.25 | 1 | Fitted from Eng. No. |
| 0.20.2 | , | | | W.1001 to W.4816 |
| C.5896 | Bolt, securing Damper | | 1 | Fitted to Eng. No. W.4817 and subs. |
| C.2468 | Washer, behind Starter Jaw | A.26 | 1 | |
| C.360 | Shim, Packing, behind Washer | A.27 | As red | q'd. |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---------------------|--|--------------|------------------|--|
| | CRANKSHAFT (continued) | | | |
| C.2466 | Cone, Split, between Damper Centre and Crank- | A.28 | 1 | |
| C.2469 | shaft Pulley, Fan | A.29 | 1 | |
| NB.131/11F C.725 | Bolt, securing Fan Pulley to Damper Centre Washer, Shakeproof, on Bolts | A.30 A.31 | 4 2 | |
| C.2465 | Centre for Damper | A.32 | 1 | |
| C.2464 C.5809 | Damper Assembly Damper Assembly | A.33 | 1 | Fitted from Eng. No. W.1001 to W.8306 Fitted from Eng. No. W.8307 to W.8380 and |
| | | | | for Competition purposes |
| C.8020 R.504/11W | Damper Assembly Rivet, securing Damper to Centre | A.34 | 1 12 | Fitted to Eng. No. W.8381 and subs. |
| C.2173 | Piece, Distance | A.35 | 1 | |
| C.2283 C.2170 | Thrower, Oil Gear, Timing | A.36 A.37 | 1 | |
| C.2314 | Gear for Oil Pump Drive | A.38 | 1 | |
| C.757 C.2315 | Key (Woodruff 90) Bearing, Main, Front, Centre and Rear (Std.) | A.39 A.40 | 3 6 halv | res |
| C.2317 | Bearing, Main, Intermediate (Std.) | A.41 | 8 halv | res |
| C.2316 C.2316/1 | Washer, Thrust, bottom of Centre Bearing Cap Washer, Thrust, bottom of Centre Bearing Cap | A.42 A.42 | | |
| C.2226 | Bush, in rear end of Crankshaft, for Constant | A.43 | 1 | |
| C.4283 | Pinion Shaft Plug, Screwed, for Crankshaft Journals | | 6 | Fitted to Eng. No. |
| | , | | | W.1747 and subs. |
| | | | | |
| | | | | |
| | MAIN BEARINGS | | | |
| | | | | |
| | Obtainable in the following undersizes: | | | |
| | When ordering, please quote Part No. and undersize required (e.g. C.2315/20 for — 020"). | | | |
| | | | | |
| C.2211 | FLYWHEEL | A.44 | 1 | Fitted from Eng. No. |
| | | | _ | W.1001 to W.2645 |
| C.2313 C.1782 | Dowel in Centre of Flywheel Dowel on outer face of Flywheel | A.45 A.46 | 2 2 | |
| C.2295 | Screw, Set, securing Flywheel to Crankshaft | A.47 | 6 | |
| C.2287 C.4188 | Plate, locking Setscrews Washer under head of Setscrews | A.48 | 2 6 | |
| J. 1100 | Tradition under Head Of Depart CH3 | | ٠ | |
| C.4809 | FLYWHEEL | | 1 | Fitted from Eng. No. W.2646 to W.8274 |
| C.5808 | FLYWHEEL | | , 1 | Fitted to Eng. No. W.8275 and subs. |
| C 0040 | Donal to Control of Floridae | | • | VV.82/5 and subs. |
| C.2313 C.1782 | Dowel in Centre of Flywheel Dowel on Outer face of Flywheel | | 2 | |
| C.4855 | Screw, Set, securing Flywheel to Crankshaft | | 10 | |
| C.4810 | Lockplate, securing Setscrews | | 1 | |
| | | | | |
| | | | | |
| C.2265 | PISTON, COMPLETE | A.49 | 6 | 7:1 COMPRESSION RATIO |
| C.2426 | PISTON, COMPLETE | | 6 | 8:1 COMPRESSION RATIO |
| C.2563 | Pin, Gudgeon | A.50 | 6 | |
| C.3964 | Circlin | A.51 | 12 | |
| C.3085 C.3962 | Ring, Pressure, Upper Ring, Pressure, Lower | A.52 A.53 | | |
| | | | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---|--|--|--|---|
| C.3086 | PISTON, COMPLETE | A.55 | 6 | 7:1 COMPRESSION RATIO |
| C.3087 | PISTON, COMPLETE | | 6 | 8:1 COMPRESSION RATIO |
| C.3104 C.3964 C.5830 C.5831 C.5832 | Pin, Gudgeon Circlip Ring, Pressure, Upper Ring, Pressure, Lower Ring, Scraper | A.50 A.51 A.52 A.53 A.54 | 6 12 6 6 | |
| | NOTE.—Pistons C.3086 and C.3087 may be used as an alternative to C.2265 and C.2426 respectively. | | | |
| C.7710 | PISTON, COMPLETE | | 6 | 9:1 COMPRESSION RATIO |
| C.3104 C.3964 C.5830 C.7850 | Pin, Gudgeon Circlip Ring, Pressure Ring, Scraper | | 6 12 12 6 | SPECIAL EQUIPMENT FOR COM- PETITION PURPOSES |
| | PISTONS AND RINGS | | | |
| | Obtainable in the following oversizes:— +·005" +·010" +·015" +·020" +·030" When ordering, please state oversize required (e.g. C.2265/10 for ·010" oversize). | | | |
| C.2438 | CONNECTING ROD (LESS BEARINGS) | A.56 | 6 | Fitted from Eng. No. W.1001 to W.1098 |
| C.2 11 8 | CONNECTING ROD (LESS BEARINGS) | | 6 | Fitted from Eng. No. W.1099 to W.3674 |
| C.1132 C.383 C.358 C.2479 C.2361 C.386 L.103-5/8U C.2439 | Bearing, Big End (Standard size) Bolt, securing Caps to Connecting Rods Nut on Bolts Bolt, securing Caps to Connecting Rods Nut on Bolts Washer under Nuts Pin, Split, locking Nuts Bearing, Small End | A.57 A.58 A.59 A.58 A.59 A.60 A.61 A.62 | 12 halv 12 } 12 } 12 } 12 } 12 12 | Fitted from Eng. No. W.1001 to W.1098 Fitted from Eng. No. W.1099 to W.3674 |
| C.5835 | CONNECTING ROD (LESS BEARINGS) | | 6 | Fitted from Eng. No. W.3675 to W.8642 |
| C.7917 | CONNECTING ROD (LESS BEARINGS) | | 6 | Fitted to Eng. No. W.8643 and subs. |
| C.1132 C.3944 C.2361 C.386 | Bearing, Big End (Standard size) Bolt, securing Caps to Connecting Rods Nut on Bolts Washer, under Nuts | | 12 halves 12 12 12 12 | Fitted from Eng. No. |
| 103·5/8∪ C. 243 9 | Pin, Split, Locking Nuts Bearing, Small End | | 12 6 | W.3675 to W.8642 |

BIG END BEARINGS

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---------------------|---|--------------|------------------|--|
| C.3384 | OIL PUMP COMPLETE | | 1 | Fitted from Eng. No. W.1001 to W.2760 |
| C.2254 | Body only | A.63 | 1 | VV.1001 to VV.2760 |
| C.373 | Dowel in Pump Body | A.64 | i | |
| C.2221 | Gear, Driving | A.65 | 1 | |
| C.2224 C.1441 | Gear, Driven Spindle for Driven Gear | A.66 A.67 | 1 | |
| C.2198 | Cover at bottom of Pump Body | A.68 | i | |
| C.2277 | Gasket between Cover and Pump Body | A.69 | i | |
| NB.131/6D | Bolt securing Cover to Pump Body | A.70 | 4 | |
| C.740 C.2150 | Washer, Shakeproof, on Bolts Shaft, Drive, between Distributor and Coupling Shaft | A.71 A.72 | 1 | |
| C.2174 | Bush on Drive Shaft | A.73 | 1 | |
| C.2393 | Washer on Drive Shaft (Top of Bush) | A.74 | 1 | |
| C.2152 C.753 | Gear, Helical, driving Oil Pump and Distributor Key (Woodruff No. 50) Locking Helical Gear on Drive Shaft | A.75 A.76 | 1 | |
| NN.256/L | Nut at bottom of Drive Shaft | A.77 | 1 | |
| C.2151 C.2263 | Washer, Special, Locking Nut Shaft, coupling Driving Gear and Drive Shaft | A.78 A.79 | 1 | |
| | | | | |
| C.4715 | OIL PUMP COMPLETE | | 1 | Fitted to Eng. No. W.2761 and subs. |
| C.4716 | Gear, Driving | | 1 | |
| C.4718 C.752 | Spindle for Driving Gear Key, locking Driving Gear on Spindle | | 1 | |
| C.4717 | Gear. Driven | | i | |
| _, | All other items as for Oil Pump C.3384. | | • | |
| | | | _ | |
| C.2311 | Bolt, securing Oil Pump to Bearing Cap | A.80 | 2 | |
| NB.137/14D C.741 | Bolt, securing Oil Pump to Bearing Cap Washer, Shakeproof, on Bolts | A.81 A.82 | 1 3 | |
| | | | | |
| C.2471 | OIL DELIVERY PIPE FROM PUMP | A.83 | 1 | |
| C.2220 | Gasket, under Flange of Oil Pipe | A.84 | 1 | |
| NB.131/6D | Bolt, through Flange, securing Oil Pipe | 71.01 | ż | |
| C.740 | Washer, Shakeproof, on Bolts | | 2 | |
| C.2160 NB.131/9D | Gasket, between Elbow and Oil Pump Bolt, through Elbow, securing Oil Pipe | A.85 | 1 3 | |
| C.740 | Washer, Shakeproof, on Bolts | | 3 | |
| C.2228 | ELOATING CLICTION ER TER FOR OU SUMP | A 96 | 1 | |
| U.2220 | FLOATING SUCTION FILTER FOR OIL SUMP | A.00 | • | |
| L.104/10U | Pin, Split, retaining Filter in Oil Pump Cover | | 1 | |
| C 9350 | Oll SUNA | 4 07 | 4 | Flored from For No. |
| C.2359 | OIL SUMP | A.87 | 1 | Fitted from Eng. No. W.1001 to W.2057 W.3491 to W.3592 W.3597 to W.3634 W.3968 to W.3971 |
| | | | 1 | Fitted to the following Engines |
| C.2359/1 | OIL SUMP | | • | W.2058 to W.3490 W.3593 to W.3596 W.3635 to W.3967 |
| C.2359/1 C.2306 | OIL SUMP Seal (Asbestos) at front end of Sump | A.88 | 1 | W.2058 to W.3490 W.3593 to W.3596 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|---|---|--|---|
| C.4487 | TRAY FOR OIL SUMP, FRONT (COMPLETE WITH BAFFLES—C.2340) | A.90 | 1 | |
| C.2392 | TRAY FOR OIL SUMP, REAR (COMPLETE WITH BAFFLE—C.2342) | A.91 | 1 | SUPERSEDED BY C.2392/I |
| C.2392/1 | TRAY FOR OIL SUMP, REAR (COMPLETE WITH BAFFLE—C.2342/1) | | 1 | SUPERSEDES C.2392 |
| NS.131/4D CS.131/4D C.725 C.2205 C.2364 C.2296/1 NS.131/5D NS.131/6D FG.105/X | Screw, Set, securing Front Tray to Bearing Caps Screw, Set, securing Rear Tray to Sump Washer, Shakeproof, on Setscrews Gasket, between Oil Sump and Cylinder Block Plug, Drain, at bottom of Oil Sump Washer on Drain Plug Screw, Set, securing Oil Sump to Cylinder Block Screw, Set, securing Oil Sump to Cylinder Block Washer, Spring, on Setscrews | A.92 A.93 A.94 A.95 A.96 A.97 A.98 A.99 | 3 4 7 2 halv 1 1 1 25 26 | ves |
| C.2348 | DIPSTICK ASSEMBLY FOR OIL SUMP | A.100 | 1 | Fitted from Eng. No. W.1001 to W.2057 |
| C.2348/1 | DIPSTICK ASSEMBLY FOR OIL SUMP | | 1 | Fitted to Eng. No. W.2058 and subs. |
| C.2349 | OIL LEVEL ELEMENT UNIT IN OIL SUMP (SMITH'S Y.65704) | A.101 | 1 | Fitted from Eng. No. W.1001 to W.6130 Also to 6132, 6134, 6136, 6138, 6140, 6142, 6144, 6146, 6148 |
| C.4492 | BLANKING PLATE FOR OIL SUMP | | 1 | Fitted to Eng. No. W.6131, 6133, 6135, 6137, 6139, 6141, 6143, 6145, 6147, 6149, and subs. |
| C.937 | Gasket for Oil Level Element Unit or Blanking Plate | A.102 | 1 | 0143, 0147, 0147, and 3003. |
| C.5106 | DEFLECTOR ASSEMBLY FOR OIL SUMP | | 1 | |
| C.4291 FB.105/5D FN.105/L FG.105/X NS.131/4D FG.105/X | Plate, Tapped, for fixing of Deflector to Frame Bolt, securing Deflector to Cross Member Nut on Bolts Washer, Spring, under Nuts Screw, Set, securing Deflector to Tapped Plates Washer, Spring, on Setscrews | | 2 5 5 6 6 | SUPPLIED TO SPECIAL ORDER ONLY |
| 1423/A | FLEXIBLE OIL PIPE | A.103 | 1 | |
| 1425 | OIL PIPE TO GAUGE | A.104 | 1 | |
| C.2350 | OIL CLEANER (TECALEMIT FA.2045) | | 1 | Fitted from Eng. No. W.1001 to W.4382 |
| 1535 4661 2740 | Element (FG.2383) Canister (41518) Spring at bottom of Canister, for Bottom Pressure | A.105 A.106 A.107 | 1 | |
| 2737 2732 2725 2743 2709 2695 2747 C.4014 5911 2733 2726 2741 5165 2696 1078 | Plate (160144) Washer on top of Spring (150386) Washer (Felt) under bottom Pressure Plate (141050) Plate, Pressure, at bottom of Canister (134167) Circlip, securing bottom Pressure Plate (163122) Filter Head (114042) Screw, Union, at top of Filter Head (101343) Washer (Fibre) under Union Screw (174550) Valve, Relief, Assembly Seal (Rubber) on Filter Head (137353) Washer (Felt) under top Pressure Plate (141092) Plate, Pressure, on Filter Head (134295) Circlip, securing top Pressure Plate (160259) Valve, Balance, Assy., in Filter Head (50002) Bolt, through Filter Head and Canister (101344) Washer (Steel) under Head of Bolt (WWA.1010) | A.108 A.109 A.110 A.111 A.112 A.113 A.114 A.115 A.116 A.117 A.118 A.119 A.120 | 1 | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
|---|--|--|---|--|--|
| C.4767 | OIL CLEANER (TECALEMIT FA.2690/101) | | 1 | Fitted to Eng. No. W.4383 and subs. | |
| 1538 2501 2697 | Element (FG.2388) Cannister (41527) Bolt, through Filter Head and Canister (101620) | | 1 1 1 | VV. TOOS and Subs. | |
| | All other items as for Oil Cleaner C.2350. | | | | |
| C.4014 | RELIEF VALVE ASSEMBLY | | 1 | Fitted to Eng. No. W.1001 and subs. | |
| C.1088/C 2730 | Body for Relief Valve (100197) Washer (Fibre) between Body and Filter Head (140034) | A.123 A.124 | | vviivor and sassi | |
| 2713 2742 2693 | Valve, Relief (118076) Spring, for Relief Valve (160371) Housing for Relief Valve Spring (100195) | A.125 A.126 A.127 | 1 1 | | |
| 2692 273 4 C.1088/J | Nut, Dome, on Housing (100194) Nut, Lock (150202) Washer (Copper) at each side of Locknut (150318) | A.128 A.129 A.130 | 1 | | |
| C.2248 NB.131/36D NB.131/9D FW.105/E FW.105/T | Gasket, between Oil Cleaner and Cylinder Block Bolt, securing Oil Cleaner to Block (bottom fixing) Bolt, securing Oil Cleaner to Block (top fixing) Washer (Copper), on Bolts, adjacent to Block Washer (Steel) under Head of Bolts | A.131 | 1 2 2 4 | | |
| C.3826 | WATER PUMP, COMPLETE | | | Fitted from Eng. No. W.1001 to W.1050 | |
| C.2209 C.2357 C.2303 C.2225 C.468 C.2401 C.705 C.2402 C.2403 C.706 C.2404 C.2406 C.2405 C.389 C.2450 C.2321 C.2397 R.502/10W C.704/1 C.2399 C.2398 C.704/1 C.2398 | Body only Greaser, Hydraulic, on Pump Body Gasket, between Pump and Cylinder Block Spindle Bush for Spindle Seal on Spindle Bearing, Ball, Front (Hoffman S.9) Collar for Front Bearing Circlip, on Pump Body, retaining Front Bearing Bearing, Ball, Rear (Hoffman S.10) Circlip, in Fan Hub, retaining Rear Bearing Washer (Felt) Front Disc for Front Washer Washer (Felt) Rear Disc for Rear Washer Impeller (Front Half) Impeller (Rear Half) Rivet, securing two halves of Impeller Pin (Mills) securing Impellor to Spindle Dog, Driving, Front Circlip, around Fan Hub, securing Front Driving Dog Pin (Mills) securing Front Driving Dog to Spindle Dog, Driving, Rear Hub, Fan | | 1 | | |
| C.3870 | WATER PUMP, COMPLETE | | 1 | Fitted from Eng. No. W.1051 to W.1900 | |
| C.4481 | WATER PUMP, COMPLETE | | 1 | Fitted from Eng. No. W.1901 to W.2669 | |
| C.2457 | Body only | A.132 | 2 1 | Fitted from Eng. No. W.1051 to W.1900 | |
| C.4025 | Body only | | 1 | Fitted from Eng. No. W.1901 to W.2669 | |
| C.2357 C.2303 C.2459 C.468 C.4811 C.705 | Greaser, Hydraulic, on Pump Body Gasket, between Pump and Cylinder Block Spindle Bush for Spindle Seal on Spindle Bearing, Ball, Front (Hoffman S.9) | A.133 A.134 A.135 A.136 A.137 A.138 | 1 | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|------------------------------|---|----------------|------------------|--|
| | WATER PUMP, COMPLETE (continued) | | | |
| C.2402 C.2403 | Collar for Front Bearing Circlip, on Pump Body, retaining Front Bearing | A.139 A.140 | | • |
| C.706 C.2404 | Bearing, Ball, Rear (Hoffman S.10) Circlip, In Fan Hub, retaining Rear Bearing | A.141 A.142 | 1 | |
| C.2406 C.2405 | Washer (Felt) Front Disc for Front Washer | A.143 A.144 | 1 | |
| C.389 | Washer (Felt) Rear | A.145 | i | |
| C.2450 C.2458 | Disc for Rear Washer Impellor | A.146 A.147 | 1 | |
| C.704/1 | Pin (Mills) securing Impellor to Spindle | A.148 | 1 | |
| C.2399 C.2398 | Dog, Driving Circlip, around Fan Hub, securing Driving Dog | A.149 A.150 | 1 | |
| C.704/1 | Pin (Mills) securing Driving Dog to Spindle | A.151 | 1 | For a distribution of the control of |
| C.2445 | Hub, Fan | A.152 | 1 | Fitted from Eng. No. W.1001 to W.5464 |
| C.4946 | WATER PUMP, COMPLETE | | 1} | |
| C.4938 | Body only | | 1 } | Fitted from Eng. No. W.2670 to W.5464 |
| C.799 C.2296/1 | Plug Washer (Copper) for Plug | | 1 | *************************************** |
| , | All other items as for Pump C.4481. | | , | |
| C.6746 | WATER PUMP, COMPLETE | | 1) | Fired to Eng. No. |
| C.4938 | Body only | | 4 } | Fitted to Eng. No. W.5465 and subs. |
| C.7674 | Impellor | | 1 J | |
| | All other items as for Pump C.4481, except C.2445 Fan Hub, which is not required. | | | |
| C.1505 C.1506 | Banjo for Water Pump Connection Bolt for Banjo | | 1 | |
| C.2296/1 | Washer (Copper) at each side of Banjo | | 2 | |
| | | | | |
| C.2231 | FAN FOR WATER PUMP | A.153 | 1] | Flore I form By Ale |
| C.3044 | Nipple, Grease, on Fan (Tec. NA.5701) | A.154 | 1 | Fitted from Eng. No. W.1001 to W.5464 |
| C.2447 | Washer, Tab, under Grease Nipple | A.155 | 1] | |
| | | | | |
| C.6747 | FAN ASSEMBLY FOR WATER PUMP | | 1] | Fitted to Eng. No. |
| C.5121 | Balance-Piece, for Fan | | ₂ J | W.5465 and subs. |
| | | | | |
| C.2446 | PULLEY FOR FAN | A.156 | 1] | |
| ND 405/4/D | | | _ } | Fitted from Eng. No. W.1001 to W.5464 |
| NB.125/16D C. 73 9 | Screw, Set, securing Fan and Pulley to Hub Washer, Shakeproof, on Setscrews | | 5 5 | VV.1001 CO VV.5464 |
| | | | · | |
| C.5054 | PULLEY FOR FAN (COMPLETE WITH HUB) | | 1] | |
| C.3044 | Nipple, Grease, for Fan Pulley (Tec. NA.5701) | | 1 | Fitted to Eng. No. |
| NS.131/4D | Screw, Set, securing Fan to Pulley | | 4 | W.5465 and subs. |
| C.740 | Washer, Shakeproof, on Setscrews | | 4] | |
| C 2240 | DELT FOR FAMILIES | A 45- | 4 | Elected from East No. |
| C.22 4 0 | BELT FOR FAN PULLEY | A.157 | 1 | Fitted from Eng. No. W.1001 to W.5464 |
| C.5056 | BELT FOR FAN PULLEY | | 1 | Fitted to Eng. No. |
| | | | | VV.5465 and subs. |
| C.2240 C.5056 | BELT FOR FAN PULLEY BELT FOR FAN PULLEY | A.157 | 1 | |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|--|---|-------------------------|---------------------------------|--|
| C.2408 | FRONT ENGINE PLATE | A.158 | 1 | Fitted from Chassis No. 660001 to 660222 670001 to 670716 |
| C.2408/1 | FRONT ENGINE PLATE | | . 1 | Fitted from Chassis No. 660223 to 660934 669001 to 669002 670717 to 671837 679267 to 679270 |
| C.6805 | FRONT ENGINE PLATE | | 1] | |
| C.6806 C.6807 NS.143/6D NS.143/7D NN.543/L C.727 | Strut, supporting right hand flange of Engine Plate Strut, supporting left hand flange of Engine Plate Screw, Set, securing Struts Screw, Set, securing Struts Nut on Setscrews Washer, Shakeproof, under Nuts | | 1 1 2 2 2 2 4 | Fitted from Chassis No. 660935 to 660993 671838 to 672481 679268 only 679271 to 679815 |
| C.6256 | BRACKET FOR R.H. FRONT ENGINE MOUNTING | | 1 | |
| C.6255 | BRACKET FOR L.H. FRONT ENGINE MOUNTING | | 1 | Fitted to Chassis No. 660994 and subs. 672482 and subs. 667001 and subs. 677001 and subs. |
| NS.143/6D C.727 | Screw, Set, securing Brackets to Engine Washer, Shakeproof, on Setscrews | | 6 | |
| C.428 | FRONT ENGINE MOUNTING | A.159 | 2 | Fitted from Chassis No. 660001 to 660993 679001 to 679267 |
| FN.105/L FG.105/X 1350 | Nut, securing Engine to Mounting Studs Washer, Spring, under Nuts Piece, Packing, under Front Engine Mounting | A.160 A.161 A.162 | 4 4 2 | 670001 to 672481 679268 to 679815 669001 to 669002 ITEM I350—FITTED TO R.H. DRIVE CARS ONLY |
| C.4303 | FRONT ENGINE MOUNTING | | 2 | |
| NS.150/7D FW.108/T C.793 FG.108/X NB.131/BD NN.131/L C.725 C.6790 | Screw, Set, securing Mounting to Bracket on Engine Washer, Plain, on Setscrews Washer, Special, on Setscrews Washer, Spring, on Setscrews Screw, Set, securing Mountings to Chassis Frame Nut on Setscrews Washer, Shakeproof, under Nuts Piece, Packing, under Front Engine Mounting (FOR R.H. DRIVE FIXED HEAD AND DROP HEAD COUPE MODELS ONLY) | | 2 2 2 2 4 4 4 4 4 | Fitted to Chassis No. 660994 and subs. 672482 and subs. 679816 and subs. |
| C.478 | REAR ENGINE MOUNTING | A.163 | 1 | Fined force Charles No. |
| NB.137/10D NN.137/L FG.106/X | Bolt, securing Mounting to Chassis Frame Nut on Bolts Washer, Spring, under Nuts | | 4 4 4 | Fitted from Chassis No. 660001 to 660993 669001 to 669002 670001 to 672481 679001 to 679815 |
| C.4304 | REAR ENGINE MOUNTING | | 2 | Fitted to Chassis No. |
| C.5805 NN.137/L FG.106/X C.4308 C.4476 | Bracket Assy. for Rear Engine Mountings Nut, securing Mountings Washer, Spring, under Nuts Carrier-Bracket for Rear Mountings Shield over Rear Mountings | | 1 4 4 1 1 | 660904 and subs. 669003 and subs. 667001 and subs. 677001 and subs. |
| C.2192 NS.137/6D FG.106/X NB.131/8D NN.131/L FG.106/X | Bracket for attachment of Dynamo Screw, Set, securing Bracket to Cylinder Block Washer, Spring on Setscrews Bolt, securing Dynamo to Bracket Nut on Bolts Washer, Spring, under Nuts | | 1 3 3 2 2 2 | |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|--|--|--------------|---------------------------------|---|
| C.2341 | TORQUE ARM, L.H., SUPPORTING ENGINE AT REAR (FITTED TO R.H. DRIVE CARS ONLY) | | 1 | Fitted from Eng. No. |
| C.2343 | TORQUE ARM, R.H., SUPPORTING ENGINE AT REAR (FITTED TO L.H. DRIVE CARS ONLY) | | 1 | W.1001 to W1010 |
| C.2370 | TORQUE ARM, L.H., SUPPORTING ENGINE AT REAR (FITTED TO R.H. DRIVE CARS ONLY) | A.164 | 1 | Fitted to Eng. No. |
| C.2371 | TORQUE ARM, R.H., SUPPORTING ENGINE AT REAR (FITTED TO L.H. DRIVE CARS ONLY) | | 1 | W1011 and subs. |
| NB.131/9D NN.131/L FG.105/X NB.137/23D NN.137/L FG.106/X | Bolt, securing Torque Arm to Cylinder Block Nut on Bolts Washer, Spring, under Nuts Bolt, securing Torque Arm to Cylinder Block Nut on Bolts Washer, Spring, under Nuts | | 2 2 2 2 2 2 2 | |
| C.407 | ENGINE DAMPER (STABILIZER) | | 1 | |
| C.3486 C.3856 NB.150/22D C.792 FG.108/X NS.131/5D FG.105/X C.3489 C.3491 NB.150/16D C.792 FG.108/X NS.131/5D C.3116/2 FG.105/X C.7907 | Plate, Tapping, for Engine Damper Mounting Plece, Distance, for Engine Damper Bolt, securing Torque Arm to Damper Washer, between Torque Arm and Damper Washer, Spring, on Bolt Screw, Set, securing Damper to Chassis Frame Washer, Spring, on Setscrews Bracket, on Frame, mounting Engine Damper Piece, Distance, for Engine Damper Bolt, securing Torque Arm to Damper Washer, between Torque Arm and Damper Washer, Spring, on Bolt Screw, Set, securing Damper to Bracket Nut on Setscrews Washer, Spring, under Nuts Piece, Distance, for Engine Damper | | 1 1 1 2 2 1 1 1 1 2 2 2 1 | Fitted from Chassis No. 670001 to 670010 Fitted to Chassis No. 660001 and subs. 670011 and subs. 679001 and subs. Fitted to Chassis No. 669001 and subs. |
| Assy. 211 | GASKETS PACKAGE FOR COMPLETE ENGINE OVERHAUL | | 1 set | For use with the following Engines W.1001 to 1880, 1882 to 2255, 2257 to 2325, 2327 to 2330, 2333, 2339, 2340, 2342, 2344, 2346, 2347, 2361, 2362, 2368, 2380, 2382, 2402, 2411, 2412, 2475, 2480, 2483 |
| Assy. 213 | GASKETS PACKAGE FOR COMPLETE ENGINE OVERHAUL | | 1 set | For use with the following Engines W.1881, 2256, 2326, 2331, 2332, 2334 to 2338, 2341, 2343, 2345, 2348 to 2360, 2363 to 2367, 2369 to 2379, 2381, 2383 to 2401, 2403 to 2410, 2413 to 2474, 2476 to 2479, 2481, 2482, 2484 and subs. |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|----------------------|---|--------------|------------------|--|
| C.2242 | CYLINDER HEAD | B.1 | 1 | Fitted to the following Engines |
| | W.1001 to 1880, 1882 to 2255, 2 2361, 2362, 2368, 2380, 2382, 2 | | | to 2330, 2333, 2339, 2340, 2342, 2344, 2346, 2347, 175, 2480, 2483 |
| C.2242/1 | CYLINDER HEAD | B.1 | 1 | Fitted to the following Engines |
| · | W.1881, 2256, 2326, 2331, 2332 | | | 41, 2343, 2345, 2348 to 2360, 2363 to 2367, 2369 to 2474, 2476 to 2479, 2481, 2482, 2484 to 4690 |
| C.6733 | CYLINDER HEAD | | 1 | Fitted to Eng. No. |
| C.2250 | Gasket, between Head and Block | B.2 | 1 | W.4691 and subs. Fitted from Eng. No. |
| C.3335 | Gasket, between Head and Block | B.2 | 1 | W.1001 to W.1342 W.7207 to W.8130 Fitted from Eng. No. |
| C.7861 | Gasket, between Head and Block | | 1 | W.1343 to W.7206 Fitted to Eng. No. |
| C.2189 | Stud, on underside front end of Head | B.3 | 4 | W.8131 and subs. |
| NN.131/L | Nut on Studs | B.4 | 4 | |
| FG.105/X | Washer, Spring, under Nuts | B.5 | .4 | |
| C.2325 | Stud, on Head, for Exhaust Manifolds | B.6 | 16 | |
| NN.131/Q | Nut on Studs | B.7 B.8 | 16 16 | |
| FG.105/X C.11766 | Washer, Spring, under Nuts Stud for Inlet Manifold | D.0 | 2 | |
| C.11762 | Stud, Long, for inlet Manifold | B.9 | ī | |
| C.11763 | Stud, Short, for Inlet Manifold | B.10 | 6 | |
| C.11764 | Stud, Medium, for Inlet Manifold | B.11 | 8 | Fitted from Eng. No. |
| C.11768 | Stud, Inlet Manifold, for attachment of Carburetters | 5 | 8 | W.1001 to W.6918 Fitted to Eng. No. |
| | | | | W.6919 and subs. |
| C.2441/2 | Nut, for Inlet Manifold Studs | B.12 | | |
| FG.105/X | Washer, Spring, under Nuts | B.13 B.14 | | |
| C.2328 C.2385 | Nut, Dome, securing Cylinder Head to Block Washer 'D' under Cylinder Head Dome Nuts | B.15 | | |
| C.2312 | Ring, Seal, rear end, between Head and Cam Covers | B.16 | | |
| C.2157 | Plug, Core (Headed) on top of Cylinder Head | B.17 | 3 | |
| C.2296/2 | Washer (Copper) under Headed Core Plug | B.18 | | |
| C.317 | Plug, Core, for Exhaust face of Cylinder Head | B.19 | | |
| C.6726 | Stud, securing Camshaft Covers | | 43 | Fitted from Eng. No. |
| C.6727 | Stud, securing Camshaft Covers | | 2 \ | W.4691 to W.5652 |
| C.6727/1 | Stud, securing Camshaft Covers | | 6 | Fitted to Eng. No. W.5653 and subs. |
| | VALVES | | | |
| C.2246 | Valve, inlet | B.20 | 6 | Fitted from Eng. No. |
| C,2247 | Valve, Exhaust | B.21 | 6 | W.1001 to W.9999 F.1001 to F.2364 Fitted from Eng. No. |
| | | | | W.1001 to W.9999 F.1001 to F.2382 |
| C.8248 | Valve, Inlet | | 6 | Fitted to Eng. No. F.2365 and subs. |
| C.8313 C.7258 | Valve, Exhaust Insert for Inlet Valves | B.22 | 6 6 | Fitted to Eng. No. F.2383 and subs. |
| C.7259 | Insert for Exhaust Valves | B.23 | | |
| C.7260 | Guide for Inlet Valves | B.24 | 6 | |
| C.7261 | Guide for Exhaust Valves | B.25 | 6 | Fitted from Eng. No. |
| 0.0040 | Colle to Falour Wiles | | , | W.1001 to W.9999 F.1001 to F.2420 |
| C.8312 C.7137 | Guide for Exhaust Valves | B.26 | 6 12 | Fitted to Eng. No. F.2421 and subs. |
| C.7136 | Spring, Inner Spring, Outer | B.27 | 12 | |
| C.2181 | Seat for Springs | B.28 | | |
| C.2159 | Collar at top of Valve Stems | B.29 | | |
| C.430 | Cotter | B.30 | | |
| C.7262 | Guide for Tappets | B.31 | 12 | |
| C.7213 | Tappet Pad Adjusting (1985" thick) | B.32 B.33 | | |
| C.2243/A C.2243/B | Pad, Adjusting (·085" thick) Pad, Adjusting (·086" thick) | B.33 | | |
| C.2243/C | Pad, Adjusting (-087" thick) | B.33 | | |
| C.2243/D | Pad. Adjusting (.088" thick) | B.33 | | |
| C.2243/E | Pad, Adjusting (.089" thick) | B.33 | 12 | |
| C.2243/F | Pad, Adjusting (.090" thick) | B.33 | | NOTE: Select the Pad of the desired |
| C.2243/G | Pad, Adjusting (-091" thick) | B.33 | | thickness |
| C.2243/H | Pad, Adjusting (-092" thick) | B.33 | | |
| C.2243/I C.2243/J | Pad, Adjusting (-093" thick) Pad, Adjusting (-094" thick) | B.33 B.33 | | |
| C.2243/K | Pad, Adjusting (-095" thick) | B.33 | | |
| C.2243/L | Pad, Adjusting (.096" thick) | B.33 | | |
| TU/ L | . mai | 2.00 | , | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|--|--|---|--|
| C.2243/M C.2243/N C.2243/P C.2243/P C.2243/R C.2243/S C.2243/T C.2243/U C.2243/V C.2243/W C.2243/W C.2243/Y C.2243/Y C.2243/Y C.2243/Z | Pad, Adjusting (-097" thick) Pad, Adjusting (-098" thick) Pad, Adjusting (-099" thick) Pad, Adjusting (-100" thick) Pad, Adjusting (-101" thick) Pad, Adjusting (-102" thick) Pad, Adjusting (-103" thick) Pad, Adjusting (-104" thick) Pad, Adjusting (-105" thick) Pad, Adjusting (-105" thick) Pad, Adjusting (-106" thick) Pad, Adjusting (-106" thick) Pad, Adjusting (-108" thick) Pad, Adjusting (-108" thick) Pad, Adjusting (-109" thick) Pad, Adjusting (-109" thick) Pad, Adjusting (-100" thick) | B.33 B.33 B.33 B.33 B.33 B.33 B.33 B.33 | 12 12 12 12 12 12 12 12 12 12 12 12 12 1 | NOTE: Select the Pad of the desired thickness |
| C.2237 | CAMSHAFT, EXHAUST | B.34 | 1 | |
| C.2444 | CAMSHAFT, INLET | B.35 | 1 | |
| C.5717 C.5718 | CAMSHAFT, INLET (3/2" LIFT) CAMSHAFT, EXHAUST (3/2" LIFT) | | 1 | SUPPLIED TO SPECIAL ORDER ONLY |
| C.2288 C.2326 | Bearing for Camshafts Stud, in Head, securing Camshaft Bearing Caps | B.36 B.37 | 16 halv 16 | /es |
| C.2373 C.2323 NN.131/L FG.105/X | and Covers Dowel, Ring, for Studs Washer 'D' on top of Bearing Caps Nut, securing Bearing Caps Washer, Spring, under Nuts | B.38 B.39 | 16 16 16 16 | |
| C.2217 | COVER FOR CAMSHAFT, R.H. | B.40 | i] | Fitted to the following Engines W.1001 to 1880, 1882 to 2255, 2257 to |
| C.2218 | COVER FOR CAMSHAFT, L.H. | B.41 | 1 | 2325, 2327 to 2330, 2333, 2339, 2340, 2342, 2344, 2346, 2347, 2361, 2362, 2368, 2380, |
| C.2196 | Gasket, between Covers and Head | B.42 | 2] | 2382, 2402, 2411, 2412, 2475, 2480, 2483 |
| C.2217/1 | COVER FOR CAMSHAFT, R.H. | | 1 | Fitted to the following Engines W.1881, 2256, 2326, 2331, 2332, 2334 to 2338, 2341, 2343, 2345, 2348 to 2360, 2363 |
| C.2218/1 C.2196/1 | COVER FOR CAMSHAFT, L.H. Gasket, between Covers and Head | | 2 | to 2367, 2369 to 2379, 2381, 2383 to 2401, 2403 to 2410, 2413 to 2474, 2476 to 2479, 2481, 2482, 2484 to 4690 |
| C.6722 | COVER FOR CAMSHAFT, R.H. | | 1 } | |
| C.6723 | COYER FOR CAMSHAFT, L.H. | | 1 | Fitted from Eng. No. W.4691 to W.5652 |
| C.6735 | Gasket, between Covers and Head | | 2 | |
| C.7185 | COVER FOR CAMSHAFT, R.H. | | 1] | |
| C.7186 | COVER FOR CAMSHAFT, L.H. | | 1 | Fitted to Eng. No. W.5653 and subs. |
| C.6735 | Gasket, between Covers and Head | | 2 | |
| C.2327 FW.104/E C.1022 C.419 | Nut, Dome, securing Covers Washer (Copper) under Dome Nuts Cap, Filler, on L.H. Camshaft Cover Washer, Jointing, on Filler Cap | B.43 B.44 B.45 B.46 | 16 } 16 } 1 | 22 required for Eng. No. W.4691 and subs. |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---|---|--|-----------------------|---|
| C.2153 | REV. COUNTER ADAPTER | B.47 | 1 | SUPERSEDED BY C.2153/I |
| C.2153/1 | REV. COUNTER ADAPTER | | 1 | SUPERSEDES C.2153 |
| C.2289 CS.125/5D FW.104/E C.2176 C.2428 C.2324 | Gasket for Rev. Counter Adapter Screw, Set, securing Adapter Washer (Copper) on Setscrews Shaft for Rev. Counter Adapter Seal, Oil, on Shaft Thrower, Oil, on Shaft | B.48 B.49 B.50 B.51 B.52 B.53 | 1 2 2 1 1 | |
| | | | | |
| C.2154 | FLANGED SEALING PLUG | B.54 | 1 | SUPERSEDED BY C.2154/I |
| C.2154/1 | FLANGED SEALING PLUG | | 1 | SUPERSEDES C.2154 |
| C.2289 C.7134/2 FW.104/E | Gasket for Sealing Plug Screw, Set, securing Sealing Plug Washer (Copper) on Setscrews | B.55 B.56 B.57 | 1 2 2 | |
| | | | | |
| C.2389 | FRONT COVER AND BREATHER HOUSING | B.58 | 1 | |
| C.2391 C.2390 C.2227 C.2345 C.2327 FG.104/X | Pipe for Breather Baffle, behind front Cover Gasket, front and rear of Baffle Stud, in Cylinder Head, for Front Cover Nut, Dome, securing Front Cover Washer, Spring, under Dome Nuts | B.59 B.60 B.61 B.62 B.63 B.64 | 1 1 2 4 4 | |
| | | | | |
| | | | | |
| C.2485 | FLEXIBLE BREATHER PIPE FOR FRONT COVER | B.65 | 1 | Fined from Charle No. |
| C.2905/3 | Clip (Cheney 1A) securing Flexible Pipe to Tube in | B.66 | 1 | Fitted from Chassis No. 660001 to 660227 670001 to 670774 |
| C.2442 | Front Cover Clip Assembly, securing Flexible Pipe to Chassis Frame | B.67 | 1 | |
| C.2485/1 | FLEXIBLE BREATHER PIPE FOR FRONT | | 1) | |
| | COVER | | | Fitted to Chassis No. |
| C.2905/3 | Clip (Cheney 1A) securing Flexible Pipe to Tube in Front Cover | | 1 | 660228 and subs. 670775 and subs. |
| C.4728 | Clip Assembly, securing Flexible Pipe to Chassis Frame | | 1 | |
| NS.319/5H | Screw, Set (Cheese Head) securing Clip Assembly to Flexible Pipe | B.68 | 1 | |
| NN.119/L | Nut on Setscrew Screw, Set, in Clip Assembly, securing Flexible Pipe | B.69 B.70 | 1 | |
| NS.131/4F | Screw, Sec, in City Assembly, securing hiskible rive | D.7 0 | • | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|--|------------------------------|------------------|--|
| C.2333 | OIL PIPE FROM CYLINDER BLOCK TO HEAD | B.73 | 1] | Fitted from Eng. No. |
| C.2353 C.2296/4 | Union, securing Oil Pipe to Head and Block Washer (Copper) on Union Screws | B.74 B.75 | 3 6 | W.1001 to W.4019 |
| C.5849 | OIL PIPE FROM CYLINDER BLOCK TO HEAD | | 1] | Fitted to Eng. No. |
| C.5846 C.4146 | Union, securing Oil Pipe to Head and Block Washer (Copper) on Union Screws | | 3 6 | W.4020 and subs. |
| C.2213 | EXHAUST MANIFOLD, FRONT | B.76 | 1 | |
| C.2214 | EXHAUST MANIFOLD, REAR | B.77 | 1 | |
| C.2369 | Stud, In Manifold Flanges, for attachment of Exhaust Pipes | B.78 | 8 | |
| C.2318 C.495 NN.137/Q FG.106/X | Gasket for Exhaust Manifolds Gasket for Outlet Flanges Nut, securing Exhaust Pipes to Manifolds Washer, Spring, under Nuts | B.79 B.80 B.81 B.82 | 2 2 8 8 | |
| C.2377 | INLET MANIFOLD | B.83 | 1 | SUPERSEDED BY C.4953 |
| C.4953 | INLET MANIFOLD | | 1 | SUPERSEDES C.2377 |
| C.2382 C.11760 | Stud, in Manifold, for attachment of Water Outlet Elbow Stud, In Manifold, for attachment of Water Outlet | B.84 | 1 1) | Fitted from Eng. No. W.1001 to W.1250 |
| C.11765 | Elbow Stud, in Manifold, for attachment of Water Outlet Elbow | | 1 } | Fitted to Eng. No. W.1251 and subs. |
| C.2251 | Gasket, for Inlet Manifold | B.85 | 1 | Fitted from Eng. No. W.1001 to W.1195 |
| C.4008 | Gasket, for Inlet Manifold | B.85 | 1 | Fitted to Eng. No. W.1196 and subs. |
| C.799 C.2296/1 | Plug, in inlet Manifold Washer (Copper) on Plugs | B.86 B.87 | 4 | |
| C.2378 | WATER OUTLET ELBOW | | 1 | Fitted from Eng. No. W.1001 to W.1250 |
| C.2449 | WATER OUTLET ELBOW | B.88 | 1 | Fitted to Eng. No. |
| C.2380 | Gasket, for Water Outlet Elbow | B.89 | 1 | W.1251 and subs. |
| C.2379 | FLANGE FOR STARTING PIPE | B.90 | 1 | |
| C.2381 C.2383 C.4202/1 FG.104/X | Gasket, for Starting Pipe Flange Stud, for Starting Pipe Flange Nut on Studs Washer, Spring, under Nuts | B.91 B.92 B.93 B.94 | 1 4 4 | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|---|--|------------------|---|
| C.2388 | STARTING PIPE | B.95 | 1 | |
| C.2387 C.2296/5 | Bolt, Banjo, securing Pipe to Flange Washer (Copper) at each side of Banjo | B.96 B.97 | 1 2 | |
| C.4204 | ANTI-BLOW-BACK VALVE IN STARTING PIPE BANJO BOLT | | 1] | Fitted to Eng. No. W.2449 and subs. |
| C.4205 | Spring for Anti-Blow-Back Valve | | 1 J | |
| C.168 | THERMOSTAT ON OUTLET ELBOW | B.98 | 1 | Fitted from Eng. No. W.1001 to W.1250 |
| CS.419/3H C.723 | Screw, Set, securing Thermostat to Manifold Washer, Shakeproof, on Setscrews | B.99 B.100 | 2 2 | VV.1007 to VV.1250 |
| C.2474 | THERMOSTAT ON OUTLET ELBOW | | 1 | Fitted to Eng. No. W.1251 and subs. |
| C.2475 C.7134/1 C.723/A | Gasket for Thermostat Screw, Set, securing Thermostat to Manifold Washer, Shakeproof, on Setscrews | | 1 3 3 | |
| C.4380 | SPARKING PLUG (CHAMPION L.10S) | | 6 | FOR 7:1 COMPRESSION RATIO ENGINES |
| C.6754 | SPARKING PLUG (CHAMPION L.11S) | B.101 | 6 | FOR 8:1 COMPRESSION RATIO ENGINES OR FOR 7:1 COM- PRESSION RATIO ENGINES WHEN USED FOR RACING PURPOSES |
| C.6742 | SPARKING PLUG (CHAMPION NA.10) | | 6 | FOR 8:1 COMPRESSION RATIO ENGINES WHEN USED FOR RACING PURPOSES |
| C.6741 | SPARKING PLUG (CHAMPION NA.12) | | 6 | FOR 9:1 COMPRESSION RATIO ENGINES |
| | HIGH TENSION LEADS | | | |
| C.2431 C.2432 C.2433 C.2434 C.2435 C.2436 C.2437 | Lead H.T. No. 1 Lead H.T. No. 2 Lead H.T. No. 3 Lead H.T. No. 4 Lead H.T. No. 5 Lead H.T. No. 6 Lead H.T. to Coil | B.102 B.103 B.104 B.105 B.106 B.107 | 1 | Fitted from Eng. No. W.1001 to W.6696 |
| C.1575 | TERMINAL FOR SPARKING PLUG LEADS | B.109 | 6 | Fitted from Eng. No. W.1001 to W.6372 |
| C.5479 | TERMINAL FOR SPARKING PLUG LEADS | | 6 | Fitted to Eng. No. W.6373 and subs. |
| C.2451 | CONDUIT FOR H.T. LEADS | B.110 |) 1 | |
| C.2454 | CLIP FOR H.T. LEADS | B.111 | 2 | Fitted from Eng. No. W.1001 to W.6696 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
|--|--|--------------|---|--|---------------------------------------|
| 3204 | GROMMET, IN CLIP, FOR H.T. LEADS | B.112 | 2 | Fitted from Eng. No. W.1001 to W.6696 | |
| NB.137/12D NN.137/L FG.106/X | Bolt, mounting Starter Motor Nut on Bolts Washer, Spring, under Nuts | | 2 2 2 | | er v |
| | HIGH TENSION LEADS | ٠ | | | |
| C.4976 C.4977 C.4978 C.4979 C.4980 C.4981 | Lead, H.T. No. 1 Lead, H.T. No. 2 Lead, H.T. No. 3 Lead, H.T. No. 4 Lead, H.T. No. 5 Lead, H.T. No. 6 | | 1 | Fitted to Eng. No. W.6697 and subs. | |
| C.2437 | Lead, H.T. to Coil | | 1 J | | |
| C.4982 | CLIP FOR H.T. LEADS | | 1 | Fitted to Eng. No. W.6697 and subs. | |
| C.4983 | SPACER (THICK) FOR H.T. LEADS | | 2 | Fitted to Eng. No. | |
| C.4984 | SPACER (THIN) FOR H.T. LEADS | | 3 ∫ | W.6697 and subs. | |
| Assy. 311 | GASKETS PACKAGE FOR DECARBONISINE ENGINE | N G | 1 set | For use with the following Engines W.1001 to 1880, 1882 to 2255, 225 2327 to 2330, 2333, 2339, 2340, 2346, 2347, 2361, 2362, 2368, 23 2402, 2411, 2412, 2475, 2480, 2483 | 7 to 2325, 342, 2344, 80, 2382, |
| Assy. 313 | GASKETS PACKAGE FOR DECARBONISIN ENGINE | G | 1 set | For use with the following Engines W.1881, 2256, 2326, 2331, 2332, 2338, 2341, 2343, 2345, 2348 to 2 to 2367, 2369 to 2379, 2381, 2383 2403 to 2410, 2413 to 2474, 2476 2481, 2482, 2484 and subs. | 2334, to 360, 2363 to 2401, |

TIMING GEAR

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
|--|--|--|-----------------------|--|--|
| C.2169 | SPROCKET FOR CAMSHAFT | C.1 | 2 | | |
| C.2329 | Plata Adjusting in Cam Sprockets | C.2 | 2 | | |
| C.2329 C.2191 | Plate, Adjusting, in Cam Sprockets Plate, Clamping, in Cam Sprockets | C.3 | 2 | | |
| C.2193 | Circlip, retaining Clamping Plates | C.4 | 2 | | |
| C.2178 | Pin, Guide, through Clamping Plates | C.5 | 2 | | |
| C.2194 | Washer, Star, on Guide Pin | C.6 | 2 | | |
| C.2261 | Circlip, securing Guide Pin | C.7 | 2 | | |
| C.2310 | Screw, Set, securing Sprocket Assembly to Camshafts | C.8 | 4 | | |
| C.2207 | MOUNTING BRACKET, FRONT | C.9 | 1 | Fitted from Eng. No. W.1001 to W.1913 | |
| C.4128/1 | MOUNTING BRACKET, FRONT | | 1 | Fitted from Eng. No. W.1914 and subs. | |
| C.2208 | MOUNTING BRACKET, REAR | €.10 | 1 | Fitted from Eng. No. W.1001 to W.1913 | |
| C.4129 | MOUNTING BRACKET, REAR | | 1 | Fitted to Eng. No. W.1914 and subs. | |
| C.2182 | Stud, in Rear Bracket | C.11 | 4 | | |
| NN.125/L | Nut, on Studs | C.12 | | | |
| C.724 | Washer, Shakeproof, under Nuts | C.13 | | | |
| C.7424 | Bolt (Long) securing Brackets to Cylinder Block | C.14 | | | |
| C.2166 | Bolt (Short) securing Brackets to Cylinder Block | C.15 | | | |
| C.740 | Washer, Shakeproof, on Bolts | C.16 | | | |
| C.2188 | Pin, Plunger, in Front Bracket, locking Adjusting Plate | C.17 | - [| Fitted from Eng. No. | |
| C.2297 | Spring in Plungers | C.18 | 2 | W.1001 to W.2330 | |
| C.4405 | Pin, Plunger, in Front Bracket, locking Adjusting | 00 | 7 (| Frank and Frankla | |
| | Plate | 100 | ` } | Fitted to Eng. No. | |
| C.2297 | Spring in Plunger | | 1) | W.2331 and subs. | |
| | | | | | |
| C.2308 | IDLER SPROCKET (21 TEETH) | C.19 | . 1 | | |
| C.2319 | Bush for Idler Sprocket | | 1 | | |
| 1 | | | | | |
| C.2177 | ECCENTRIC SHAFT THROUGH IDLER SPROCKET | C.20 | 1 | | |
| C.2282 | | | | | |
| | Plug (Screwed) in end of Eccentric Shaft | C.21 | 1 | • | |
| C.2275 | Plug (Screwed) in end of Eccentric Shaft ADJUSTING PLATE ON ECCENTRIC SHAFT | C.21 | | Fitted from Eng. No. | |
| | | | | W.1001 to W.2330 Fitted to Eng. No. | |
| C.2275 C.4404 | ADJUSTING PLATE ON ECCENTRIC SHAFT ADJUSTING PLATE ON ECCENTRIC SHAFT | C.22 | 1 | W.1001 to W.2330 | |
| C.2275 | ADJUSTING PLATE ON ECCENTRIC SHAFT | | 1 1 1 | W.1001 to W.2330 Fitted to Eng. No. | |
| C.2275 C.4404 NN.243/L | ADJUSTING PLATE ON ECCENTRIC SHAFT ADJUSTING PLATE ON ECCENTRIC SHAFT Nut, securing Adjusting Plate Washer, locking Nut | C.22 | 1 1 1 | W.1001 to W.2330 Fitted to Eng. No. | |
| C.2275 C.4404 NN.243/L C.2280 | ADJUSTING PLATE ON ECCENTRIC SHAFT ADJUSTING PLATE ON ECCENTRIC SHAFT Nut, securing Adjusting Plate | C.22 C.23 C.24 | 1 1 1 | W.1001 to W.2330 Fitted to Eng. No. | |
| C.2275 C.4404 NN.243/L C.2280 | ADJUSTING PLATE ON ECCENTRIC SHAFT ADJUSTING PLATE ON ECCENTRIC SHAFT Nut, securing Adjusting Plate Washer, locking Nut | C.22 C.23 C.24 | 1 1 1 | W.1001 to W.2330 Fitted to Eng. No. | |
| C.2275 C.4404 NN.243/L C.2280 C.2309 | ADJUSTING PLATE ON ECCENTRIC SHAFT ADJUSTING PLATE ON ECCENTRIC SHAFT Nut, securing Adjusting Plate Washer, locking Nut INTERMEDIATE SPROCKET (20 TEETH) | C.22 C.23 C.24 | 1 1 1 1 1 1 | W.1001 to W.2330 Fitted to Eng. No. | |
| C.2275 C.4404 NN.243/L C.2280 C.2309 C.2320 C.2307 | ADJUSTING PLATE ON ECCENTRIC SHAFT ADJUSTING PLATE ON ECCENTRIC SHAFT Nut, securing Adjusting Plate Washer, locking Nut INTERMEDIATE SPROCKET (20 TEETH) Bush for Intermediate Sprocket INTERMEDIATE SPROCKET (28 TEETH) | C.22 C.23 C.24 C.25 | 1 1 1 1 1 | W.1001 to W.2330 Fitted to Eng. No. | |
| C.2275 C.4404 NN.243/L C.2280 C.2309 C.2320 | ADJUSTING PLATE ON ECCENTRIC SHAFT ADJUSTING PLATE ON ECCENTRIC SHAFT Nut, securing Adjusting Plate Washer, locking Nut INTERMEDIATE SPROCKET (20 TEETH) Bush for Intermediate Sprocket | C.22 C.23 C.24 | 1 1 1 1 1 | W.1001 to W.2330 Fitted to Eng. No. | |
| C.2275 C.4404 NN.243/L C.2280 C.2309 C.2320 C.2307 | ADJUSTING PLATE ON ECCENTRIC SHAFT ADJUSTING PLATE ON ECCENTRIC SHAFT Nut, securing Adjusting Plate Washer, locking Nut INTERMEDIATE SPROCKET (20 TEETH) Bush for Intermediate Sprocket INTERMEDIATE SPROCKET (28 TEETH) | C.22 C.23 C.24 C.25 | 1 1 1 1 1 | W.1001 to W.2330 Fitted to Eng. No. | |
| C.2275 C.4404 NN.243/L C.2280 C.2309 C.2320 C.2307 C.926 | ADJUSTING PLATE ON ECCENTRIC SHAFT ADJUSTING PLATE ON ECCENTRIC SHAFT Nut, securing Adjusting Plate Washer, locking Nut INTERMEDIATE SPROCKET (20 TEETH) Bush for Intermediate Sprocket INTERMEDIATE SPROCKET (28 TEETH) Key, locking Intermediate Sprocket SHAFT, HOLDING INTERMEDIATE | C.22 C.23 C.24 C.25 C.26 C.27 | 1 1 1 1 1 | W.1001 to W.2330 Fitted to Eng. No. | |

TIMING GEAR

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---|--|--------------------------------|------------------|---|
| C.2256 | TIMING CHAIN, TOP | C.30 | 1 | en e |
| C.2255 | TIMING CHAIN, BOTTOM | C.31 | 1 | |
| | | | | |
| C.2158 | GUIDE BRACKET FOR CHAIN TENSIONER | C.32 | 1 | Fitted from Eng. No. W.1001 to W.2213 |
| C.4102 | GUIDE BRACKET FOR CHAIN TENSIONER | | 1 | Fitted from Eng. No. W.2214 to W.4051 |
| C.6728 | GUIDE BRACKET FOR CHAIN TENSIONER | | 1 | Fitted to Eng. No. W.4052 and subs. |
| C.2257 | OIL SPRAY BRACKET | C.33 | 1 · | Fitted from Eng. No. W.1001 to W.3486 |
| C.5143 | OIL SPRAY BRACKET | | 1) | |
| C.5144 C.5145 C.5146 | Ball for Oil Spray Valve Seat for Ball Spring behind Ball | | 1 | Fitted to Eng. No. W.3487 and subs. |
| C.2300 | Gasket, between Oil Spray Bracket and Cylinder Block | C.34 | 1 | |
| NS.125/5D C.724 | Screw, Set, securing Oil Spray Bracket to Block Washer, Shakeproof, on Setscrews | C. 3 5 C. 3 6 | 2 2 | |
| | | | | |
| C.2156 | TIMING CHAIN TENSIONER | C.37 | 1 | Fitted from Eng. No. W.1001 to W.2213 |
| C.4100 | TIMING CHAIN TENSIONER | | 1 | Fitted from Eng. No. W.2214 to W.9999 F.1001 to F.2772 |
| C.8245 | TIMING CHAIN TENSIONER | | 1 | Fitted to Eng. No. F.2773 and subs. |
| | | | | % . |
| C.2284 | SPRING FOR CHAIN TENSIONER | C.38 | 1 | Fitted from Eng. No. W.1001 to W.2213 |
| C.4101 | SPRING FOR CHAIN TENSIONER | | 1 | Fitted to Eng. No. W.2214 and subs. |
| C.2186 C.2179 | Pin, securing Spring in Tensioner Pin, securing Spring and Tensioner to Oil Spray | C.39 C.40 | 1} | Fitted from Eng. No. W.1001 to W.4051 |
| C.6729 C.6732 | Bracket Retainer Assy., securing Spring in Tensioner Pin, securing Spring and Tensioner to Oil Spray | | 1 } | Fitted to Eng. No. W.4052 and subs. |
| | Bracket | | | i je |
| C.2299 | VIBRATION DAMPER FOR LOWER TIMING CHAIN | C.41 | 1 | Fitted from Eng. No. W.1001 to W.1940 |
| C.4103 | VIBRATION DAMPER FOR LOWER TIMING CHAIN | | 1 | Fitted from Eng. No. W.1941 to W.5494 |
| C.6819 | VIBRATION DAMPER FOR LOWER TIMING CHAIN | | 1, | Fitted to Eng. No. W.5495 and subs. |
| C.2180 | BRACKET MOUNTING VIBRATION DAMPER (LOWER CHAIN) | C.42 | 1 | |
| NS.325/3H | Screw, Cheese Head, securing Vibration Damper to Bracket | C.43 | 2 | Fitted from Eng. No. W.1001 to W.1940 |
| C. 724 NS.131/5D C. 740 | Washer, Shakeproof, on Screws Screw, Set, securing Mounting Bracket Washer, Shakeproof, on Setscrews | C.44 C.45 C.46 | 2 2 2 | |

TIMING GEAR

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
|------------------------------|--|--------------|------------------|--|----|
| C.4104 | BRACKET MOUNTING VIBRATION DAMPER (LOWER CHAIN) | | 1 | Fitted from Eng. No. | |
| C.4705 NS.131/5D C.740 | Rivet, securing Vibration Damper to Bracket Screw, Set, securing Mounting Bracket Washer, Shakeproof, on Setscrews | | 3 2 2 | W.1941 to W.5494 | |
| C.6818 | BRACKET MOUNTING VIBRATION DAMPER (LOWER CHAIN) | | 1 | Fitted to Eng. No. | ` |
| C.6820 NS.131/5D C.740 | Rivet, securing Vibration Damper to Bracket Screw, Set, securing Mounting Bracket Washer, Shakeproof, on Setscrews | | 3 2 2 | W.5495 and subs. | |
| C.4126 | DAMPER FOR UPPER TIMING CHAIN | | 2 🛥 | Fitted from Eng. No. W.1914 to W.5416 | |
| C.6701 | DAMPER FOR UPPER TIMING CHAIN | | 2 - | Fitted to Eng. No. W.5417 and subs. | |
| C.4127 | CARRIER FOR UPPER DAMPERS | | 2 | Fitted to Eng. No. | |
| C.4705 | Rivet, securing Upper Dampers to Carriers | | 4) | W.1914 and subs. | |
| | | | | | - |
| C.2238 | FRONT TIMING COVER | C.47 | 1 | Fitted from Eng. No. W.1001 to W.1913 | |
| C.2238/1 | FRONT TIMING COVER | | 1 , | Fitted to Eng. No. W.1914 and subs. | |
| C.2195 | Gasket, between Timing Cover and Cylinder Block | C.48 | 2 halves | Fitted from Eng. No. W.1001 to W.1913 | |
| C.4466 | Gasket, between Timing Cover and Cylinder Block | | 2 halves | Fitted to Eng. No. | |
| C.4833/1 | Piece, Distance, for Timing Cover | | 1 | W.1914 and subs. Fitted from Eng. No. W.3033 to 3493 | |
| C.4833/2 | Piece, Distance, for Timing Cover | | 3 | W.3592 and subs. Fitted from Eng. No. W.1001 to W.1913 | |
| C.2306 NB.131/9D | Seal, Oil, between Timing Cover and Oil Sump Bolt, securing Timing Cover to Block | C.49 C.50 | 1 | 77.1001 60 77.1710 | 4 |
| NB.131/14D | Bolt, securing Timing Cover to Block | C.51 | _ | One only required for Eng. No. W.1914 and subs. | |
| NB.131/16D | Bolt, securing Dynamo Adjusting Link and Timing Cover to Block | C.52 | 1 | | |
| NB.131/21D | Bolt, securing Water Pump and Timing Cover to Block | C.53 | 6 | | |
| FG.105/X C.2184 | Washer, Spring, on Bolts Stud, in Front Cover, for attachment of Water Pump | C.54 C.55 | 10 3 | | |
| C.2183 C.2185 | Stud, Front Cover to Cylinder Block Stud, Front Cover to Oil Sump | C.56 C.57 | 2 | | :: |
| NN.131/L FG.105/X | Nut on Studs Washer, Spring, under Nuts | C.58 C.59 | 9 | | |
| C.2409 | Stud, for attachment of Front Cover and Engine | C.60 | | Fitted from Eng. No. | |
| C.2410 | Plate Stud, for attachment of Front Cover and Engine Plate | C.61 | 1 | W.1001 to W.1913 | |
| C.4761 | Stud, for attachment of Front Cover and Engine Plate Nut on Studs | | 5 | Fitted to Eng. No. W.1914 and subs. | |
| NN.137/L | 1400 011 00003 | C.62 | | | |

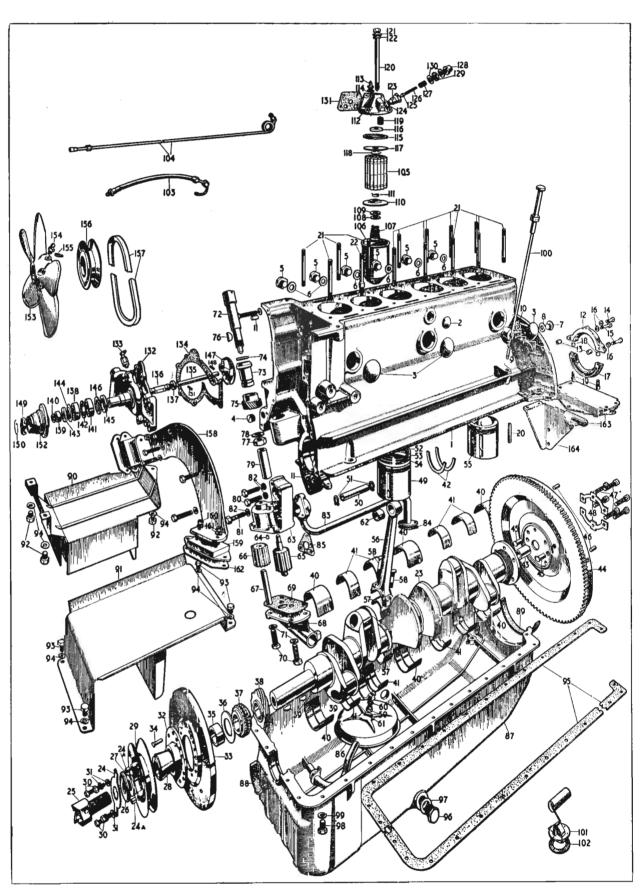


PLATE A.

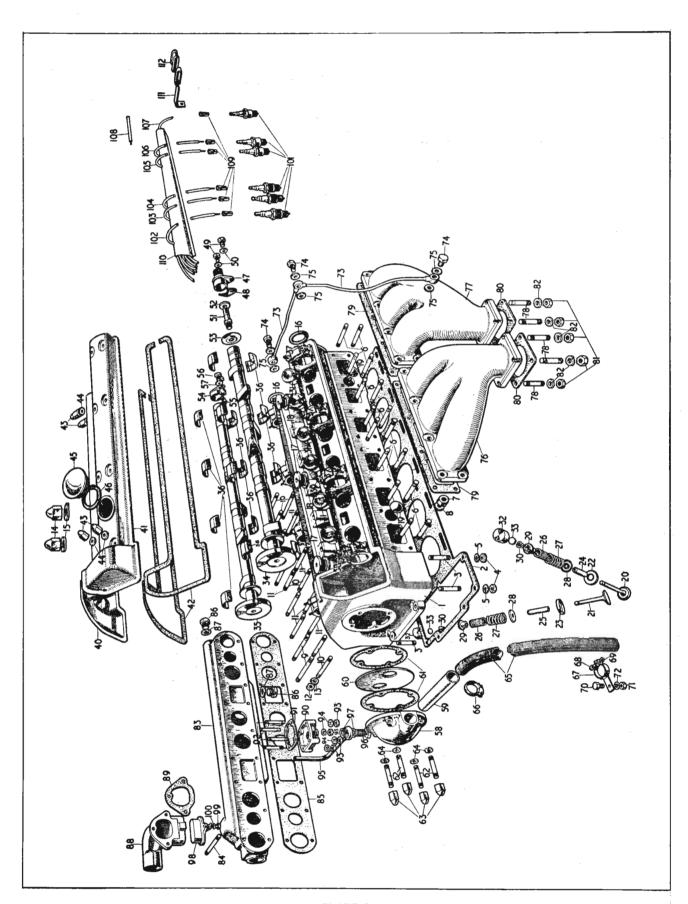


PLATE B.

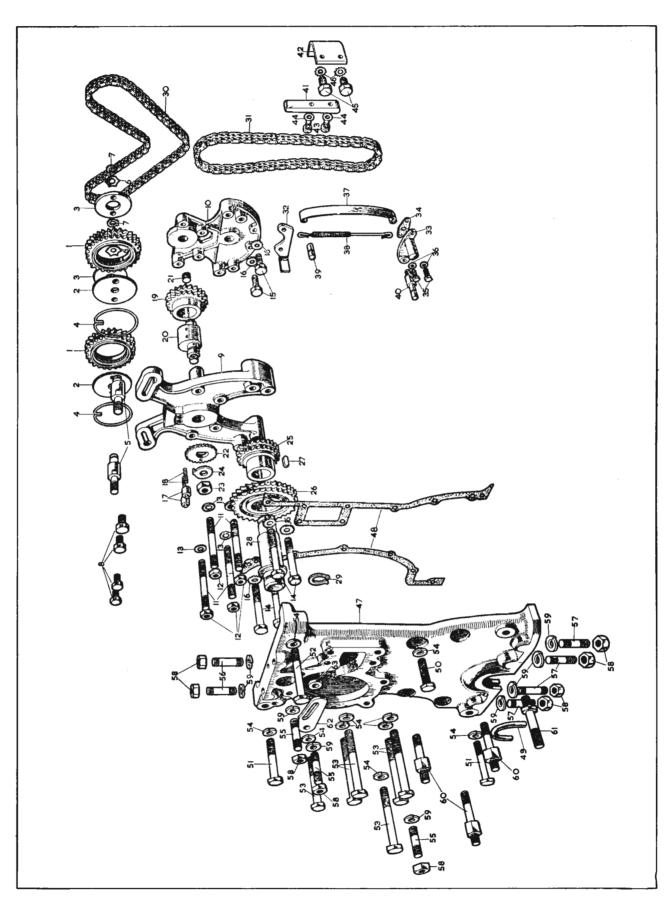


PLATE C.

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---------------------------|--|--------------|------------------|--|
| C.2367/A | FRONT CARBURETTER COMPLETE (S.U. H.6) | D.1 | 1 | Fitted to the following Engines W.1001 to W.3449 |
| C.2367/B | REAR CARBURETTER COMPLETE (S.U. H.6) | D.2 | 1 | Also to W.3451 to 3469, 3471 to 3473, 3475 to 3921, 3923 to 3935, 3937 to 3974, 3976 to 3995, 3998, 4000 to 4095 |
| C.6739 | Needle (RF) for 7:1 and 8:1 Compression Ratio Engines | D.3 | 2 | |
| C.6740 | Needle (RB) for 9:1 Compression Ratio Engines | D.3 | 2 | |
| 5684 | Screw, Locking Needle (468) | D.4 | 2 | |
| 1730 1731 | Disc, on Throttle Spindles (3280) | D.5 | 2 1 | |
| 4765 | Spindle, Throttle, Front Carburetter (3281) Spindle, Throttle, Rear Carburetter (4765) | D.6 D.7 | 1 | |
| 619 | Stop, on Throttle Spindles (199/3) | D.8 | 2 | |
| 5780 | Screw, adjusting Throttle Stops (521) | D.9 | 2 | |
| 5682 1635 | Spring, locking Adjusting Screws (451) | D.10 | | |
| 5803 | Lever on Throttle Spindles (3120/1) Bolt, securing Lever to Spindles (694) | D.11 | 2 2 | |
| 5614 | Nut on Bolts (156) | | 2 | |
| 5648 | Washer, Spring, under Nuts (246) | | 2 | |
| 4669 | Body only, Front Carburetter (4669/1) | D.12 | | |
| 4669 4490 | Body only, Rear Carburetter (4669) Union, Ignition, for Suction Pipe (4490) | D.13 D.14 | | |
| 1208 | Float-Chamber for Front Carburetter (1208) | D.15 | | |
| 1685 | Float-Chamber for Rear Carburetter (3256) | D.16 | 1 | |
| 4761 | Lid for Float Chambers (4761) | D.17 | | |
| 1147 1867 | Gasket under Lids (1147) Nut, Cap, securing Lids (1867) | D.18 D.19 | | |
| 1148 | Washer (Plain) on Cap Nuts (1148) | D.20 | | |
| 1928 | Washer (Serrated) on Cap Nuts (1928) | D.21 | 2 | |
| 698 | Bolt, Banjo, securing Feed Pipe to Lids (698) | D.22 | | |
| 141 1090 | Washer (Fibre) on Banjo Belts (141) Float (1123) | D.23 D.24 | | |
| 1088 | Needle-and-Seat, controlling Petrol Flow | D.25 | | |
| 1980 | (1121/1859) Lever, Hinged, operating Needle (1980) | D.26 | . 2 | |
| 1153 | Pin, securing Hinged Lever to Lid (1153) | D.27 | 7 2 | |
| 479 | Filter in Lid (139) | D.28 | 32 | |
| 1797 4 387 | Suction Chamber (complete with Piston) (4092/2B) Spring, Return, for Piston (4387) | D.29 D.30 | | |
| 3071 | Washer, Thrust, at bottom of Return Spring | D.31 | | |
| 5606 | (3071) Screw (Long) securing Suction Chambers (145) | D.32 | 2 2 | |
| 5618 | Screw (Short) securing Suction Chambers (175) | D.33 | | |
| 4602 | Plunger for Oil Damper, complete (4602) | D.34 | | |
| 141 1654 | Washer (Fibre) on Plunger (141) | D.35 D.36 | | |
| 1658 | Jet and Head Unit (3155/1-7) Screw, adjusting Jet and Head Units (3158) | D.37 | | |
| 403 | Ring (Brass) sealing Jet (117) | D.38 | 32 | |
| 404 | Ring (Cork) sealing Jet (118) | D.39 | | |
| 1806 17 4 6 | Washer, Gland (Plastic) for Jet (4474) Washer, Gland (Brass) for Jet (3307) | D.40 D.41 | | |
| 1684 | Spring, Gland, for Jet (3248) | D.42 | • • | |
| 399 | Bearing for Jet (Top Half) (115) | D.43 | 32 | |
| 1656 | Bearing for Jet (Bottom Half) (3156) | D.4 | | |
| 5535 5536 | Washer (Copper) for Top Bearing (122) Washer (Copper) for Bottom Bearing (123) | D.45 D.46 | | |
| 397 | Screw, securing Jet Assembly in Carburetter Body (113) | D.47 | | |
| 1661 | Nut, Ćap on bottom Bearing (3160) | D.48 | | |
| 1179 1672 | Bolt, securing Front Float Chamber to Body (1541/2) Bolt, securing Rear Float Chamber to Body (3209) | D.4 | 1 9 1 | |
| 4642 | Washer (Alum) on Bolts (4642) | D.50 | | |
| 421 | Washer (Fibre) on Bolts (130) | D.5 | | |
| 1669 | CARBURETTER SOLENOID COM- PLETE (3196) | D.5 | 2 1 | |
| 1671 | Plunger and Valve (3204/5) | D.5 | 3 1 | |
| 1648 | Spring, Return, for Plunger and Valve (3146) | D.5 | | |
| 1670 | Circlip, Half-Round, securing Solenoid Core in Body | D.5 | | |
| 1403 | (3199) | | , , | |
| 1692 | Clip (Wire) securing Solenoid to Carburetter (3265) | D.5 | 62 | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | - |
|--------------|--|--------------|------------------|---|---|
| 1638 | CARBURETTER THERMOSTAT JET | D.57 | 1 | | |
| 1055 | Washer (Fibre) on Jet (1055) | D.58 | 1 | | |
| 1643 | AUXILIARY STARTING NEEDLE (WITH BRIDGE PIECE AND COMPRESSION SPRING) (3134/435/8) | | 1 | | |
| 3127 | Spring, Compression (3127) | D.60 | 1 | | |
| 1453 | Screw, securing Needle (1453) | D.61 | | | |
| 1617 3139 | Washer, Spring, on Screws (3003) Finger, Spring, locating Adjusting Screw on Needle (3139) | D.62 D.63 | | | |
| 4393 | SHAFT, COUPLING FRONT AND REAR CARBURETTERS (4393/3) | D.64 | 1 | | |
| 4334 | Adapter on Shaft (4334) | D.65 | 2 | | |
| 5801 | Bolt, securing Adapters to Shaft (669) | 2,00 | 4 | | |
| 673 5811 | Nut, on Bolts (673) | | 4 4 | | |
| 3611 | Washer, Spring, under Nuts (868) | | 7 | | |
| C.3597 | FLEXIBLE COUPLING ON REAR CARBURETTER (S.U.681) | D.66 | 1 | | |
| C.3689 | CONNECTING SHAFT BETWEEN FLEX- IBLE COUPLING AND BRACKET ON SCUTTLE (S.U.4626) | | , 1 | Fitted from Chassis No. 660001 to 660875 670001 to 671460 | |
| C.5856 | CONNECTING SHAFT BETWEEN FLEX- IBLE COUPLING AND BRACKET ON SCUTTLE (S.U.4626/I) | | 1 | Fitted to Chassis No. 660876 and subs. 671461 and subs. | |
| 1635 | Lever on Connecting Shaft (3120/1) | D.68 | 1 | | |
| 5803 | Bolt, securing Lever to Shaft (694) | | 1 | | |
| 5614 5648 | Nut on Bolt (156) Washer, Spring, under Nut (246) | | 1. | | |
| 5658 | Ball-Pin in Lever (306/A) | D.69 | 1 | | |
| 310 | Spring, Return, for Carburetter Control | D 70 | 1 2 | | |
| C.4475 | Gasket, between Carburetter Flanges and Air Cleaners | D.70 | 2 | | |
| C.2368 | Gasket, between Carburetter Flanges and Inlet Manifold | AD.67 | 2 | | |
| C.3893 | OVERFLOW PIPE FOR FRONT CAR- BURETTER | D.71 | 1 | | |
| C.3894 | OVERFLOW PIPE FOR REAR CAR- BURETTER | D.72 | 1 | | |
| C.3895 | Clip, securing Overflow Pipes at bottom | | 1 | | |
| C.3810 | FEED PIPE FROM CARBURETTERS TO FLEXIBLE PIPE | D.73 | 1 | | |
| C.3629 | FLEXIBLE PIPE ASSEMBLY | D.74 | 1 | | |
| C.2388 | STARTING PIPE | D.75 | 1 | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--------------------------|--|----------------|------------------|--|
| C.5185 | FRONT CARBURETTER COMPLETE | AD.1 | 1] | |
| | (S.U. H.6) | | j | Fitted to the following Engines W.4096 and subs. |
| C 540/ | | 400 | _ } | Also to W.3450, W.3470, W.3474, W.3922, |
| C.5186 | REAR CARBURETTER COMPLETE (S.U. H.6) | AD.2 | .1 | W.3936, W.3975, W.3996, W.3997 and W.3999 |
| C.6739 | Needle (R.F.) for 7:1 and 8:1 Compression | AD.3 | 2 1 | |
| | Ratio Enginés | | } | OPEN 2-SEATER ONLY |
| C.6740 C.7858 | Needle (R.B.) for 9: 1 Compression Ratio Engines Needle (W.O.2) | AD.3 | 2 2 | FIXED HEAD AND DROP HEAD |
| 5684 | Screw, locking Needle (468) | AD.4 | 2 | MODELS ONLY |
| 1730 | Disc on Throttle Spindles (3280) | AD.5 | 2 | |
| 1358 | Screw, securing Discs (1358) | AD.6 | 4 | |
| 1731 4765 | Spindle, Throttle, Front Carburetter (3281) Spindle, Throttle, Rear Carburetter (4765) | AD.7 | .1 1 | |
| 619 | Stop on Throttle Spindles (199/3) | AD.8 | 2 | |
| 5780 | Screw, adjusting Throttle Stops (521) | AD.9 | 2 | |
| 5682 | Spring, locking Adjusting Screws (451) | AD.10 | 2 | |
| 1635 | Lever on Throttle Spindles (3120/1) | AD.11 | 2 | |
| 5803 5614 | Bolt, securing Levers to Spindles (694) Nut on Bolts (156) | | 2 | |
| 4847 | Washer, Spring, under Nuts (4847) | | 2 | |
| 4669 | Body only, Front Carburetter (4669/1) | AD.12 | 1 | |
| 4670 | Body only, Rear Carburetter (4669/4 | | 1 | |
| 44 90 | Union, Ignition, on Front Carburetter (4490) | AD.14 | 1 | |
| 1208 | Float-Chamber for Front and Rear Carburetters (1208) | AD.15 | 2 | |
| 4761 | Lid for Float Chambers (4761) | AD.16 | 2 | |
| 1147 | Gasket under Lids (1147) | AD.17 | 2 | |
| 1867 | Nut, Cap securing Lids (1867) | AD.18 | 2 | |
| 1148 | Washer, Plain, under Cap Nuts (1148) Washer (Fibro) Serrated under Cap Nuts (1938) | AD.19 AD.20 | 2 | |
| 1928 698 | Washer (Fibre), Serrated, under Cap Nuts (1928) Bolt, Banjo, securing Feed Pipe to Lids (698) | AD.21 | 2 | |
| 141 | Washer (Fibre), on Banjo Bolts (141) | AD.22 | 4 | |
| 1090 | Float (1123) | AD.23 | 2 | |
| 1088 | Needle-and-Seat, controlling Petrol Flow (1121/1859) | AD.25 | 2 2 | |
| 1980 1153 | Lever, Hinged, operating Needle (1980) Pin, securing Hinged Lever to Lid (1153) | AD.26 | 2 | |
| 479 | Filter, in Lid (139) | AD.27 | 2 | |
| 1797 | Suction-Chamber (complete with Piston) (4092/2) | AD.28 | 2 | |
| 4387 2074 | Spring, Return, for Piston (4387) | AD.29 AD.30 | 2 | |
| 3071 5618 | Washer, Thrust, at bottom of Return Spring (3071) Screw, securing Suction Chambers (175) | AD.31 | 2 6 | |
| 4602 | Plunger, Oil Damper, complete (4602) | AD.32 | 2 | |
| 141 | Washer (Fibre), on Plunger (141) | AD.33 | 2 | |
| 1654 | Jet and Head Unit (3155/1-7) | AD.34 | 2 | |
| 1658 4 03 | Screw, adjusting Jet and Head Units (3158) Ring (Brass), sealing Jet (117) | AD.35 AD.36 | 2 2 | |
| 404 | Ring (Cork), sealing Jet (118) | AD.37 | 2 | |
| 409 | Washer, Gland (Cork) for Jet (120) | AD.38 | 2 | |
| 1746 | Washer, Gland (Brass) for Jet (3307) | AD.39 | 2 | |
| 168 4 1676 | Spring, Gland for Jet (3248) Bearing for Jet (Top half) (3230) | AD.40 AD.41 | 2 2 | |
| 4656 | Bearing for Jet (Bottom half) (4656) | AD.42 | 2 | |
| 5535 | Washer (Copper) for Top Bearing (122) | AD.43 | 2 | |
| 1681 | Washer (Copper) for Bottom Bearing (3233) | AD.44 | 2 | |
| 1679 | Screw, securing let Assembly, in Carburetter Body (3232) | AD.45 | 2 | |
| 1661 | Nut, Cap, on Bottom Bearing (3160) | AD.46 | 2 | |
| 1660 | Washer (Fibre) in Cap Nut (3159) | AD.47 | 2 | |
| 464 1 | Bolt, securing Front Float Chamber and Thermo- | AD.48 | 1 | |
| 4642 | stat Arm to Carburetter Body (4641) Washer (Copper) under head of Bolt (4642/1) | AD.49 | 1 | |
| 4751 | Washer (Fibre) between Thermostat Arm and | AD.50 | 1 | |
| ., 51 | boss of Float Chamber (4751) | | • | |
| 421 | Washer (Fibre) between boss of Float Chamber | AD.51 | 1 | |
| | and Carburetter Body (130) | | | |
| 1180 | Bolt, securing Rear Float Chamber to Carburetter | | 1 | |
| 4642 | Body (1541/3) Washer (Copper) under head of Bolt (4642/1) | | 1 | |
| 421 | Washer (Fibre) between Float Chamber and Body | | 1 | |
| | (130) | | - | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---------------------------|--|----------------|------------------|--|
| 4755 | BODY FOR THERMOSTAT UNIT ON FRONT CARBURETTER (4755/1) | AD.52 | 1 | |
| 4758 | ARM CONNECTING THERMOSTAT BODY TO CARBURETTER (4758) | AD.53 | 1 | |
| 4752 4753 | Bolt, securing Arm to Thermostat Body (4752) Washer (Fibre) between Arm and Thermostat Body | AD.54 AD.55 | 1 1 | |
| 4754 | (4753) Washer (Copper) between head of Bolt and Arm (4754) | AD.56 | 1 | |
| 4740 | SOLENOID FOR THERMOSTAT UNIT (4740) | AD.57 | 1 | |
| 4795 | Cover (Bakelite) at top of Solenoid (4795) | AD.58 | 1 | |
| 4797 47 9 0 | Strap, clamping Solenoid to Body (4797) Screw, in Clamping Strap (4790) | AD.59 AD.60 | 1 | |
| 4759 | JET FOR THERMOSTAT (4759) | AD.61 | 1 | |
| 1643 | AUXILIARY STARTING NEEDLE (3134/435/8) | AD.62 | 1 | Fitted from Eng. No. W.1001 to W.5741 |
| 1642 | AUXILIARY STARTING NEEDLE (3134/425/8) | AD.62 | 1 | Fitted to Eng. No. |
| 3127 | Spring for Auxiliary Starting Needle (3127) | AD.63 | 1 | W.5742 and subs. |
| 1453 1617 | Screw, securing Needle to Thermostat Body (1453) Washer, Spring, on Screws (3003) | AD.64 AD.65 | 2 2 | |
| 3139/1 | Finger, Spring, locating Adjusting Nut on Needle (3139/1) | AD.66 | ī | |
| 4393 | SHAFT, COUPLING FRONT AND REAR CARBURETTERS (4393/3) | D.64 | 1 | |
| 4334 | Adapter on Shaft (4334) | D.65 | 2 | |
| 5801 673 | Bolt, securing Adapters to Shaft (669) Nut on Bolts (673) | | 4 4 | |
| 4612 | Washer under Nuts (4612) | | 4 | |
| C.3597 | FLEXIBLE COUPLING ON REAR CAR- BURETTER (S.U. 681) | D.66 | 1 | |
| 1923 | Adapter on Flexible Coupling (1923/3) | | 2 4 | |
| 5803 561 <u>4</u> | Bolt, securing Adapters to Couplings (694) Nut on Bolts (156) | | 4 | |
| 4847 | Washer under Nuts (4847) | | 4 | |
| C.5856 | CONNECTING SHAFT BETWEEN FLEXIBLE COUPLING AND BRACKET ON SCUTTLE (S.U. 4626/1) | D,67 | 1 | |
| 1635 5803 | Lever on Connecting Shaft (3120/1) Bolt, securing Lever to Shaft (694) | D.68 | 1 | |
| 5614 | Nut on Bolt (156) | | 1 | |
| 5648 5658 | Washer, Spring, under Nut (246) Ball Pin in Lever (306/A) | D.69 | 1 1 | |
| 310 | Spring, Return, for Carburetter Control | D.70 | 1 2 | |
| C.4475 | Gasket, between Carburetter rianges and Air | | | |
| C.4475 C.2368 | Gasket, between Carburetter Flanges and Air Cleaners Gasket, between Carburetter Flanges and Inlet | AD.67 | | 4 required on Eng. No. |

CARBURETTER

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|----------|--|--------------|------------------|--|
| C.3893 | OVERFLOW PIPE FOR FRONT CAR- BURETTER | D.71 | 1 | |
| C.3894 | OVERFLOW PIPE FOR REAR CAR- BURETTER | D.72 | 1 | |
| C.3895 | Clip, securing Overflow Pipes at bottom | | 1 | |
| C.3810 | FEED PIPE FROM CARBURETTERS TO FLEXIBLE PIPE | D.73 | 1 | |
| C.3629 | FLEXIBLE PIPE ASSEMBLY | D.74 | 1 | |
| C.2388 | STARTING PIPE | D.75 | 1 | |
| C.7461 | INSULATOR (FIBRE) BETWEEN CAR- BURETTERS AND INLET MANIFOLD | | 2 | Fitted to Eng. No. W.6919 and subs. |

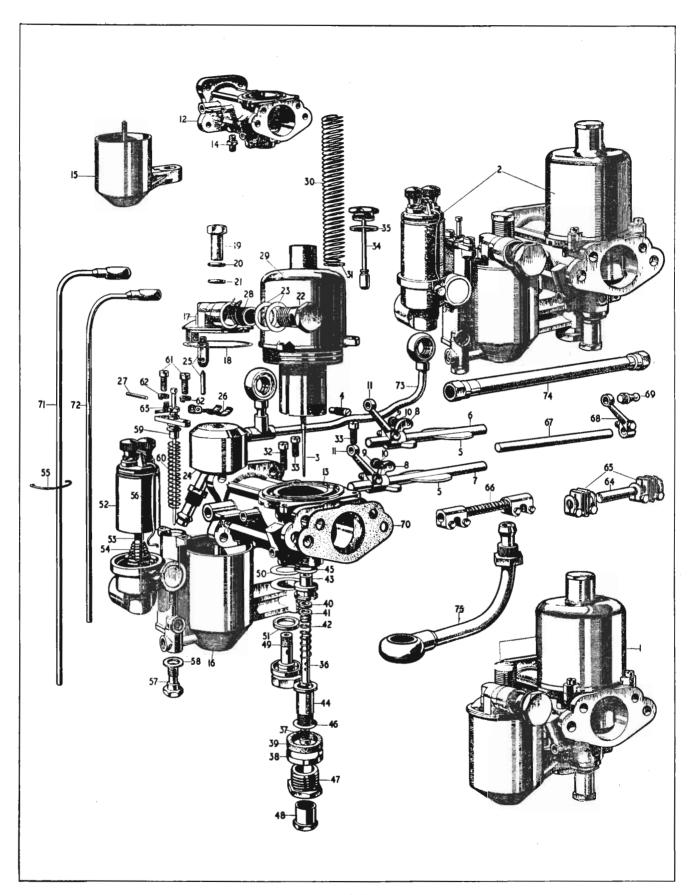


PLATE D.

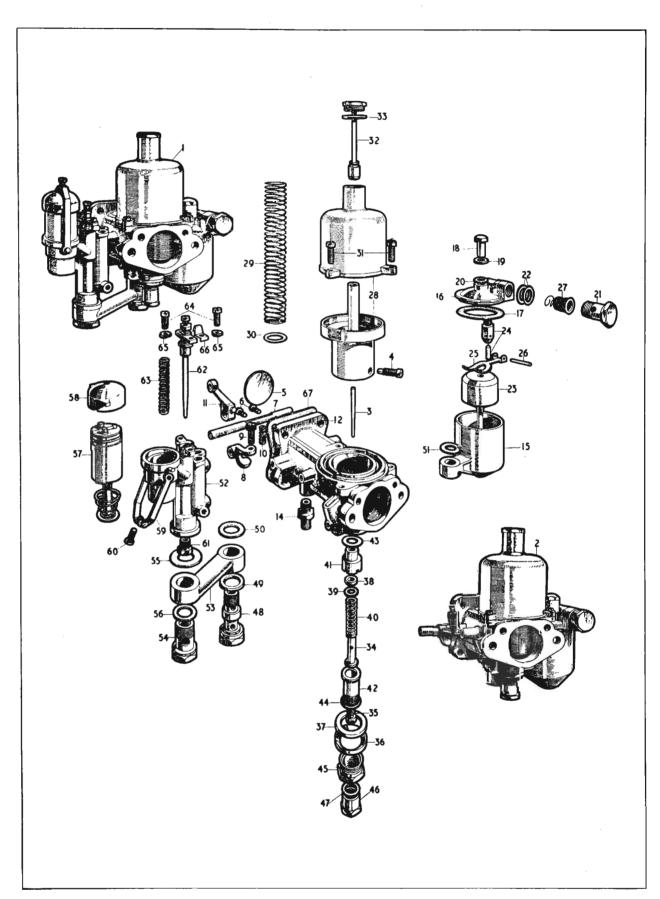


PLATE AD.

AIR CLEANERS

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|----------|--------------|--------------|------------------|----------|
| | _ | | | |

THE AIR CLEANERS LISTED BELOW ARE FITTED ONLY TO OPEN 2-SEATER MODELS

| C.4496 | AIR CLEANER FOR FRONT CARBURETTER (A.C. SPHINX 1579565) | FOR RIGHT HAND DRIVE CARS |
|--------|---|---------------------------|
| C.4732 | AIR CLEANER FOR REAR CARBURETTER (A.C. SPHINX 1579577) | 1 |

| C.4496 | AIR CLEANER FOR FRONT AND REAR CARBURETTERS (A.C. SPHINX 1579565) | 2 | FOR LEFT HAND DRIVE CARS |
|-----------|---|---|--------------------------|
| C.4475 | Gasket between Air Cleaner and Carburetter Flanges | 2 | |
| FS.105/6D | Screw, Set, securing Air Cleaners to Carburetter Flanges | 4 | |
| FG.105/X | Washer, Spring, on Setscrews | 4 | |
| C.7493 | Piece, Distance, for Air Cleaners | 2 | |

AIR CLEANERS

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--------------------------------|--|--------------|------------------|--------------------------------|
| | THE AIR CLEANER LISTED BELOW (AND ILLUSTRATED ON PLATE W) IS FITTED TO FIXED HEAD AND DROP HEAD COUPE MODELS | | | |
| C.5821 | AIR CLEANER (A.C. SPHINX 1579048) | W.1 | 1 | |
| C.5794 | ELBOW ASSEMBLY, AT BOTTOM OF WING VALANCE, FOR ATTACHMENT OF AIR CLEANER | W.2 | 1 | |
| C.5716 | Rubber, Sealing, between aperture in Wing Valance | W.3 | 1 | |
| C.826 | and Elbow Clip (Griptite 35), securing Air Cleaner to Elbow | W.4 | 1 | |
| NS.131/4D NN.131/L | Screw, Set, securing Elbow to Wing Valance Nut on Setscrews | | 2 | |
| C.725 | Washer, Shakeproof, under Nuts | | 2 | |
| C.5709 | AIR INTAKE PIPE, BETWEEN ELBOW AND BRANCH | W.5 | 1 | |
| C.828 | Clip (Griptite 45), securing Intake Pipe to Elbow and | W.6 | 2 | |
| C.5822 | Branch Clip, supporting Intake Pipe to Wing Valance | W.7 | 1 | |
| NS.125/4D NN.125/L C.724 | Screw, Set, securing Clip to Wing Valance Nut on Setscrews Washer, Shakeproof, under Nuts | | 2 2 2 | |
| C.5799 | AIR INTAKE BRANCH ASSEMBLY | W.8 | 1 | |
| NN.131/L C. 725 | Nut, securing Branch to Wing Valance Washer, Shakeproof, under Nuts | | 4 | |
| C.5713 | INTAKE HOSE (LONG) BETWEEN BRANCH AND REAR CARBURETTER | W.9 | 1 | |
| C.5714 | INTAKE HOSE (SHORT) BETWEEN BRANCH AND FRONT CARBURETTER | W.10 | 1 | FITTED TO L.H. DRIVE CARS ONLY |
| C.6795 | INTAKE HOSE (SHORT) BETWEEN BRANCH AND FRONT CARBURETTER | W.10 | 1 | FITTED TO R.H. DRIVE CARS ONLY |
| C.824 | Clip (Griptite 25), securing Hoses to Branch and | W.11 | 4 | |
| C.5715 | Carburetter Adapters Adapter for Carburetter Flanges | W.12 | 2 | |
| C.4475 NB.131/8D | Gasket, between Adapters and Carburetter Flanges Bolt, securing Adapters to Carburetter Flanges | W.13 | 2 4 | |
| NN.131/L | Nut on Bolts Washer, Shakeproof, under Nuts | | 4 4 | |

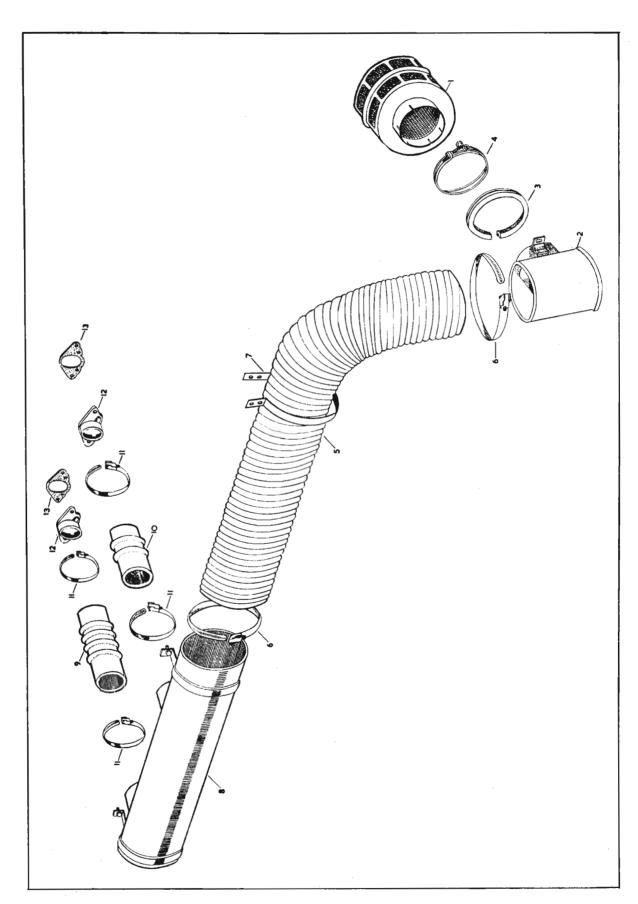


PLATE W.

ACCELERATOR CONTROLS

| Part No. | Description. | Flate No. | No. per Unit. Remarks. |
|----------------------------|--|-------------------|---|
| C.3700 | ACCELERATOR PEDAL ASSEMBLY | | 1 Fitted from Chassis No. 660001 to 660058 679001 and subs 670001 and subs. 677001 and subs |
| C.3699 C.3473 C.3468 | Lever only for Accelerator Pedal Pad (Rubber) on Accelerator Lever Pin, Fulcrum, securing Accelerator Pedal in | E.1 E.2 E.3 | 1 1 1 |
| C.3968/1 | Mounting Bracket Nut on Fulcrum Pin | E.4 | 1 |
| FW.104/T C.3479 | Washer, Plain, under Nut Washer (Felt) at each side of Pedal Boss | E.5 E.6 | 1 2 |
| C.3767 C.3460 | Ball-Pin for Accelerator Pedal Bracket Assembly, mounting Accelerator Pedal on Floorboards | E.7 E.8 | 1 |
| NS.125/4D | Screw, Set, securing Bracket Assembly to Floor- boards | E.9 | See 4 required for R.H. Drive cars |
| C.724 | Washer, Shakeproof, on Setscrews | E.10 | Remarks 2 required for L.H. Drive cars |
| C.4048 | ACCELERATOR PEDAL ASSEMBLY | | 1 Fitted to Chassis No. 660059 and subs. |
| C.4046 C.3473 C.3468 | Lever only for Accelerator Pedal Pad (Rubber) on Accelerator Lever Pin, Fulcrum, securing Accelerator Pedal in | | 1 |
| C.3968/1 FW.104/T | Mounting Bracket Nut on Fulcrum Pin | | 1 |
| C.3479 C.3767 C.3460 | Washer, Plain, under Nut Washer (Felt) at each side of Pedal Boss Ball-Pin for Accelerator Pedal Bracket Assembly, mounting Accelerator Pedal on Floorboards | | 1 2 1 1 |
| C.6784 | ACCELERATOR PEDAL ASSEMBLY | | 1 Fitted to Chassis No. |
| C.6785 | Lever only for Accelerator Pedal NOTE.—All other parts for Assembly C.6784 are as for Assembly C.4048 | | 1 669001 and subs. 667001 and subs |
| NS.114/4D | Screw, Set, securing Bracket Assembly to Floor- | | See 4 required for R.H. Drive cars |
| C.724 | boards Washer, Shakeproof, on Setscrews | | Remarks 2 required for L.H. Drive cars |
| C.3854 | BRACKET, ON SCUTTLE, SUPPORTING ADJUSTABLE BRACKET C.5852 | E.11 | 1 Fitted to Chassis No. 660001 and subs. 670001 and subs |
| C.6783 | BRACKET, ON SCUTTLE, SUPPORTING ADJUSTABLE BRACKET C.6781 | | 1 Fitted to Chassis No. 669001 and subs. 667001 and subs |
| NS.125/4F C.724 | Screw, Set, securing Bracket to Scuttle Washer, Shakeproof, on Setscrews | E.12 E.13 | |
| C.3763 | ADJUSTABLE BRACKET | E.14 | 1 Fitted from Chassis No. 660001 to 660875 670001 to 671460 |
| C.5852 | ADJUSTABLE BRACKET ASSEMBLY (COMPRISING BRACKET C.3763 AND SOCKET C.3744) | | 1 Fitted to Chassis No. 660876 and subs. 671461 and subs. |
| C.6794 | ADJUSTABLE BRACKET ASSEMBLY | | 1 Fitted to Chassis No. 679001 and subs. 677001 and subs |
| C.6781 | ADJUSTABLE BRACKET ASSEMBLY | | 1 Fitted to Chassis No. 669001 and subs. 667001 and subs. |

ACCELERATOR CONTROLS

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--------------------|--|--------------|------------------|--|
| NS.125/4F | Screw, Set, securing Adjustable Bracket to Scuttle Bracket | E.15 | 2 | |
| FW.104/T | Washer, Plain, on Setscrews | E.16 | 2 | |
| NN.125/L | Nut on Setscrews | E.17 E.18 | 2 2 | |
| C.724 | Washer, Shakeproof, under Nuts | E.10 | 2 | |
| C.3475 | SOCKET, ON ADJUSTABLE BRACKET, FOR CARBURETTER CONNECTING SPINDLE | E.19 | 1 | Fitted from Chassis No. 660001 to 660875 670001 to 671460 |
| C.3476 | Bush (Rubber) inside Socket | E.20 | 1 | |
| C.3477 | Bush inside Rubber Bush | E.21 E.22 | 1 | Fitted from Chassis No. |
| NS.125/4F C.724 | Screw, Set, securing Socket to Adjustable Bracket Washer, Shakeproof, on Setscrew | E.23 | 1} | 660001 to 660875 670001 to 671460 |
| C.3853 | INTERMEDIATE BRACKET ON SCUTTLE | E.24 | 1 | Fitted from Chassis No. 660001 to 660058 679001 and subs. 670001 and subs. |
| NS.125/4F | Screw, Set, securing Intermediate Bracket to | E.25 | 2 | |
| C.724 | Scuttle Washer, Shakeproof, on Setscrews | E.26 | 2 | |
| | | | | |
| C.3852 | INTERMEDIATE THROTTLE LEVER ASSEMBLY | E.27 | 1 | Fitted from Chassis No. 660001 to 660058 |
| C.5135 | INTERMEDIATE THROTTLE LEVER AND STOP ASSEMBLY | | 1 | Fitted to Chassis No. 669001 and subs. 660059 and subs. 667001 and subs. |
| C.5136 | INTERMEDIATE THROTTLE LEVER AND STOP ASSEMBLY | E.28 | 1 | Fitted to Chassis No. 679001 and subs. 670001 and subs. 677001 and subs. |
| C.3483 | Shaft, holding Intermediate Lever to Intermediate | E.29 | 1 | · |
| NN.125/L | Bracket Nut on Shaft | E.30 | 1 | |
| C.724 C.4156 | Washer, Shakeproof, under Nut Washer, between Intermediate Lever and Scuttle | E.31 | 1 2 | Fitted to Chassis No. 669001 and subs. |
| C.3767 | Ball-Pin for Intermediate Lever | | 2 | 660059 and subs. 667001 and subs. |
| C.2501/3 | Washer (Special) for Throttle Lever | | 2 | Fitted to Chassis No. 669001 and subs. 660059 and subs. 667001 and subs. |
| C.3765 | CONTROL ROD ASSEMBLY, LINKING CARBURETTER CONNECTING SPINDLE WITH INTERMEDIATE LEVER | E.32 | 1 | Fitted from Chassis No. |
| C.3710 | CONTROL ROD ASSEMBLY, LINKING INTERMEDIATE LEVER WITH ACCELERATOR PEDAL | E.33 | 1 | 660001 to 660058 679001 and subs. 677001 and subs. |
| C.4144 | CONTROL ROD ASSEMBLY, LINKING CARBURETTER CONNECTING SPINDLE WITH INTERMEDIATE LEVER | | 1 | Final confidence of the No. |
| C.4145 | CONTROL ROD ASSEMBLY, LINKING INTERMEDIATE LEVER WITH ACCELERATOR PEDAL | | 1 | Fitted to Chassis No. 660059 and subs. |
| C.6788 | CONTROL ROD ASSEMBLY, LINKING INTERMEDIATE LEVER WITH ACCELERATOR PEDAL | | 1 | Fitted to Chassis No. |
| C.6789 | CONTROL ROD ASSEMBLY, LINKING CAR- BURETTER CONNECTING SPINDLE WITH INTERMEDIATE LEVER | | 1 | 669001 and subs. 667001 and subs. |

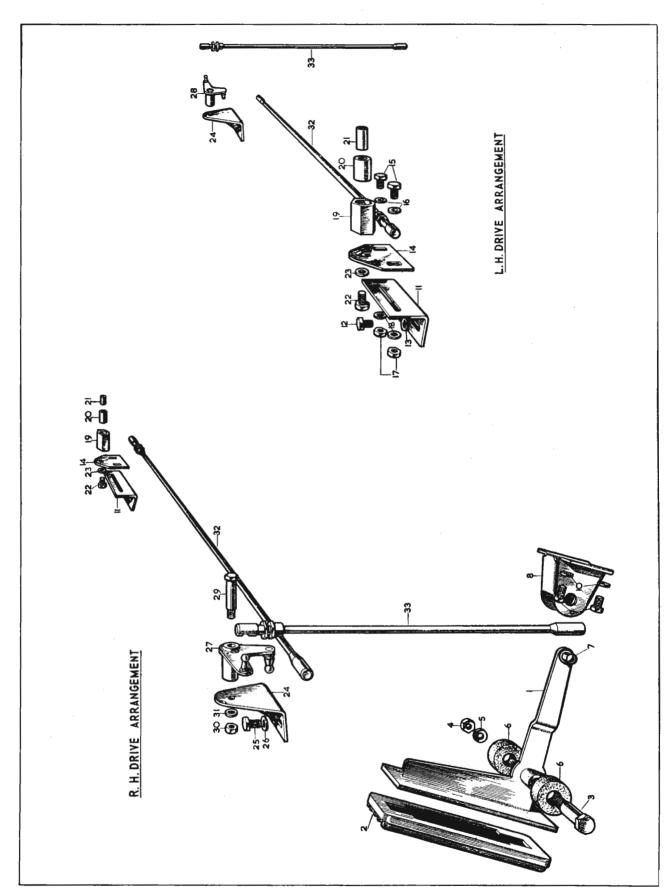


PLATE E.

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--------------|--|--------------|------------------|---|
| C.7460 | CLUTCH UNIT (BORG & BECK BB.10/98A) (INTERCHANGEABLE WITH C.8456) | | 1 | COMPRISING COVER ASSY. RELEASE BEARING AND CUP ASSY, DRIVEN PLATE ASSY. |
| C.8456 | CLUTCH UNIT (BB.10/98C) (INTERCHANGEABLE WITH C.7460) | | 1 | Fitted to Eng. No. F.2726 and subs. |
| 6610 | CLUTCH COVER ASSEMBLY (BB.45696/14) | | 1 | |
| 2546 2544 | Cover only (BB.45616) Spring, Thrust (Yellow) (BB.44780) | F.1 F.2 | 1 12 | |
| 2547 2583 | Plate, Pressure (BB.45764) Lever, Release (BB.47908) | F.3 F.4 | 1 3 | SEE BB.48992 |
| 6839 | Lever, Release (BB.48992) | | 3 | INTERCHANGEABLE WITH BB.47908 ONLY IN SETS |
| 5087 2395 | Plate, Release Lever (BB.40968) Retainer, Release Lever (BB.40015) | F.5 F.6 | 1 3 | |
| 2527 2526 | Strut, Release Lever (BB.42606) Eyebolt, Release Lever (BB.42605) | F.7 F.8 | 3 3 | |
| 2523 2398 | Pin through Eyebolt (BB.42604) Nut, on Eyebolt (BB.40020) | F.9 F.10 | 3 | |
| 2545 | Spring, Anti-Rattle (BB.45577) | F.11 | 3 | |
| 6840 | RELEASE BEARING ASSEMBLY (BB.48444) | | 1] | INTERCULANCEARIE |
| 2590 4163 | Release Bearing and Cup Assembly (BB.48443) Retainer for Release Bearing (BB.41628) | F.12 F.13 | 1 | INTERCHANGEABLE WITH BB.40062 OR BB.46896 |
| 2581 | DRIVEN PLATE ASSEMBLY (BB.47627/22) | F.14 | 1) | |
| C.8401 | DRIVEN PLATE ASSEMBLY (BB.47627/46) | F.14 | 1 | INTERCHANGEABLE |
| 2561 | Facings Package (consisting of BB.46558—Clutch Linings and BB.44055—Rivets) (BB.46663) | | 1 | FOR RENEWAL OF DRIVEN PLATE LININGS |
| NB.137/6.5D | Screw, Set, securing Clutch Unit to Flywheel | F.15 F.16 | 6 | |

C.2412 CLUTCH HOUSING

Also to W.1024 to 1308, 1310 to 1338, 1340 to 1344, 1346 to 1348, 1350 to 1353, 1355, 1357, 1359 to 1363, 1369 to 1374, 1376, 1378 to 1383, 1385 to 1388, 1391 to 1395, 1397 to 1399, 1401 to 1414, 1416, 1418 to 1433, 1435 to 1449, 1451, 1454 to 1484, 1486 to 1491, 1493 to 1495, 1497 to 1537, 1539 to 1542, 1544 to 1547, 1549 to 1551, 1563, 1564, 1567 to 1569, 1572, 1573, 1575 to 1578, 1581, 1583, 1587, 1591, 1593 to 1598, 1600 to 1603, 1606 to 1617, 1619 to 1631, 1633 to 1647, 1649, 1651, 1653 to 1663, 1665 to 1692, 1694 to 1697, 1699 to 1712, 1714, 1716, 1717, 1719 to 1737, 1739 to 1751, 1753 to 1759, 1761 to 1774, 1776 to 1783, 1785, 1787 to 1790, 1793, 1794, 1799, 1800, 1802, 1804, 1806 to 1838, 1840 to 1850, 1852 to 1892, 1894 to 1903, 1905, 1909, 1910, 1912, 1913, 1914, 1916, 1918 to 1923, 1925, 1928 to 1930, 1933 to 1935, 1937, 1939 to 1941, 1943 to 1946, 1949 to 1951, 1953, 1955, 1960, 1962, 1964, 1965, 1967, 1969, 1972, 1973, 1979, 1988, 1991, 1992, 1995, 1996, 1997.

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|------------------|--|--------------|------------------|--|
| C.6720 | CLUTCH UNIT (BORG & BECK BB.10/89A) | | 1 | SPECIAL EQUIPMENT FOR COMPETITION WORK |
| 6615 | CLUTCH COVER ASSEMBLY (BB.45696/55) | | 1 | |
| 2546 | Cover only (BB.45616) | | 1 | |
| 2544 4325 | Spring, Thrust (Yellow) (BB.44780) Spring, Thrust (Black) (BB.44633) | | 3 9 | |
| 258 4 | Plate, Pressure, (comprising 47988 Plate, 47266 | | í | |
| 2583 | Reinforcing Ring) (BB.47989) Lever, Release (BB.47908) | | 3 | |
| 5087 | Plate, Release Lever (BB.40968) | | 1 | |
| 2395 | Retainer, Release Lever (BB.40015) | | 3 | |
| 2527 | Strut, Release Lever (BB.42606) | | 3 | |
| 2526 2523 | Eyebolt, Release Lever (BB.42605) Pin through Eyebolt (BB.42604) | | 3 3 | |
| 2398 | Nut on Eyebolt (BB.40020) | | 3 | |
| 2582 | Spring, Anti-Rattle (BB.47688) | | 3 | |
| 6840 | RELEASE BEARING ASSEMBLY (BB.48444) | | 1 | |
| 2590 4163 | Release Bearing and Cup, Assy. (BB.48443) Retainer (BB.41628) | | 1 | |
| | | | | |
| C.5723 | DRIVEN PLATE ASSEMBLY (BB.46093/34) | | 1 | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|--|--|---------------------------------|---|
| C.2412/1 | CLUTCH HOUSING | | 1 | Fitted to the following Engines: |
| C.4829 | CLUTCH HOUSING | | 1 | Fitted from Eng. No. W.2608 to W.4400 |
| FS.107/6D FS.107/8D C.586 C.587 NB.137/23D C.726 C.584 | Screw, Set, securing Clutch Housing to Gearbox Screw, Set, securing Clutch Housing to Gearbox Plate, locking Setscrews inside Clutch Housing Plate, locking Setscrews inside Clutch Housing Bolt, securing Clutch Housing to Cylinder Block Washer, Shakeproof on Bolts Bush, in Clutch Housing, for Operating Shaft | F.18 F.19 F.20 F.21 F.22 F.23 F.24 | 2 6 2 2 9 9 9 | Fitted to same Engines as enumerated for C.2412/1 and C.4829 |
| C.5068 | CLUTCH HOUSING | | 1] | |
| FS.107/11D FS.107/13D C.5073 NB.137/23D C.726 C.584 | Screw, Set, securing Clutch Housing to Gearbox Screw, Set, securing Clutch Housing to Gearbox Plate, locking Setscrews Bolt, securing Clutch Housing to Cylinder Block Washer, Shakeproof, on Bolts Bush, in Clutch Housing, for Operating Shaft | | 2 6 2 9 9 2 | Fitted to Eng. No. W.4401 and subs. |
| C.2415 | COVER PLATE FOR CLUTCH HOUSING | F.25 | 1 | Fitted from Eng. No. W.1001 to W.4400 |
| CS.125/3D FG.104/X | Screw Set, securing Cover Plate Washer, Spring, on Setscrews | F.26 F.27 | 7 7 | 77.1001 to 77.4400 |
| C.5072 | COVER PLATE FOR CLUTCH HOUSING | | 1 | Fitted to Eng. No. |
| CS.125/4D C.724 | Screw, Set, securing Cover Plate Washer, Shakeproof, on Setscrews | | 4 | W.4401 and subs. |
| C.2413 | SUPPORT BRACKET, R.H. | F.28 | 1 | FITTED TO R.H. DRIVE CARS ONLY from Eng. No. W.1001 to W.2607 |
| C.2414 | SUPPORT BRACKET, L.H. | | 1 | FITTED TO L.H. DRIVE CARS ONLY from Eng. No. W.1001 to W.2607 |
| C.4795 | SUPPORT BRACKET, R.H. | | 1 | FITTED TO R.H. DRIVE CARS ONLY for Eng. No. W.2608 and subs. |
| C.4796 | SUPPORT BRACKET, L.H. | | 1 | FITTED TO L.H. DRIVE CARS ONLY |
| NB.131/9D NN.131/L | Bolt, securing Support Bracket to Cylinder Block Nut on Bolts | F.29 F.30 | 4 | for Eng. No. W.2608 and subs. |
| FG.105/X NB.137/23D NN.137/L FG.106/X | Washer, Spring, under Nuts Bolt, securing Support Bracket to Cylinder Block Nut on Bolts Washer, Spring, under Nuts | F.31 F.32 F.33 F.34 | 4 6 6 6 | 4 required from Eng. No. W.1001 to W.2607 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
|--|--|--|------------------|---|------------|
| C.2429 | CLUTCH OPERATING SHAFT | F.35 | · / 1 | SUPERSEDED BY C.13157 | .* .: |
| C.13157 | CLUTCH OPERATING SHAFT ASSEMBLY | | 1 | SUPERSEDES C.2429 | |
| CB.131/16D FG.105/X | Bolt for Clutch Shaft Location Washer, Spring, on Bolt | F.36 F.37 | 1 1 | | 1 : 1 : |
| C.2483 | LEVER ON CLUTCH SHAFT | F.38 | 1 | | |
| C.568 C.3262 C.3265 | Pin (Tapered) locating Lever on Shaft Wire, locking Pin to Shaft Trunnion, in Fork of Lever | F.39 F.40 | 1 1 | | |
| | | | | | |
| C.582 | CLUTCH OPERATING FORK | F.41 | 1 | | |
| C.568 C.3262 | Pin (Tapered) locating Fork on Operating Shaft Wire, locking Tapered Pin in position | F.42 | 1 | | |
| | | | | | |
| C.2416 | CLUTCH PEDAL (SUPERSEDED BY C.3822) | , F ,43 . | × , | FITTED TO R.H. DRIVE CA | RS ONLY |
| C.3822 | CLUTCH PEDAL (SUPERSEDES C.2416) | | 1 | FITTED TO R.H. DRIVE CA | RS ONLY |
| C.2417 | CLUTCH PEDAL | · f . | .1 | FITTED TO L.H. DRIVE CA | RS ONLY |
| NB.131/16D NN.131/L C.725 | Bolt, securing Clutch Pedal to Shaft Nut on Bolt Washer, Shakeproof, under Nut | F.44 F.45 F.46 | 1 1 | artini k _a n ing ka | |
| C.2418 | SHAFT SUPPORTING CLUTCH PEDAL | F. 4 7 | 1 | FITTED TO R.H. DRIVE CA | |
| C.2419 | SHAFT SUPPORTING CLUTCH PEDAL | | 1 | from Chassis No. 660001 to 6 | |
| C.4034 | SHAFT SUPPORTING CLUTCH PEDAL | | 1 | FITTED TO R.H. DRIVE CA for Chassis No. 660059 and s | RS ONLY |
| C.4035 | SHAFT SUPPORTING CLUTCH PEDAL | | 1 | 669001 and subs. 667001 an FITTED TO L.H. DRIVE CA for Chassis No. 670185 and s 679001 and subs. 677001 an | RS ONLY |
| C.757 C.3256 C.3295 C.3257 C.3255 C.3258 C.2420 L.104/11U | Key (Woodruff 90) locating Pedal on Shaft Spring (Outer) on Shaft Washer, on Shaft, at end of Outer Spring Ring, Sealing (Small) adjacent to Outer Spring Bearing (Spherical) on Shaft, adjacent to Sealing Ring Ring, Sealing (Large) adjacent to Spherical Bearing Washer, at end of Shaft Pin, Split, holding Outer Spring under compression | F.48 F.49 F.50 F.51 F.52 F.53 F.54 | 1 1 1 1 | FITTED TO L.H. DRIVE CA | |
| C.3260 | LEVER ON CLUTCH PEDAL SHAFT | F.55 | 1 | | |
| C.757 NB.131/11.D NN.131/L | Key (Woodruff 90) locating Lever on Shaft Bolt, securing Lever to Shaft Nut on Bolt | F.56 F.57 F.58 | 1 | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|------------|---|--------------|------------------|--|
| C,2423 | ADJUSTING ROD, BETWEEN LEVER ON PEDAL SHAFT AND LEVER ON CLUTCH SHAFT | F.60 | 1 | |
| J.105/12S | Pin, Clevis, securing Adjusting Rod to Lever on Pedal Shaft | F.61 | 1 | |
| FW.105/T | Washer (Plain) on Clevis Pin | F.62 | 1 | |
| 103/7Ú | Pin, Split, retaining Clevis Pin in Lever | F.63 | 1 | |
| 2482 | Nut, Barrel, on Adjusting Rod | F.64 | 1 | |
| C.2424 | Spring, on Adjusting Rod | F.65 | 1 | Fitted from Chassis No. |
| C.4165 | Spring on Adjusting Rod | | 1 | 660001 to 660058 670001 to 670184 Fitted to Chassis No. 660059 and subs. 679001 and subs. 667001 and subs. 667001 and subs. |
| W.105/T | Washer (Plain) on Adjusting Rod, at end of Spring | F.66 | 1 | 667001 and subs. 677001 and subs. |
| 103/7U | Pin, Split, retaining Spring on Adjusting Rod | F.67 | i | |
| C.3267 | BEARING HOUSING ON CLUTCH HOUSING | F.68 | 1 | |
| CS.131/5D | Screw. Set, securing Bearing Housing | F.69 | 2 | |
| 2.725 | Washer, Shakeproof, on Setscrews | F.70 | 2 | |
| 2.3323 | Gaiter, on Pedal Shaft, over Bearing Housing | F.71 | 1 | • |
| 2.3255 | Bearing (Spherical) inside Housing | F.72 | 1 | |
| .3321 | Spring (Inner) adjacent to Spherical Bearing | F.73 | 1 | |
| | | | | |
| C.3602 | PEDAL STEM AND PLATE ASSEMBLY | F.74 | 1 | Fitted from Chassis No. 660001 to 660979 670001 to 672048 669001 to 669002 679001 to 679621 |
| C.6913 | PEDAL STEM AND PLATE ASSEMBLY | | 1 | Fitted to Chassis No. 660980 and subs. 672049 and subs. 669003 and subs. 679622 and subs. 667001 and subs. 677001 and subs. |
| NB.131/10D | Bolt, securing Stem to Pedal Shaft | F.75 | 1 | |
| NN.131/L | Nut on Bolt | F.76 | 1 | |
| C.740 | Washer, Shakeproof, under Nut | F.77 | 1 | |
| 92 | Pad (Rubber) on Stem Plate | F.78 | . 1 | |
| 2.3673 | Draught Excluder on Pedal Stem | F.79 | 1 | Fitted from Chassis No. 660001 to 660058 |
| C.4036 | Draught Excluder on Pedal Stem | | 1 | 670001 to 670184 Fitted to Chassis No. 660059 and subs. 669001 and subs. |
| | | | | 670185 and subs. 679001 and subs. |
| 2.3318 | Spring, Return, for Clutch Pedal | F.80 | 1 | |

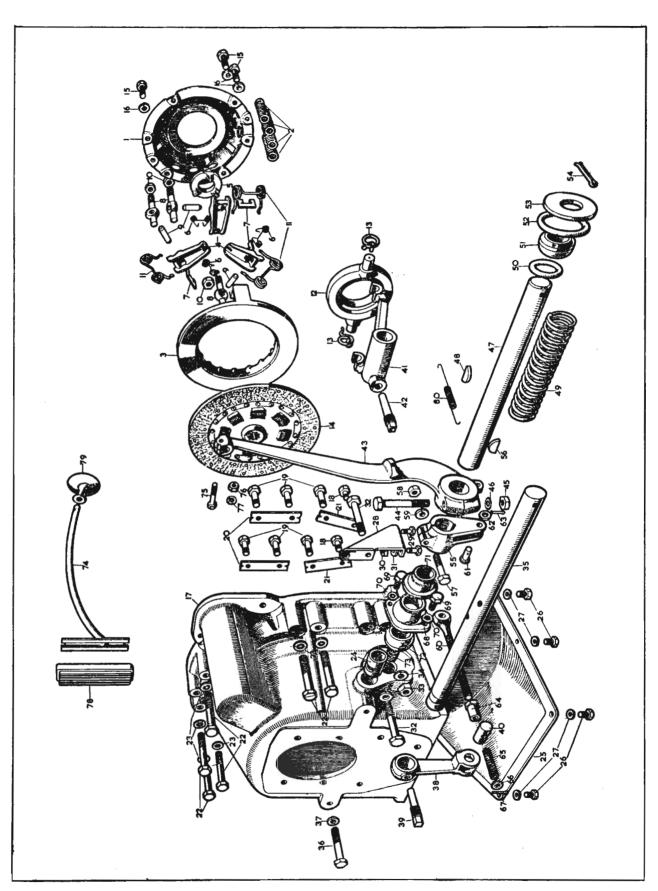


PLATE F.

GEARBOX ("S.H." SERIES)

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|--|--|--|---|
| C.2549/1 | GEARBOX ASSEMBLY | | 1 | SERIAL No. S.H.10 AND SUBS. |
| C.2071 C.799 C.785 C.857 | Casing only Plug, Drain, at bottom of Casing Washer (Fibre) on Drain Plug Plate, on Casing, Locking Counter and Reverse | G.1 G.2 G.3 G.3 | A 1 B 1 | |
| FS.205/7D FG.105/X C.883 C.1838 C.1841 C.1840 C.920 | Shafts Screw, Set, securing Locking Plate Washer, Spring, on Setscrew Bearing, Roller, for Mainshaft (Hoff R.M.S. 12½L) Bearing, Ball, for Constant Pinion Shaft (Hoff. 340K) Collar between Casting and Circlip Circlip, on Ball Bearing, behind Collar Washer (Fibre) in Casing, at front end of Countershaft | G.4 G.5 G.8 G.9 G.1 G.1 | 1 A 1 1 1 0 1 | |
| C.1833 | FRONT END COVER | G.1 | 2 1 | |
| C.1834 C.912 C.6738 | Washer, Jointing, between Front Cover and Casing Seal, Oil Seal, Oil | G.1 G.1 | | ALTERNATIVE TO C.6738 ALTERNATIVE TO C.912 |
| C.1835 FW.105/T C.837 | Screw, Set, securing Cover to Casing Washer, Plain, on Setscrews Wire, Locking Setscrews (approx. 9' lengths) | G.1 G.1 | | |
| C.2548 | GEARBOX EXTENSION | G.1 | 7 1° | |
| C.1866 FS.105/9D FG.105/X C.924 C.921 | Washer, Jointing, between Extension and Casing Screw, Set, securing Extension to Casing Washer, Spring, on Setscrews Bearing, Ball (Hoff. M.S.12) Washer (Felt) in Extension, at rear end of Countershaft | G.1 G.2 G.2 G.2 | 9 7 0 7 1 1 | |
| C.886 | REAR END COVER | G.2 | 3 1 | |
| C.862 | Washer, Jointing, between Rear End Cover and | G.2 | 4 1 | |
| C.859 C.863 | Extension Seal, Oil Role recurring Cover to Extension | G.2 G.2 | | |
| FG.105/X FS.305/5H | Bolt, securing Cover to Extension Washer, Spring, on Bolts Screw, Set, in aperture for Speedo Driven Gear, securing Cover to Extension | G.2 | 7 4 | |
| C.843 C.858 | Gear, Speedometer Driven Bearing for Speedometer Driven Gear | G.2 G.3 | 9 1 0 1 | |
| C.846 FG.105/X | Screw, Locking Bearing in Cover Washer, Spring, on Locking Screw | G.3 G.3 | | |
| | STRIKING GEAR | | | |
| C.907 C.877 C.878 C.904 C.872 C.913 C.905 C.1910 C.1909 C.2022 L.103/7U C.922 C.900 C.914 | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) Rod, Striking (Reverse Gear) Fork, Change-Speed (1st/2nd Gears) Fork, Change-Speed (3rd/Top Gears) Fork, Change-Speed (Reverse Gear) Selector (3rd/Top) Selector (Reverse) Plunger in Reverse Selector Spring on Plunger Pin, Split, securing Plunger in Reverse Selector Ball, locking Plunger Spring under Ball Shim, under Spring | G.: G.: G.: G.: G.: G.: G.: G.: G.: G.: | 34 1 35 1 36 1 37 1 38 1 39 1 40 1 41 1 42 1 43 1 | |

GEARBOX ("S.H." SERIES)

| AS.102/4D AS.102/4D AS.102/4D Screw, Set, in Reverse Selector adjusting on Spring Nut, locking Setscrew in position Pin, Stop, on 1st/2nd and 3rd/Top Striking Roller for Interlock (in 1st/2nd Striking Roller) C.923 Balls for Interlock (in 3rd/Top and Revestriking Rods) Screw, Set (Taper) securing Forks and Swire, locking Taper Screws and Stop Pin Striking Rods) C.1927 TOP COVER Washer, Jointing, between Cover and Company of Striking Rods FB.105/12D FB.105/12D FB.105/12D FB.105/12D FB.105/12D FG.105/X OD.105/6H C.848 C.845 C.845 C.849 Screw, Set, in Reverse Selector adjusting not Spring Rods Spring Rods Spring, top of Plungers Screw, Grub, applying tension to Plus | ng Rods G.46 Rod) G.47 irse G.48 delectors G.49 ins G.50 Casing G.51 G.52 G.53 G.54 G.55 r G.56 G.57 G.58 ingers for G.59 or Reverse G.60 | 1 1 2 2 1 2 2 5 As req'd. 1 1 2 2 6 6 10 2 3 3 2 2 1 | | |
|--|---|---|---|-----|
| AN.102/L C.882 C.874 C.923 C.844 C.837 C.844 C.837 C.844 C.837 C.845 C.845 C.846 C.857 C.860 FB.105/15D FB.105/12D FB.105/12D FG.105/X CD.105/6H C.848 C.845 C.845 C.845 C.845 C.846 C.846 C.847 C.847 C.848 C.848 C.848 C.848 C.848 C.845 C.848 C.845 C.849 C.844 C.848 C.846 C.874 C.848 C.846 C.846 C.847 C.848 C.846 C.846 C.847 C.848 C.846 C.846 C.847 C.848 C.846 C.847 C.848 C.846 C.847 C.848 C.846 C.848 C.846 C.847 C.848 C.846 C.847 C.848 C.846 C.847 C.848 C.846 C.848 C.846 C.847 C.848 C.846 C.847 C.848 C.846 C.846 C.846 C.847 C.848 C.846 C.846 C.846 C.847 C.847 C.847 C.847 C.847 C.847 C.847 C.848 C.847 C.848 C.846 C.847 C.848 C.846 C.847 C.848 C.846 C.847 C.848 C.847 C.848 C.847 C.847 C.848 C.847 C.848 C.847 C.848 | ng Rods G.46 Rod) G.47 irse G.48 delectors G.49 ins G.50 Casing G.51 G.52 G.53 G.54 G.55 r G.56 G.57 G.58 ingers for G.59 or Reverse G.60 | 1 2 1 2 5 As req'd. 1 1 2 2 6 10 2 3 3 2 | | |
| AN.102/L C.882 Pin, Stop, on 1st/2nd and 3rd/Top Strikin Roller for Interlock (in 1st/2nd Striking Rods) C.824 Striking Rods) C.844 Screw, Set (Taper) securing Forks and Stop Pin Stop, on Striking Rods) C.837 TOP COVER C.860 Washer, Jointing, between Cover and Company Reversible Striking Rods FB.105/15D Bolt, securing Cover Washer, In Casing, positioning Top Cover Plunger engaging Striking Rods C.845 Spring, top of Plungers | Rod G.47 | 2 1 2 5 As req'd. 1 1 2 2 6 10 2 3 3 2 | | |
| C.874 C.923 Balls for Interlock (in 3rd/Top and Reve Striking Rods) C.844 C.837 C.844 C.837 C.846 C.857 C.860 FB.105/15D FB.105/14D FB.105/12D FG.105/X OD.105/6H C.848 C.845 Roller for Interlock (in 3rd/Top and Reve Striking Rods) Screw, Set (Taper) securing Forks and Stop Pi Wire, locking Taper Screws and Stop Pi Washer, Jointing, between Cover and C Bolt, securing Cover Bolt, securing Cover Bolt, securing Cover Bolt, securing Cover Washer, Spring, on Bolts Dowel, in Casing, positioning Top Cove Plunger engaging Striking Rods Spring, top of Plungers | Rod G.47 | 1 2 5 As req'd. 1 1 2 2 6 6 10 2 3 3 2 2 | | |
| C.923 Balls for Interlock (in 3rd/Top and Revershiring Rods) Screw, Set (Taper) securing Forks and Swire, locking Taper Screws and Stop Pi C.1927 C.1927 TOP COVER Washer, Jointing, between Cover and Cover Bolt, securing Cover Bolt, securing Cover Bolt, securing Cover Bolt, securing Cover Washer, Spring, on Bolts Dowel, in Casing, positioning Top Cove Plunger engaging Striking Rods Spring, top of Plungers | G.50 Casing G.51 G.52 G.53 G.54 G.55 G.55 G.56 G.57 G.58 G.59 or Reverse G.60 | 2 5 As req'd. 1 1 2 2 6 10 2 3 3 2 | | |
| C.844 C.837 Screw, Set (Taper) securing Forks and S Wire, locking Taper Screws and Stop Pi C.1927 C.860 FB.105/15D FB.105/14D FB.105/12D FG.105/X OD.105/6H C.848 C.845 Spring, top of Plungers | G.50 Casing G.51 G.52 G.53 G.54 G.55 r G.56 G.57 G.58 angers for G.59 or Reverse G.60 | As req'd. 1 1 2 2 6 10 2 3 3 2 | | |
| C.837 Wire, locking Taper Screws and Stop Pi C.1927 TOP COVER C.860 Washer, Jointing, between Cover and C Bolt, securing Cover Washer, Spring, on Bolts Dowel, in Casing, positioning Top Cove C.848 Plunger engaging Striking Rods Spring, top of Plungers | G.50 Casing G.51 G.52 G.53 G.54 G.55 r G.56 G.57 G.58 angers for G.59 or Reverse G.60 | 1 1 2 2 6 10 2 3 3 | | |
| C.860 FB.105/15D FB.105/14D FB.105/12D FG.105/X OD.105/6H C.848 C.845 Washer, Jointing, between Cover and Co | Casing G.51 G.52 G.53 G.54 G.55 r G.56 G.57 G.58 Ingers for G.59 or Reverse G.60 | 1 2 2 6 10 2 3 3 | | |
| C.860 FB.105/15D FB.105/14D FB.105/12D FG.105/X OD.105/6H C.848 C.845 Washer, Jointing, between Cover and Co | Casing G.51 G.52 G.53 G.54 G.55 r G.56 G.57 G.58 Ingers for G.59 or Reverse G.60 | 1 2 2 6 10 2 3 3 | | |
| FB.105/15D FB.105/14D FB.105/12D FB.105/12D FG.105/X FG.105/X OD.105/6H C.848 C.845 Bolt, securing Cover Bolt, securing Cover Washer, Spring, on Bolts Dowel, in Casing, positioning Top Cove Plunger engaging Striking Rods Spring, top of Plungers | G.52 G.53 G.54 G.55 r G.56 G.57 G.58 angers for G.59 or Reverse G.60 | 2 2 6 10 2 3 3 2 | | |
| FB.105/15D FB.105/14D FB.105/12D FB.105/12D FG.105/X OD.105/6H C.848 C.845 Bolt, securing Cover Bolt, securing Cover Washer, Spring, on Bolts Dowel, in Casing, positioning Top Cove Plunger engaging Striking Rods Spring, top of Plungers | G.52 G.53 G.54 G.55 r G.56 G.57 G.58 angers for G.59 or Reverse G.60 | 2 2 6 10 2 3 3 2 | | • • |
| FB.105/12D FG.105/X OD.105/6H C.848 C.845 Bolt, securing Cover Washer, Spring, on Bolts Dowel, in Casing, positioning Top Cove Plunger engaging Striking Rods Spring, top of Plungers | G.54 G.55 G.56 G.57 G.58 Ingers for G.59 or Reverse G.60 | 6 10 2 3 3 2 | | |
| FG.105/X OD.105/6H Dowel, in Casing, positioning Top Cove C.848 C.845 Spring, top of Plungers | G.55 G.56 G.57 G.58 Ingers for G.59 or Reverse G.60 | 10 2 3 3 2 | | • |
| C.848 Plunger engaging Striking Rods C.845 Spring, top of Plungers | G.57 G.58 Ingers for G.59 or Reverse G.60 | 3 3 2 | | • |
| C.845 Spring, top of Plungers | G.58 G.59 or Reverse G.60 | 3 2 | | |
| | or Reverse G.60 | | | |
| And/Ord and Smillian Bada | | 1 | | |
| 1st/2nd and 3rd/Top Striking Rods C.884 Screw, Grub, applying tension to Plunger f | | | | |
| Striking Rod C.837 Wire, locking Grub Screws | | As req'd. | | |
| C.873 Plug in front end of Cover | G.61 | 3 | | |
| C.929 Washer (Felt) in rear end of Cover C.880 Plate, covering Felt Washers | G.62 G.63 | 3 1 : | | |
| FS.104/3D Screw, Set, securing Cover Plate | G.64 | 2 | | |
| FG.104/X Washer, Spring, on Setscrews | G.65 G.66 | 2 | | |
| C.315 Plug, Core, on top of Cover C.2675 Dipstick | G.67 | i | | |
| C.841 Plug, Breather, on top of Cover | G.68 | 1 | * | |
| C.930 Washer (Fibre) on Breather Plug C.927 Screw, Grub, in side of Cover, for in Interlock Balls and Roller | G.69 sertion of | i | | |
| C.2462 CHANGE-SPEED LEVER | G.70 | 1 | | |
| C.2291 Knob on Lever | G.71 | 1 | | |
| C.1928 Nut, locking Knob to Lever C.1915 Bearing, Flexible, housing Change-Speed | G.72 Lever in G.73 | 1 2 halves. | | |
| Selector Lever | · . | | | |
| C.1919 Washer, at top of Flexible Bearing C.1904 Washer at bottom of Flexible Bearing | G.74 G.75 | 1 | | |
| C.1918 Lever, Selector, housing Change-Speed I | ever G.76 | 1 | | |
| FN.405/L Nut, Slotted, securing Change-Speed Selector Lever | Lever in G.77 | 1 | | |
| L.103/8U Pin, Split, securing Slotted Nut | G.78 | 1 | | |
| C.1913 Jaw, Pivot, for Selector Lever C.1907 Bush for Pivot Jaw | G.79 G.80 | 1 | | |
| C.1894 Washer, Thrust, on Pivot Jaw | G.81 | 2 | | |
| C.1914 Washer, Locking, on Pivot Jaw Washer, Spring, on Pivot Jaw | G.82 G.83 | 1 | | |
| FN.407/L Nut, Slotted, securing Pivot Jaw | G.84 | i | | |
| L.103/8U Pin, Split, securing Slotted Nut | G.85 vot Jaw G.86 | 1 | | |
| C.1912 Pin, Pivot, mounting Selector Lever in Pi C.1906 Bush, in Selector Lever, for Pivot Jaw | G.87 | i | | |
| C.1908 Washer, Thrust, at each side of Selecto C.1929 Washer, Spring, between Thrust Washer | | 2 1 | | |
| Jaw | | | | |
| FN.407/L Nut, Slotted, securing Pivot Pin L.103/8U Pin, Split, securing Slotted Nut | G.90 G.91 | 1 | | |
| | | - | | |
| | | | | |
| C.885 FLANGE ON MAINSHAFT | H.1 | 1 | • | |
| C.840 Nut, Slotted, securing Flange | H.2 | 1 | | |
| C.925 Washer, Plain, under Slotted Nut L104/12U Pin, Split, securing Slotted Nut | H.3 H.4 | 1 | | |

GEARBOX ("S.H." SERIES)

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|----------------------|--|--------------|------------------------|---------------------------------|
| C.1844 | MAINSHAFT | H.5 | 1 | |
| C.910 | Gear, Speedometer Driving | H.6 | 1 | |
| C.909 | Piece, Distance, behind Speedometer Gear | H.7 | 1 | |
| C.1854 | Sleeve, Distance, on Mainshaft | H.8 H.9 | 1 | |
| C.1853 C.900 | Sleeve, Synchronising, 2nd Speed Spring in 2nd and 3rd/Top Speeds Synchro Sleeves | H.10 | 12 | |
| C.922 | Ball in 2nd and 3rd/Top Speeds Synchro Sleeves | H.11 | 13 | |
| C.901 | Plunger in 2nd Speed Synchro Sleeve | H.12 | 1 | |
| C.1897 | Wheel, Gear, 1st Speed | H.13 H.14 | 1 | |
| C.1852 C.1851 | Wheel, Gear, 2nd Speed Wheel, Gear, 3rd Speed | H.15 | i | |
| C.1850 | Roller, Needle, in 2nd and 3rd Speed Gear Wheels | H.16 | 82 | |
| C.1849 C.1324 | Plunger, in Mainshaft, locking 2nd and 3rd Speed Gear Wheels | H.17 H.18 | 2 | |
| C.1324 C.1847 | Spring under Plungers Washer, Thrust, front and rear of 2nd and 3rd Speed Gear Wheels | H.19 | 2 | |
| C.1846 | Sleeve, Synchronising, 3rd/Top Speeds | H.20 | 1 | |
| C.2568 C.903 | Sleeve, Operating, 3rd/Top Speeds | H.21 | 1 As roa'd | |
| C.914 | Shim for Synchro Sleeve (.006" thick) Shim for Synchro Sleeve (.028" thick) | | As req'd. As req'd. | |
| | | | | |
| C.2112 | CONSTANT PINION SHAFT | H.22 | 1 | |
| C.1843 | Bearing Roller, inside shaft | H.23 | 1 | |
| C.1836 | Pinion, Constant | H.24 | 1 . | |
| C.1842 | Thrower, Oil | H.25 | 1 | |
| C.1838/1 C.2109 | Circlip, behind Shims on Shaft (Seeger 40 mm. Ext.) | H.26 H.26 | \ | |
| C.2110 | Washer, Packing, between Ball Bearing and Shims Shim, .003" thick, between Packing Washer and | H.26E | | |
| C.2111 | Circlip Shim, .005" thick, between Packing Washer and Circlip | H.260 | C As req'd. | |
| | Circuip | | | |
| C.2070 | REVERSE SPINDLE | H.27 | 1 | |
| C.2068/1 | Gear, Reverse (complete with Bush) | H.28 | 10 1 | Fitted from Gearbox No. S.H.10 |
| C.2069 | Bush in Reverse Gear | H.29 | | to S.H.6700. |
| C.2068/2 | Gear, Reverse (complete with Bush) | | | Fitted to Gearbox SH.6701 |
| C.3383 C.1893 | Bush in Reverse Gear Lever operating Reverse Gear | H.30 | 2 } a | and Subs. |
| C.1899 | Pin, Fulcrum, for Operating Lever | H.31 | i | |
| C.777 | Nut, Slotted, securing Fulcrum Pin | H.32 | 1 | |
| FW.106/T | Washer, Plain, under Slotted Nut | H.33 | 1 | |
| L.103/8U C.866 | Pin, Split, securing Fulcrum Pin and Reverse Slipper Slipper, Reverse | H.34 H.35 | 1 | |
| | | | | |
| C.1856 | COUNTERSHAFT | H.36 | 1 | |
| C.1857 | Gear-Unit (Cluster) | H.37 | 1 | |
| C.918 | Roller, Needle, inside Gear-Unit | H.38 | 58 | |
| C.1864 | Ring, retaining Needle Rollers | H.39 | 3 | |
| C.1858 C.1859 | Washer, Thrust, Inner, at front of Countershaft Washer, Thrust, Outer, at front of Countershaft | H.40 H.41 | 1 | |
| C.1861 | Washer, Thrust, Inner at rear of Countershaft | H.42 | i | |
| C.1862 | Washer, Thrust, Outer, at rear of Countershaft. | H.43 | As req'd. | 1 |
| C.1862/1 | (.156" thick) Washer, Thrust, Outer, at rear of Countershaft. (.159" thick) | H.43 | As req'd. | 1 |
| C.1862/2 | Washer, Thrust, Outer, at rear of Countershaft. (.162' thick) | H.43 | As req'd. | Countersnait, select the washe |
| | (,102 tillek) | | | which has the desired thickness |
| C.1862/3 | Washer, Thrust, Outer, at rear of Countershaft. | H.43 | As req'd. | |
| C.1862/3 C.1862/4 | Washer, Thrust, Outer, at rear of Countershaft. (152" thick) Washer, Thrust, Outer, at rear of Countershaft. | H.43 H.43 | As req'd. As req'd. | |

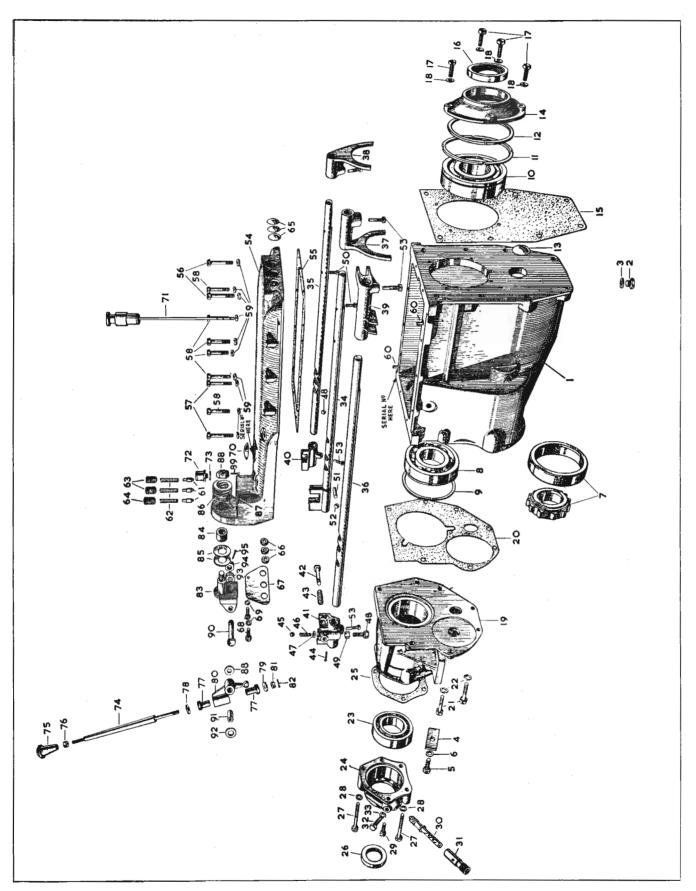


PLATE G.

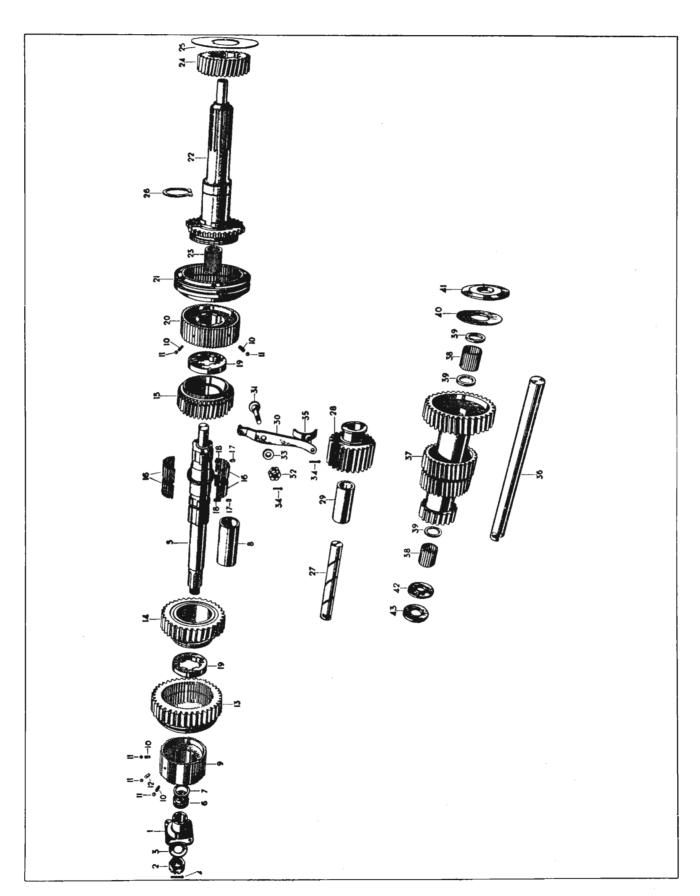


PLATE H.

GEARBOX ("J.H." SERIES)

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
|--|--|--|---|---|-----------------------|
| C.2036/1 | GEARBOX ASSEMBLY | | 1 | SERIAL No. JH.10 fitted from Chassis 660001 to 660934 670001 to 671796 | No. 669001 and 669002 |
| C.2071 | Casing only | G.1 | 1 | | |
| C.799 C.785 | Plug, Drain, at bottom of Casing Washer (Fibre) on Drain Plug | G.2A G.2B | 1 | | |
| C _* 857 | Plate, Locking Counter and Reverse Shafts | G.3 | 1 | | |
| FS.205/7D FG.105/X | Screw, Set, securing Locking Plate Washer, Spring, on Setscrew | G.4 G.5 | 1 | | |
| C.883 | Bearing, Roller, for Mainshaft (Hoff: R.M.S. 12 L) | G.6A | 1 | | |
| C.1838 C.1841 | Bearing, Ball, for Constant Pinion Shaft (Hoff: 340K.) Collar between Casing and Circlip | G.8 G.9 | 1 | | |
| C.1840 | Circlip, on Ball Bearing, behind Collar | G.10 | 1 | | |
| C.920 | Washer (Fibre) in Casing, at front end of Counter- shaft | G.11 | 1 | | |
| C.1833 | FRONT END COVER | G.12 | 1 | | |
| C.1834 | Washer, Jointing, between Front Cover and Casing | G.13 | 1 | | |
| C.912 C.359 | Seal, Oil Screw, Set, securing Cover to Casing | G.14 G.15 | 1 4 | | |
| FW.105/E | Washer, Plain, on Setscrews | G.16 | 4 | | |
| C.837 | Wire, locking Setscrews (approx. 9" lengths) | | As req' | d. | |
| C.2548 | GEARBOX EXTENSION | G.17 | 1 | | |
| C.1866 | Washer, Jointing, between Extension and Casing | G.18 | 1 | | |
| FS.105/9D FG.105/X | Screw, Set, securing Extension to Casing Washer, Spring, on Setscrews | G.19 G.20 | 7 7 | | |
| C.924 C.921 | Bearing, Ball (Hoff:MS.12) Washer (Felt) in Extension, at rear end of Counter- shaft | G.21 G.22 | 1 1 | | |
| C.886 | REAR END COVER | G.23 | 1 | | |
| C.862 | Washer, Jointing, between Rear End Cover and | G.24 | 1 | | |
| C.859 | Extension Seal, Oil | G.25 | 1 | | |
| C863 | Bolt, securing Cover to Extension | G.26 | 4 | | |
| FG.105/X FS.305/5H | Washer, Spring, on Bolts Screw, Set, in aperture for Speedo Driven Gear, | G.27 G.28 | 1 | | |
| , | securing Cover to Extension | C 20 | | | |
| C.843 C.858 | Gear, Speedometer Driven Bearing for Speedometer Driven Gear | G.29 G.30 | 1 | | |
| C.846 | Screw, locking Bearing in Cover | G.31 | 1 | | |
| FG.105/X | Washer, Spring, on Locking Screw | G.32 | ' | | |
| | | | | | |
| | STRIKING GEAR | | | | |
| C.907 | Rod, Striking (1st/2nd Gears) | G.33 | 1 | | |
| C.877 | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) | G.34 | 1 | | |
| C.877 C.878 C.904 | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) Rod, Striking (Reverse Gear) | G.34 G.35 G.36 | 1 1 1 | | |
| C.877 C.878 C.904 C.872 | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) Rod, Striking (Reverse Gear) Fork, Change-Speed (1st/2nd Gears) Fork, Change-Speed (3rd/Top Gears) | G.34 G.35 G.36 G.37 | 1 | | |
| C.877 C.878 C.904 C.872 C.913 C.905 | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) Rod, Striking (Reverse Gear) Fork, Change-Speed (1st/2nd Gears) Fork, Change-Speed (3rd/Top Gears) Fork, Change-Speed (Reverse) Selector (3rd/Top) | G.34 G.35 G.36 G.37 G.38 G.39 | 1 1 1 1 | | |
| C.877 C.878 C.904 C.872 C.913 C.905 C.1910 | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) Rod, Striking (Reverse Gear) Fork, Change-Speed (1st/2nd Gears) Fork, Change-Speed (3rd/Top Gears) Fork, Change-Speed (Reverse) Selector (3rd/Top) Selector (Reverse) | G.34 G.35 G.36 G.37 G.38 G.39 G.40 | 1 1 1 1 1 1 | | |
| C.877 C.878 C.904 C.872 C.913 C.905 C.1910 C.1909 C.2022 | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) Rod, Striking (Reverse Gear) Fork, Change-Speed (1st/2nd Gears) Fork, Change-Speed (3rd/Top Gears) Fork, Change-Speed (Reverse) Selector (3rd/Top) Selector (Reverse) Plunger in Reverse Selector Spring on Plunger | G.34 G.35 G.36 G.37 G.38 G.39 | 1 1 1 1 | | |
| C.877 C.878 C.904 C.872 C.913 C.905 C.1910 C.1909 C.2022 C.914 | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) Rod, Striking (Reverse Gear) Fork, Change-Speed (1st/2nd Gears) Fork, Change-Speed (3rd/Top Gears) Fork, Change-Speed (Reverse) Selector (3rd/Top) Selector (Reverse) Plunger in Reverse Selector Spring on Plunger Shim under Spring | G.34 G.35 G.36 G.37 G.38 G.39 G.40 G.41 | 1 | | |
| C.877 C.878 C.904 C.872 C.913 C.905 C.1910 C.1909 C.2022 C.914 AS.102/4D | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) Rod, Striking (Reverse Gear) Fork, Change-Speed (1st/2nd Gears) Fork, Change-Speed (3rd/Top Gears) Fork, Change-Speed (Reverse) Selector (3rd/Top) Selector (Reverse) Plunger in Reverse Selector Spring on Plunger Shim under Spring Screw, Set, in Reverse Selector, adjusting tension on Spring | G.34 G.35 G.36 G.37 G.38 G.39 G.40 G.41 | 1 1 1 1 1 1 1 1 1 | | |
| C.877 C.878 C.904 C.872 C.913 C.905 C.1910 C.1909 C.2022 C.914 | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) Rod, Striking (Reverse Gear) Fork, Change-Speed (1st/2nd Gears) Fork, Change-Speed (3rd/Top Gears) Fork, Change-Speed (Reverse) Selector (3rd/Top) Selector (Reverse) Plunger in Reverse Selector Spring on Plunger Shim under Spring Screw, Set, in Reverse Selector, adjusting tension | G.34 G.35 G.36 G.37 G.38 G.39 G.40 G.41 | 1 | | |

GEARBOX ("J.H." SERIES)

| | STRIKING GEAR (continued) | | |
|-----------------------|--|-------------------|---------------------------------------|
| C.900 | Spring under Ball | G.45 | 1 |
| C.882 | Pin, Stop, on 1st/2nd and 3rd/Top Striking Rods | G.46 | 2 |
| C.874 C.923 | Roller for Interlock (in 1st/2nd Striking Rod) Balls for Interlock (in 3rd/Top and Reverse Striking | G.47 G.48 | 1 2 |
| | Rods) | | |
| C.844 C.837 | Screw, Set (Taper) securing Forks and Selectors Wire, locking Taper Screws and Stop Pins | G.49 | 5 As req'd. |
| C.1927 | TOP COVER | G.50 | 1 |
| C.860 | Washer, Jointing, between Cover and Casing | G.51 | 1 |
| FB.105/15D | Bolt, securing Cover | G.52 | 2 |
| FB.105/14D | Bolt, securing Cover | G.53 | 2 |
| FB.105/12D | Bolt, securing Cover | G.54 | 6 |
| FG.105/X OD.105/6H | Washer, Spring, on Bolts Dowel, in Casing, positioning Top Cover | G.55 G.56 | 10 2 |
| C.848 | Plunger, engaging Striking Rods | G.57 | 3 |
| C.845 | Spring, top of Plungers | G.58 | 3 |
| C.849 | Screw, Grub, applying Tension to Plungers for | G.59 | 2 |
| C.884 | 1st/2nd and 3rd/Top Striking Rods Screw, Grub, applying tension to Plunger for Reverse | G.60 | 1 |
| C.837 | Striking Rod Wire locking Grub Screw | | As reg'd. |
| C.873 | Plug in front end of Cover | G.61 | 3 |
| C.929 | Washer (Felt) in rear end of Cover | G.62 | 3 |
| C.880 | Plate, covering Felt Washers | G.63 | 1 |
| FS.104/3D | Screw, Set, securing Cover Plate | G.64 | 2 |
| FG.104/X | Washer, Spring, on Setscrews | G.65 | 2 |
| .C.315 | Plug, Core, on top of Cover | G.66 | 1 |
| C.2675 | Dipstick | G.67 | - 1 |
| C.841 | Plug, Breather, on top of Cover | G.68 | 1 |
| C.930 C.927 | Washer (Fibre) on Breather Plug Screw, Grub, in side of Cover, for insertion of Inter- lock Balls and Roller | G.69 | 1 |
| C.2462 | CHANGE-SPEED LEVER | G.70 | 1 |
| C.4054 | CHANGE-SPEED LEVER | | 1 REQUIRED ONLY WHEN RADIO IS FITTED. |
| C.2291 | Knob on Lever | G.71 | 1 |
| C.1928 | Nut, locking Knob to Lever | G.72 | i |
| C.1915 | Bearing, Flexible, housing Change-Speed Lever in Selector Lever | G,73 | 2 halves. |
| C.1919 | Washer at top of Flexible Bearing | G.74 | 1 |
| C.1904 | Washer at bottom of Flexible Bearing | G.75 | 1 |
| C.1918 FN.405/L | Lever, Selector, housing Change-Speed Lever Nut, Slotted, securing Change-Speed Lever in Selector Lever | G.76 G.77 | 1 |
| L.103/8U | Pin, Split, securing Slotted Nut | G.78 | 1 |
| C.1913 | Jaw, Pivot, for Selector Lever | G.79 | 1 |
| C.1907 | Bush for Pivot Jaw | G.80 | 1 |
| C.1894 | Washer, Thrust, on Pivot Jaw | G.81 | 2 |
| C.1914 C.1905 | Washer, Locking, on Pivot Jaw | G.82 | 1 |
| FN.407/L | Washer, Spring, on Pivot Jaw Nut, Slotted, securing Pivot Jaw | G.83 G.84 | 1 |
| L.103/8U | Pin, Split, securing Slotted Nut | G.85 | 1 |
| C.1912 | Pin, Pivot, mounting Selector Lever in Pivot Jaw | G.86 | 1 |
| C.1906 | Bush, in Selector Lever, for Pivot Jaw | G.87 | 1 |
| C.1908 C.1929 | Washer, Thrust, at each side of Selector Lever Washer, Spring, between Thrust Washer and Pivot Jaw | G.88 G.89 | 2 1 |
| FN.407/L L.103/8U | Nut, Slotted, securing Pivot Pin Pin, Split, securing Slotted Nut | G.90 G.91 | 1 |
| C.885 | FLANGE ON MAINSHAFT | J.1 | 1 |
| | | | |
| C.840 C.925 | Nut, Slotted, securing Flange Washer, Plain, under Slotted Nut Pin, Split, securing Slotted Nut | J.2 J.3 J.4 | 1 1 |

GEARBOX ("J.H." SERIES)

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|-------------------|--|--------------|------------------|---|
| C.2677 | MAINSHAFT | J.5 | 1 | |
| C.910 | Gear, Speedometer Driving | J.6 | 1 | |
| C.909 | Piece, Distance, behind Speedometer Driving Gear | J.7 | 1 | |
| C.1854 | Sleeve, Distance, on Mainshaft | J.8 | 1 | |
| C.2679 | Sleeve, Synchronising, 2nd Speed | J.9 | 1 | |
| C.900 | Spring, in 2nd and 3rd/Top Speeds Synchro Sleeves | J.10 | 12 | |
| C.922 | Ball in 2nd and 3rd/Top Speeds Synchro Sleeves | J.11 | 13 | |
| C.901 C.2040 | Plunger in 2nd Speed Synchro Sleeve | J.12 J.13 | 1 | |
| C.4125 | Wheel, Gear, 1st Speed Wheel, Gear, 2nd Speed | J.14 | i | |
| C.4123 | Wheel, Gear, 3rd Speed | J.15 | i | |
| C.1850 | Roller, Needle, in 2nd and 3rd Speed Gear Wheels | J.16 | 82 | |
| C.1849 | Plunger, in Mainshaft, locking 2nd and 3rd Speed Gear Wheels | J.17 | 2 | |
| C.1324 | Spring under Plungers | J.18 | 2 | |
| C.2678/1 | Washer, Thrust, front and rear of 2nd and 3rd | J.19 | 2 | |
| C.2678/2 | Speed Gear Wheels (.471"/.472" thick) Washer, Thrust, front and rear of 2nd and 3rd | | 2 | |
| C.2678/3 | Speed Gear Wheels ('473"/-474" thick) Washer, Thrust, front and rear of 2nd and 3rd | | 2 | |
| C 4433 | Speed Gear Wheels (.475"/.476" thick) | 1.20 | | |
| C.4122 C.2568 | Sleeve, Synchronising, 3rd/Top Speeds | J.20 J.21 | 1 | |
| C.903 | Sleeve, Operating, 3rd/Top Speeds Shim, for Synchro Sleeve (.006" thick) | 3.21 | As rec | n'd |
| C.914 | Shim, for Synchro Sleeve (.028" thick) | | As rec | |
| C.2685 | CONSTANT PINION SHAFT ASSY. | J.22 | 1 | |
| C (702 | CONSTANT BINION SHAFT ASSY | | 4 | SPECIAL EQUIPMENT FOR COMPE- |
| C.6792 | CONSTANT PINION SHAFT ASSY. | | 1 | TITION PURPOSES ONLY. |
| | NOTE.—When Shaft C.6792 is supplied, the following must be included:—C.6745 Oil Thrower; C.1838/I Circlip; C.2109 Washer; C.2111 and C.2119 Shims. | | | HITON PORPOSES ONLY. |
| C.1843 | Bearing, Roller, inside Shaft | J.24 | 1 | |
| C.2121 | Thrower, Oil | J.25 | 1 | |
| C.2066 | Nut, locking Bearing to Shaft | J.26 | 1 | |
| C.2067 | Circlip, securing Locknut | J.27 | 1 | |
| C.2070 | REVERSE SPINDLE | J.28 | 1 | |
| C.2044/1 | Gear, Reverse (complete with Bush) | J.29 | 1 | (Fitted from Gearbox No. JH.10 |
| C.2069 | Bush in Reverse Gear | J.30 | i | to JH.2182. |
| C.2044/2 | Gear, Reverse (complete with Bush) | | 1 | Fitted to Gearbox No. JH.2183 |
| C.3383 | Bush in Reverse Gear | | 2 | and subs. |
| C.1893 | Lever, operating Reverse Gear | J.31 | 1 | |
| C.1899 | Pin, Fulcrum, for operating Lever | J.32 | 1 | |
| C.777 | Nut, Slotted, securing Fulcrum Pin | J.33 | 1 | |
| FW.106/T | Washer, Plain, under Slotted Nut | J.34 | 1 2 | |
| L.103/8U C.866 | Pin, Split, securing Fulcrum Pin and Reverse Slipper Slipper, Reverse | J.35 J.36 | 1 | |
| C.1856 | COUNTERSHAFT | J.37 | | · |
| | | | | |
| C.2041 C.1864 | Gear, 1st Speed (on Counter) | J.38 J.39 | 1 2 | |
| C.918 | Ring, Retaining, at rear of Needle Rollers Roller, Needle | J.40 | 58 | |
| C.1861 | Washer, Thrust, Inner, at rear end of Counter, adjacent to Needle Rollers | J.41 | 1 | |
| C.1862 | Washer, Thrust, Outer, at rear end of Counter (.156" thick) | J.42 | As rec | q'd. |
| C.1862/1 | Washer, Thrust, Outer, at rear end of Counter (.159" thick) | J.42 | As re | ' |
| C.1862/2 | Washer, Thrust, Outer, at rear end of Counter (162" thick) | J.42 | As re | shart, select the washer which has |
| C.1862/3 | Washer, Thrust, Outer, at rear end of Counter (.152" thick) | J.42 | As red | q'd. the desired thickness. |
| C.1862/4 | Washer, Thrust, Outer, at rear end of Counter (.164" thick) | J.42 | As re | q'd. |
| C2043 | Ring, Retaining, on outer end of Front Needle Rollers | J.43 | 1 | • |
| C.2042 | Washer, Thrust, Inner, at front end of Counter | J.44 | 1 | |
| C.1859 | Washer, Thrust, Outer, at front end of Counter | J.45 | | |
| C.2045 | Wheel, Constant | J.46 | | |
| C.2046 | Gear, 3rd Speed | J.47 | | |
| C.2047 | Gear, 2nd Speed | J.48 | | |
| C.2048 | Ring, Split, locating Constant Wheel | J.49 | | ves. |
| C.2072 | Circlip, positioning 3rd Speed Gear and Constant | J.50 | 2 | |
| C F00/ | Wheel (Seeger 13 ext.) | | 4 | CRECIAL FOLLOWERS FOR COMME |
| C.5826 | Wheel, Constant | | 1 | SPECIAL EQUIPMENT FOR COMPE- TITION PURPOSES ONLY. |

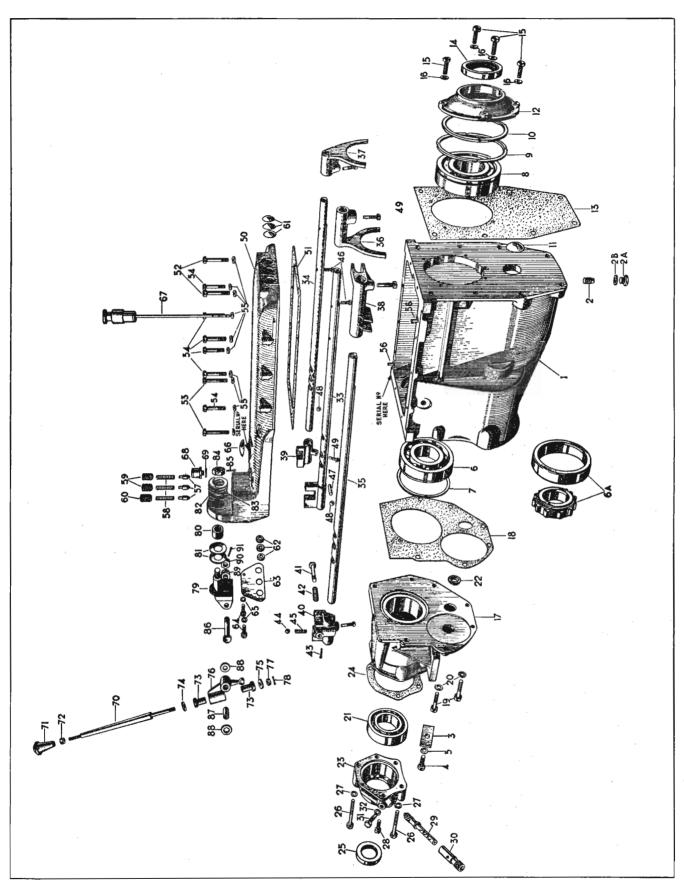


PLATE G.

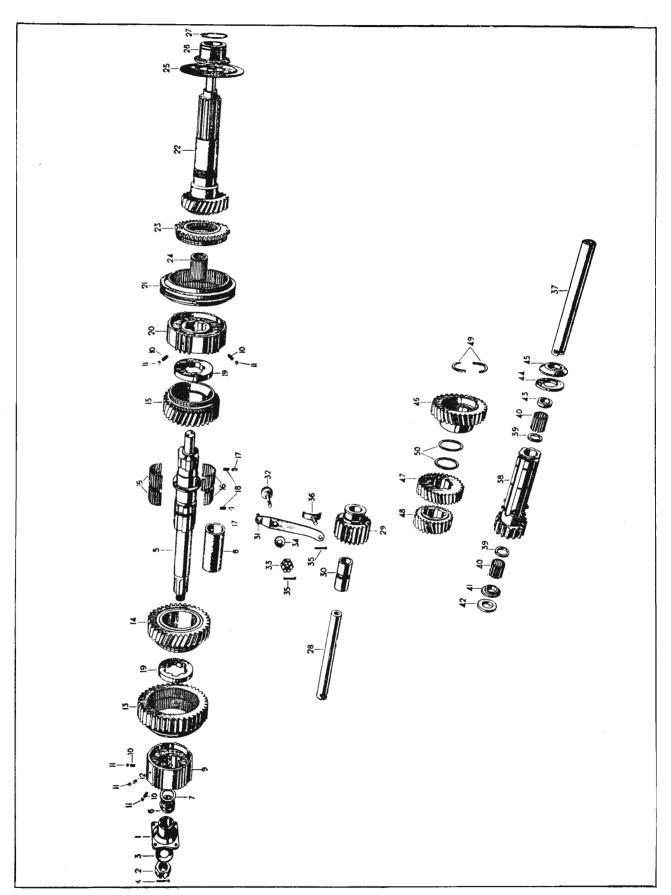


PLATE J.

GEARBOX ("J.L." SERIES)

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|---|--------------|---------------------------------------|---|
| C.6776 | GEARBOX ASSEMBLY | | 1 | FROM SERIAL No. JL.8806 commencing at Chassis No. 660935 and subs. 679215 and subs. |
| C.2071 C.799 C.785 C.857 FS.205/7D FG.105/X C.1845 C.1855 C.1838 | Casing only Drain Plug at bottom of Casing Washer (Fibre) on Drain Plug Plate, locking Counter and Reverse Shafts Screw, Set, securing Locking Plate Washer, Spring, on Setscrew Bearing, Ball, for Mainshaft (Hoffman M.S.12‡K) Circlip, securing Mainshaft Bearing Bearing, Ball, for Constant Pinion Shaft (Hoffman 340K) | | 1 1 1 1 1 1 1 | |
| C.1841 C.1840 C.920 | Collar, between Casing and Circlip Circlip, securing Constant Pinion Shaft Bearing Washer (Fibre) at front end of Countershaft | | 1 1 1 | |
| C.1833 | FRONT END COVER | | 1 | |
| C.1834 C.6738 C.359 FW.105/E C.837 | Gasket, between Front Cover and Casing Seal, Oil Screw, Set, securing Cover to Casing Washer (Copper) on Setscrews Wire, locking Setscrews | | 1 1 4 4 2 | |
| C.6767 | REAR END COVER | | 1 | |
| C.1866 SF.105/9D FG.105/X C.921 C.859 C.843 C.858 C.846 FG.105/X | Gasket, between Rear End Cover and Casing Screw, Set, securing Rear End Cover to Casing Washer, Spring, on Setscrews Washer (Felt) at rear end of Countershaft Seal, Oil Gear, Speedometer Driven Bearing, for Speedometer Driven Gear Screw, locking Bearing in Cover Washer, Spring, on Screw | | 1 7 7 1 1 1 1 | |
| | STRIKING GEAR | | | |
| C.907 C.877 C.878 C.7358 C.904 C.872 C.913 C.905 C.1910 C.1909 C.2022 C.914 AS.102/4D AN.102/L L.103/7U C.922 C.900 C.882 C.874 C.923 | Rod, Striking (1st/2nd Gears) Rod, Striking (3rd/Top Gears) Rod, Striking (Reverse Gear) Rod, Striking (Reverse Gear) Rod, Striking (Reverse Gear) Fork, Change-Speed (1st/2nd Gears) Fork, Change-Speed (3rd/Top Gears) Fork, Change-Speed (Reverse Gear) Selector (3rd/Top Gears) Selector (Reverse Gear) Plunger in Reverse Selector Spring on Plunger Shim under Spring Screw, Set, in Reverse Selector, adjusting tension on Spring Nut, locking Setscrew in position Pin, Split, securing Plunger in Reverse Selector Ball, locking Plunger Spring under Ball Pin, Stop, on 1st/2nd and 3rd/Top Striking Rods Roller for Interlock (in 1st/2nd Striking Rod) Balls for Interlock (in 3rd/Top and Reverse Striking Rods) | | 1 1 1 1 1 1 1 1 1 1 1 1 1 1 2 1 2 1 2 | Fitted from Gearbox JL.8806 to JL.13153 Fitted to Gearbox JL.13154 and subs. |
| C.844 C.837 | Screw, Set (Taper), securing Forks and Selectors Wire, locking Taper Screws and Stop Pins | | 5 As req'd. | |

GEARBOX ("J.L." SERIES)

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---------------------------|--|--------------|------------------|---|
| C.1927 | TOP COVER | | 1 | Fitted from Gearbox JL.8806 to JL.13153 |
| C.6878 | TOP COVER | | 1 | Fitted to Gearbox JL.13154 and subs. |
| C.860 | Gasket, between Top Cover and Casing | | 1 | |
| B.105/15D B.105/14D | Bolt, securing Cover Bolt, securing Cover | | 2 2 | |
| B.105/12D | Bolt, securing Cover | | 6 | |
| G.105/X | Washer, Spring, on Bolts | | 10 | |
| D.105/6H 2.848 | Dowel, in Casing, positioning Top Cover Plunger, engaging Striking Rods | | 2 3 | |
| .845 | Spring, at top of Plungers | | 3 | |
| C.849 | Screw, Grub, applying tension to Plungers for 1st/2nd | | 2 | |
| C.884 | and 3rd/Top Striking Rods Screw, Grub, applying tension to Plunger for Reverse Striking Rod | | 1 | |
| C.837 | Wire, locking Grub Screws | | As req'd. | |
| C.873 C.929 | Plug in front end of Cover Washer (Felt) in rear end of Cover | | 3 3 | |
| 2.880 | Plate, covering Felt Washers | | 1 | |
| S.104/3D | Screw, Set, securing Cover Plate | | 2 2 | |
| G.104/X C.315 | Washer, Spring, on Setscrews Plug, Core, on top of Cover | | 1 | |
| C.2675 | Dipstick | | i | |
| C.841 | Plug, Breather, on top of Cover | | 1 | |
| C.930 C.927 | Washer (Fibre) on Breather Plug Screw, Grub, in side of Cover, for insertion of Interlock Balls and Roller | | 1 | |
| C.2462 | CHANGE-SPEED LEVER | | 1 | |
| C.4054 | CHANGE-SPEED LEVER | | 1 | REQUIRED ONLY WHEN RADIO IS |
| .2291 | Knob for Lever | | 1 | |
| C.1928 C.1915 | Nut, locking Knob to Lever Bearing, Flexible, housing Change-Speed Lever in Selector Lever | | 1 2 halves | |
| C.1919 | Washer at top of Flexible Bearing | | 1 | |
| C.1904 | Washer at bottom of Flexible Bearing | | 1 | |
| C.1918 N.405/L | Lever, Selector, housing Change-Speed Lever Nut, Slotted, securing Change-Speed Lever in Selector Lever | | 1 | |
| 103/8U | Pin, Split, securing Slotted Nut | | 1 | |
| C.1913 C.1907 | Jaw, Pivot, for Selector Lever Bush for Pivot Jaw | | 1 | |
| C.189 4 | Washer, Thrust, on Pivot Jaw | | ż | |
| 2.1914 | Washer, Locking, on Pivot Jaw | | 1 | |
| C.1905 N.407/L | Washer, Spring, on Pivot Jaw Nut, Slotted, securing Pivot Jaw | | 1 | |
| 103/8U | Pin, Split, securing Slotted Nut | | 1 | |
| C.1912 C.1906 | Pin, Pivot, mounting Selector Lever in Pivot Jaw Bush, in Selector Lever, for Pivot Jaw | | 1 | |
| C.1908 | Washer, Thrust, at each side of Selector Lever | | 2 | |
| C.1929 | Washer, Spring, between Thrust Washer and Pivot | | 1 | |
| N.407/L | Jaw Nut, Slotted, securing Pivot Pin | | 1 | |
| 103/8U | Pin, Split, securing Slotted Nut | | 1 | |
| C.885 | FLANGE ON MAINSHAFT | | 1 | |
| C.840 C.925 104/12U | Nut, Slotted, securing Flange Washer, Plain, under Slotted Nut Pin, Split, securing Slotted Nut | | 1 1 1 | |
| C.4994 | MAINSHAFT | | 1 | |
| C.910 | Gear, Speedometer Driving | | 1 | |
| C.909 | Piece, Distance, behind Speedometer Driving Gear | | 1 | |
| C.3679 C.7480 | Sleeve, Synchronising, 2nd Speed | | 1 1 | Fitted from Gearbox JL.8806 to JL.13833 Fitted to Gearbox JL.13834 and subs. |
| C.900 | Sleeve, Synchronising, 2nd Speed (c/w. Stop Pin) Spring, in 2nd and 3rd/Top Synchro Sleeves | | 12 | TILLEG TO GEALDOX JE. 13034 AND SUDS. |
| C.922 | Ball, in 2nd and 3rd/Top Synchro Sleeves | | 13 | |
| C.901 | Plunger in 2nd Speed Synchro Sleeve | | 1 | |
| | | | | |

GEARBOX ("J.L." SERIES)

| Part No. | Description. | Plate No. per No. Unit Remarks. | |
|--|---|---|------|
| | MAINSHAFT (continued) | | |
| C.2040 C.4125 C.4123 C.1850 C.1849 | Gear, 1st Speed Gear, 2nd Speed Gear, 3rd Speed Roller, Needle, in 2nd and 3rd Speed Gears Plunger, in Mainshaft, locking 2nd and 3rd Speed | 1 1 1 82 2 | |
| C.1324 C.2678 | Gears Spring under Plungers Washer, Thrust, front and rear of 2nd and 3rd Speed | 2 2 | |
| C.2678/1 | Gears Washer, Thrust, front and rear of 2nd and 3rd Speed Gears | 2 | |
| C.2678/2 | Washer, Thrust, front and rear of 2nd and 3rd Speed Gears | 2 | |
| C.4122 C.901 C.922 C.4049 C.903 C.914 | Sleeve, Synchronising, 3rd/Top Speeds Plunger in 3rd/Top Synchro Sleeve Ball for Plungers Sleeve, Operating, 3rd/Top Speeds Shim for Synchro Sleeve ('006" thick) Shim for Synchro Sleeve ('028" thick) | 1 2 2 1 As req'd. As req'd. | |
| C.6751 | CONSTANT PINION ASSEMBLY | 1 | |
| C.1843 C.2121 C.1838/1 C.2109 C.2110 C.2111 | Bearing, Roller, inside Shaft Thrower, Oil Circlip for Constant Pinion Washer for Constant Pinion Shim for Constant Pinion Shim for Constant Pinion | 1 1 1 1 As req'd. As req'd. | |
| C.2070 | REVERSE SPINDLE | 1 | |
| C.2044/2 C.1893 C.1899 C.777 FW.106/T L.103/BU C.866 C.4284 | Gear, Reverse (complete with Bush) Lever, operating Reverse Gear Pin, Fulcrum, for Operating Lever Nut, Slotted, securing Fulcrum Pin Washer, Plain, under Slotted Nut Pin, Split, securing Slotted Nut and Reverse Slipper Slipper, Reverse Ring, Sealing (Cord) on Reverse Spindle | 1 1 1 1 2 1 1 | |
| C.1856 | COUNTERSHAFT | 1 | |
| C.2041 C.1864 C.918 C.1861 | Gear, 1st Speed (on Counter) Ring, Retaining, at rear of Needle Rollers Roller, Needle Washer, Thrust, Inner, at rear end of Counter adjacent to Needle Rollers | 1 2 58 1 | |
| C.1862 | Washer, Thrust, Outer, at rear of Counter (156" thick) | 1 | |
| C.1862/1 | Washer, Thrust, Outer, at rear of Counter (159" thick) | To eliminate end float on the Cour | nter |
| C.1862/2 | Washer, Thrust, Outer, at rear of Counter (162" thick) | 1 shaft, select the Washer which has desired thickness. | |
| C.1862/3 | Washer, Thrust, Outer, at rear of Counter (152" thick) | 1 | |
| C.1862/4 C.2043 C.2042 C.1859 C.2045 C.2046 C.2046 C.2047 C.2048 C.2072 | Washer, Thrust, Outer, at rear of Counter (164" thick) Ring, Retaining, on outer end of Front Needle Rollers Washer, Thrust, Inner, at front end of Counter Washer, Thrust, Outer at front end of Counter Wheel, Constant Gear, 3rd Speed Countershaft Gear, 2nd Speed Countershaft Ring, Split, locating Constant Wheel Circlip, positioning 3rd Speed Gear and Constant | 1 1 1 1 1 1 1 1 1 1 | |
| C.4285 | Wheel Ring, Sealing (Cord), on Countershaft | 1 | |

| Part No. | Description. | Piate No. | No. per Unit. Remarks. |
|--|--|----------------------|---|
| C.3842 | FRONT SUSPENSION ASSEMBLY, L.H. | | 1 Fitted from Chassis No. |
| C.3841 | FRONT SUSPENSION ASSEMBLY, R.H. | | 660001 to 660979 670001 to 672048 669001 to 669002 679001 to 679621 |
| C.6797 | FRONT SUSPENSION ASSEMBLY, L.H. | | 1 Fitted to Chassis No. 660980 and subs. 672049 and subs. |
| C.6796 | FRONT SUSPENSION ASSEMBLY, R.H. | | 669003 and subs. 679622 and subs. 677001 and subs. |
| C.3002 C.3166/1 | Shaft, supporting Upper Wishbone Levers Shim, Wheel Camber Adjustment, between Shaft | M.1 M.2 | 2 As req'd. |
| C.3166/2 | and Chassis Frame ('064") Shim, Wheel Camber Adjustment, between Shaft | M.2 | As req'd. |
| C.3166/3 | and Chassis Frame ('048") Shim, Wheel Camber Adjustment, between Shaft | M.2 | As req'd. |
| NB.150/48D | and Chassis Frame (*036") Bolt (Top) securing Upper Wishbone Shafts to Chassis Frame | M.3 | 4 |
| C.3164 | Tube, Distance, on Bolts | M.4 | 2 |
| C.8150/9 NB.137/10D | Nut, Self-Locking, on Bolts Bolt (Bottom) securing Upper Wishbone Shafts to Chassis Frame. (If longer Bolt required, use | M.5 M.6 | 4 3 |
| NB.137/14D | NB.137/12D) Bolt (Bottom) (Long) securing Upper Wishbone Shaft and Idle Lever Bracket to Chassis Frame. | M.7 | 1 |
| C.8150/7 C.3796 | (If longer Bolt required, use NB.137/16D) Nut, Self-Locking, on Bolts Lever, Wishbone, Upper Front | M.8 M.9 | 4 2 Fitted from Chassis No. 660001 to 660125 670001 to 670438 |
| C.3797 | Lever, Wishbone, Upper Rear | M.10 | 2 Fitted from Chassis No. 660001 to 660979 670001 to 672048 669001 to 669002 679001 to 679621 |
| C.4739 | Lever, Wishbone, Upper Front | | 2 Fitted to Chassis No. 660126 and subs. 670439 and subs. 667001 and subs. 677001 and subs. |
| C.4733 | Lever, Wishbone, Upper Rear | | 2 Fitted to Chassis No. 660980 and subs. 672049 and subs. 667001 and subs. 677001 and subs. |
| C.4740 NB.137/30D | Piece, Distance, for Upper Wishbone Lever Bolt, securing Housing and Levers | | 2 Fitted from Chassis No. 4 660126 to 660979 669001 to 669002 670439 to 672048 679001 to 679621 |
| C.3003 C.3010/1 | Bush (Metalastik) in Levers Nut, Slotted, securing Levers to Upper Wishbone Shafts | M.11 M.12 | 8 4 |
| C.3193 L.104/10U | Washer, under Nuts | M.13 M.14 | 4 |
| NB.137/27D | Pin, Split, locking Slotted Nuts Bolt, securing Housing and Levers | M.15 | 4 Fitted from Chassis No. 660001 to 660125 670001 to 670438 660980 and subs. 669003 and subs. 667001 and subs. 677001 and subs. |
| C.3007 | Plate, Locking, on Bolts | M.16 | 4 |
| NN.137/L C.3019 NB.137/10D | Nut, on Bolts Shaft, supporting Lower Wishbone Levers Bolt, securing Lower Wishbone Shafts to Chassis | M.17 M.18 M.19 | 4 2 4 |
| C.3653 | Frame Bolt, securing Lower Wishbone Shafts to Chassis | M.19 | 4 |
| C.8150/7 C.3013 C.3005 C.3017 C.4186 C.4187 | Frame Nut, Self-Locking, on Bolts Lever, Wishbone, Lower Front Lever, Wishbone, Lower Rear, L.H. Lever, Wishbone, Lower Rear, R.H. Lever, Wishbone, Lower Rear, L.H. Lever, Wishbone, Lower Rear, R.H. | M.20 M.21 M.22 | SUPERSEDED BY C.4186 SUPERSEDED BY C.4187 SUPERSEDES C.3005 SUPERSEDES C.3017 |
| C.3018 C.3021 C.3010/2 | Pin, in Lower Rear Wishbone Levers Bush in Levers Nut, Slotted, securing Levers to Lower Wishbone Shafts | M.23 M.24 M.25 | 2 8 4 |
| C.3114 | Washer, under Nuts | M.26 | 4 |

| Part No. | Description. | Plate No. | No. per Unit. Remarks. |
|-----------------------|---|--------------|--|
| | FRONT SUSPENSION ASSEMBLY (cont | tinued) | |
| L.105/12U NN.756/L | Pin, Split, locking Nuts Nut, securing Front Lower Wishbone Levers to | M.27 M.28 | 4 2 |
| 1111.750/2 | Lower Rear Wishbone Pins | | |
| C.3004/2 | Washer under Nuts | M.29 | 2 |
| 104/10U | Pin, Split, locking Nuts | M.30 | 2 1 |
| C.3606 C.3009 | Carrier, L.H. Stub Axle Carrier, R.H. Stub Axle | N.1 | |
| C.3006 | Housing, Ball-joint, at top of Carrier | N.2 | 2 NOT SUPPLIED SEPARATELY |
| C.3169 | Shim, Wheel Castor Adjustment, between Hous- ing and Rear Upper Wishbone Levers | N.3 | As req'd. |
| C.3031 | Ball-Pin, in Upper Ball-Joint Housing | N.4 | 2 |
| C.3032 | Socket, over Ball-Pin | N.5 | NOT SUPPLIED SEPARATELY |
| C.635 | Spring in Socket | N.6 N.7 | |
| C.3034 C.3362 | Plate, Cover, over Socket Nipple, Grease, in Cover Plate | N.8 | 2, |
| C.3020 | Seal (Rubber) between Ball-Joint Housing and Stub Axle Carrier | N.9 | 2 |
| C.3625 | Nut, Slotted, securing Ball-Pin to Stub Axle Carrier | | Elevation Character No. |
| C.3004/4 | Washer under Nuts | | Fitted from Chassis No. 660001 to 660026 |
| L.103/ 7 ∪ | Pin, Split, locking Slotted Nuts | | 2 |
| C.3030 | Balf-Joint Assembly (comprising C.3006, C.3031, C.3032, C.635, C.3034, C.3362, C.3020, C.3004/4 and C.3625) | | NOW SUPERSEDED BY C.4498 |
| C.4498 | Ball-Joint Assy. (comprising C.3006, C.4499, C.3032, C.635, C.3034, C.3362, C.3020, FW.108/T | | 2 |
| NN.750/L | NN.750/L) Nut, Slotted, securing Ball-Joint Assy. to Stub Axle Carrier | | Fitted from Chassis No. 660227 to 661032 669001 to 669002 670760 to 673022 679001 to 680192 |
| W.108/T | Washer, Plain, under Nuts | | 2 |
| 104/10U | Pin, Split, locking Slotted Nuts | | $\tilde{\mathbf{z}}$ |
| C.7378 | Ball-Joint Assembly | | 2) Fitted to Chassis No. |
| NN.750/L | Nut, Slotted, securing Ball-Joint | | 2 661033 and subs. 669003 and subs. |
| W.108/T | Washer, Plain, under Nuts | | 2 673023 and subs. 680193 and subs. 2 667001 and subs. 677001 and subs. |
| 104/10U C.3022 | Pin, Split, locking Slotted Nuts Ball-Pin, Lower, in Housing on Stub Axle Carrier | N.10 | 2 J 667001 and subs. 677001 and subs. 2 Fitted from Chassis No. 660001 to 660086 670001 to 670313 |
| C.3024 | Spigot over Ball-Pin | N.11 | 2 |
| C.3025 | Socket, supporting Lower Ball-Pin | N.12 | 2 Fitted from Chassis No. 660001 to 660086 670001 to 670313 |
| C.3026 | Shim ('004") between Housing and Ball Socket | N.13 | As reg'd. |
| C.3023 | Cap Cap, containing Ball Socket | N.14 | 2 Fitted from Chassis No. |
| | | | 660001 to 660086 |
| NC 407/011 | Commun. Sat. annualing. Com an Manualing | N1 4 E | 670001 to 670313 |
| NS.137/9H | Screw, Set, securing Cap to Housing | N.15 N.16 | 8 |
| C.3028 C.3362 | Plate, locking Setscrews Nipple, Grease, in Ball Socket Cap | N.17 | 2 Fitted from Chassis No. |
| | respire, Greate, in ball bocket cap | | 660001 to 660086 670001 to 670313 |
| C.5742 | Ball-Pin, Lower, in Housing on Stub Axle Carrier | | 2) Fitted to Chassis No. |
| C.4714 C.3023/1 | Socket, supporting Lower Ball-Pin Cap, containing Ball Socket | , | 669001 and subs. 679001 and subs. 660087 and subs. 670314 and subs. 677001 and subs. Also to 660061, 660071, 660076, 660077 660079, 660080, 660082, 660085 |
| | | | 670193, 670237, 670246, 670248, 670253 670255, 670256, 670259, 670260, 670264 670267, 670268, 670270, 670271, 670272 |
| | | | 670275 to 670283, 670285 to 670294 670296 to 670299, 670301 to 670312 |

| Part No. | Description. | Plate No. | No. per Unit. Remarks. |
|----------------------|--|--------------|--|
| | FRONT SUSPENSION ASSEMBLY (contin | ued) | |
| NN.756/L | Nut, securing Ball-Pin to Lower Rear Wishbone | N.18 | 2 |
| C.3004/2 | Lever Washer under Nut | N.19 | 2 |
| L.104/10U C.3029 | Pin, Split, locking Nut Seal Assembly, between Ball-Pin Housing and | N.20 N.21 | 2 2 |
| | Lower Rear Wishbone Lever | | 8 8 |
| C.3818 C.3890 | Screw, securing Seal Brake Assembly, Front L.H. | | 1) Fitted from Chassis No. |
| C.3889 | Brake Assembly, Front R.H. | | 1 \ 660001 to 660556 670001 to 671096 |
| C.4816 | Brake Assembly, Front R.H. | | 1) Fitted to Chassis No. |
| C.4817 | Brake Assembly, Front L.H. | | 1 660557 to 660979 669001 to 669002 671097 to 672048 679001 to 679621 |
| - · · · - | | | |
| C.6667 | Brake, Assembly, Front R.H. | | 1 Fitted from Chassis No. 660980 to 661086 669003 to 669033 |
| C.6668 | Brake, Assembly, Front L.H. | | 1 672049 to 674075 679622 to 681206 667001 only 677491 |
| | | |) |
| C.7824 | Brake, Assembly, Front R.H. | | 1 Fitted from Chassis No. 661087 and subs. 669034 and subs. |
| C.7825 | Brake, Assembly, Front L.H. | | 1 674076 and subs. 681207 and subs. 667002 and subs. 677492 and subs. |
| C 2044 | Anna Caradaa III | N.22 | 1 Fitted from Chassis No. |
| C,3046 C.3045 | Arm, Steering, L.H. Arm, Steering, R.H. | 14.22 | 1 660001 to 660125 |
| | | |) 670001 to 670438 |
| C.3046/1 C.3045/1 | Arm, Steering, L.H. Arm, Steering, R.H. | | 1) Fitted to Chassis No. 1 660126 and subs. 669001 and subs. |
| C.3043/1 | Arm, Steering, Kara | | 670439 and subs. 679001 and subs. |
| | | | 667001 and subs. 677001 and subs. |
| NB.143/25D | Bolt, securing Brake Assemblies and Steering Arms | | 4 |
| | to Stub Axle Carriers | | |
| NB.143/16D | Bolt, securing Brake Assemblies to Stub Axle Carrier | | and the second s |
| C.3625 C.3004/4 | Nut on Bolts Washer under Nuts | | 8 |
| L.103/7U | Pin, Split, locking Nuts | | 8 |
| C.3008 C.3010/2 | Shaft, Stub Axle Nut, securing Stub Axle Shaft to Carrier | N.23 N.24 | 2 2 |
| C.3114 | Washer under Nuts Pin, Split, locking Nuts | N.25 N.26 | 2 2 |
| L.105/14U C.615 | Retainer, Grease (Felt) on Stub Axle Shafts | N-27 | 2 |
| C.614 C.3011 | Plate, Cover, over Grease Retainer Bearing, Inner, for Hub (Timken 14138/14276) | N.28 N.29 | 2 2 2 |
| C.3037 | *Hub, Front (complete with Studs) | N.30 | 2 2 |
| C.3012 C.3010/1 | Bearing, Outer for Hub (Timken 09067/09195) Nut, securing Hubs and Bearings to Stub Axle | N.31 N.32 | 2 |
| C.1380 | Shafts Washer, "D," under Nuts | N.33 | 2 |
| L.104/10U | Pin, Split, locking Nuts | N.34 N.35 | 2 2 |
| C.3039 C.7228 | *Cap for Hub *Brake-Drum, Front | N.36 | 2 |
| C.3078 C.3040 | Screw, Set, locating Brake Drum on Hubs *Stud in Hubs | N.37 | 4 |
| C.3041 | *Nut, securing Wheel and Brake Drum to Hubs | | 10 2 |
| C.3044 | *Nipple, Grease, on Hubs | N.38 | • |
| C.3035 | Absorber, Shock, Front (Newton) | N.39 | 2 Fitted from Chassis No. |
| | | ,- | 660001 to 660979 669001 to 669002 670001 to 672048 679001 to 679621 |
| C.7183 | Absorber, Shock, Front (Newton) | | 2 Fitted to Chassis No. 660980 and subs. 669003 and subs |
| | NOTE.—Items marked * are for use with "Disc" Type Road Wheels only. | | 672049 and subs. 679622 and subs. |
| C.3447 | ANTI-ROLL BAR | P.1 | 1 Fitted from Chassis No. |
| C. 311 1 | ANTIROLL BAR | ••• | 660001 to 661004 669001 to 669002 670001 to 672669 679001 to 679896 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|--|----------------------|-----------------------|---|
| C.7220 | ANTI-ROLL BAR | | 1 | Fitted to Chassis No. 661005 and subs. 672670 and subs. 679897 and subs. 677001 and subs. |
| C.3056 | Bearing (Rubber) on Anti-Roll Bar | P.2 | 2 | Fitted from Chassis No. 660001 to 661004 669001 to 669002 |
| C.4349 | Bearing (Rubber) on Anti-Roll Bar | | 2 | 670001 to 672669 679001 to 679896 Fitted to Chassis No. 661005 and subs. 669003 and subs. 672670 and subs. 679897 and subs. 667001 and subs. 677001 and subs. |
| C.3054 NB.137/6D | Bracket, over Bearings Bolt, securing Bearing Bracket to Support Bracket | P.3 P.4 | 2 4 | |
| NN.137/L FG.106/X | on Chassis Frame Nut on Bolt Washer, Spring, under Nuts | P.5 | 4 | |
| C.3049 | Link for Anti-Roll Bar | P.6 | 2 | |
| C.3050 C.3337 | Bush in Link Boss Washer on each side of Link Boss | P.7 P.8 | 4 | |
| L.105/10U | Pin, Split, retaining Link on Anti-Roll Bar | P.9 | 2 | |
| C.793 C.3053 | Washer (Lower) on Link Shaft Buffer (Rubber) on each side of Anchor Bracket Flange | P.10 P.11 | 2 | |
| C.3052 NN.743/L | Washer (Upper) on Link Shaft Nut, Slotted, securing Link to flange of Anchor Bracket | P.12 P.13 | 2 2 | |
| L.103/8U C.3058 | Pin, Split, locking Nut Bracket, Anchor, L.H. | P.14 P.15 | 2 1 | |
| C.3057 NB.137/16D | Bracket, Anchor, R.H. Bolt, securing Anchor Bracket to Bottom Rear Wishbone Lever | P.16 | 1 2 | |
| NN.137/L FG.106/X | Nut on Bolt Washer, Spring, under Nut | P.17 | 2 2 | |
| C.3168 | TORSION BAR, L.H. | P.18 | 1 | |
| C.3167 | TORSION BAR, R.H. | | 1 | |
| C.3047 C.3060 | Flange for Torsion Bar Bolt, securing Torsion Bar Flange to Rear Lower Wishbone Lever | P.19 | 2 2 | |
| NN.756/L C.3004/2 L.104/10U NS.137/14F | Nut on Bolt Washer under Nut Pin, Split, Locking Nut Screw, Set, securing Torsion Bar Flange to Rear | | 2 2 2 2 | |
| FG.106/X | Lower Wishbone Lever Washer, Spring, on Setscrews | | 2 | |
| C.3462 C.3461 NB.137/19D | Lever, adjusting L.H. Torsion Bar Lever, adjusting R.H. Torsion Bar Bolt, locating Adjusting Levers on rear end of | P.20 P.21 | 1 1 2 | |
| BD.541/1 NN.137/L | Torsion Bars Washer, Special, on Locating Bolts Nut on Bolts | P.22 | 2 2 | |
| C.3096 | Washer, Spring, under Nuts Bolt, between Re-Action Bracket and Adjusting Lever | P.23 P.24 | 2 | |
| C.3098 C.3097 NB.131/13D | Trunnion on Adjusting Bolt Nut, adjusting Torsion Bars Bolt, clamping Adjusting Lever to Re-Action | P.25 P.26 P.27 | 2 2 2 | |
| C.726 | Bracket Washer, Shakeproof, on Clamp Bolts | P.28 | 2 | |
| | THE FOLLOWING ITEMS ARE REQUIRED FOR "SPECIAL EQUIPMENT" MODELS (i.e., Cars bearing the prefix "S" to the Chassis number.) | | | |
| C.6020 C.6021 C.1102 C.1103 C.3076 C.6024 | Hub, R.H. Front Hub, L.H. Front Hub Cap, R.H. Hub Cap, L.H. Nipple, Grease, for Front Hub Bearings Brake Drum, Front | | 1 1 1 2 2 | |
| NN.143/L C.1096/1 C.6277 | Nut for Hub Studs Washer, Spring, under Nuts Stud in Hubs | | 10 10 10 | |
| C.5719 | Torsion Bar, R.H. | | ï | |

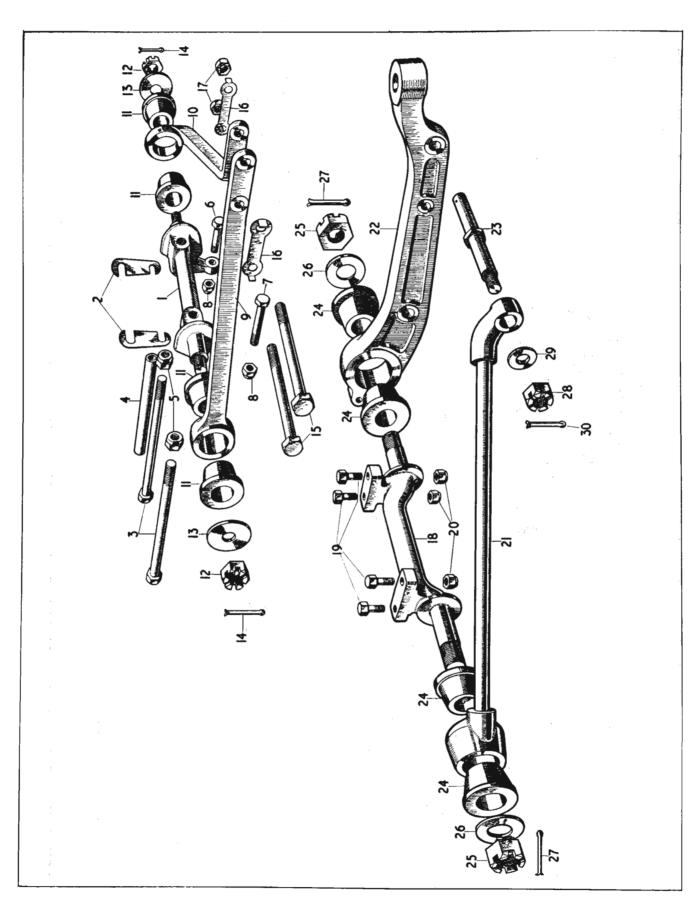


PLATE M.

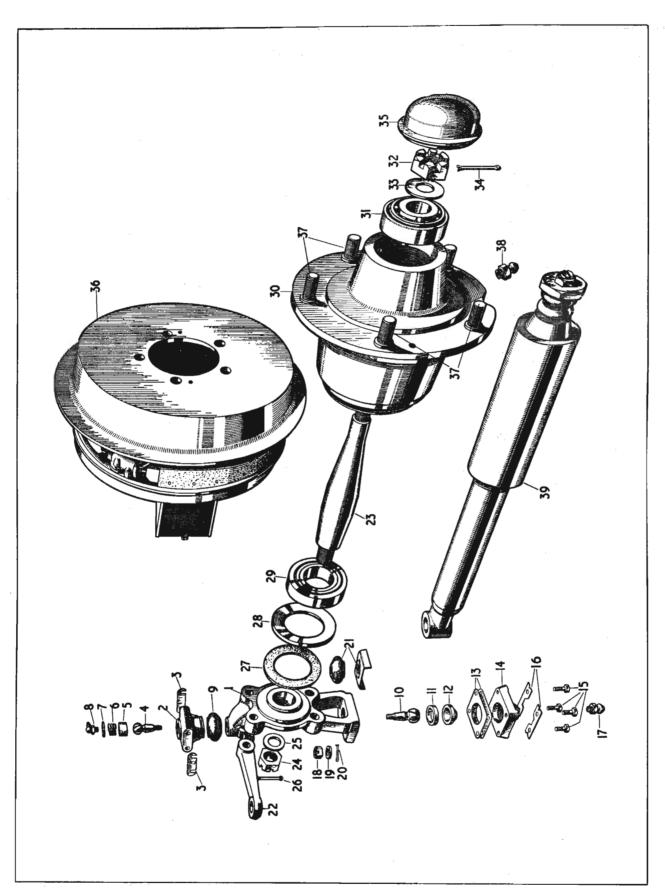


PLATE N.

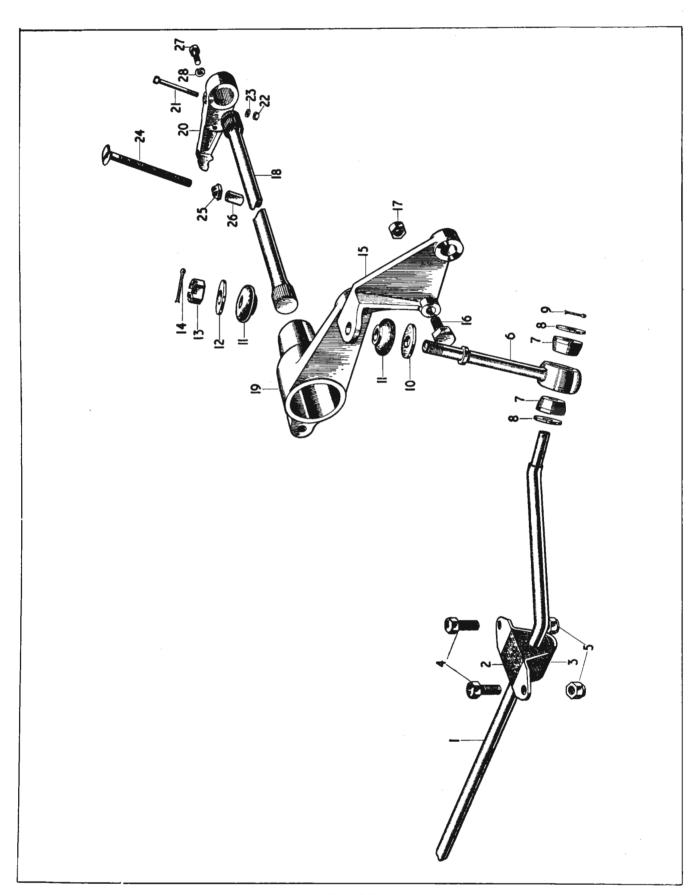


PLATE P.

ROAD WHEELS

| Part No. | Description. | Plate No. | No. per Unit. Remarks. |
|--|---|--------------|--|
| C.3105 | ROAD WHEEL (DISC) | | 5 Fitted from Chassis No. 660001 to 661041 669001 to 669002 670001 to 673297 679001 to 680476 |
| C.6749 | ROAD WHEEL (DISC) (5½K RIM) (LP.664) | | 5 Fitted to Chassis No. 661042 and subs. 669003 and subs. 673298 and subs. 680477 and subs. 667001 and subs. 677001 and subs. |
| C.6838 | ROAD WHEEL (WIRE SPOKE) (X.445A) | | 5 FITTED TO SPECIAL EQUIPMENT MODELS |
| C.5602 C.5603 C.5604 | Spoke (Long) at front of Wire Wheel Spoke (Short) at rear of Wire Wheel Nipple for Spokes | | 90 180 270 |
| C.3760 | OUTER COVER (DUNLOP ROADSPEED 6:00"×16") | | 5 |
| C.6649 | OUTER COVER (DUNLOP RACING 6.00"×16") | | 5 SUPPLIED TO SPECIAL ORDER ON |
| C.3761 | INNER TUBE (DUNLOP 6.00"×16") | | 5 |
| C.6650 | INNER TUBE (DUNLOP RACING 6.00"×16") | | 5 SUPPLIED TO SPECIAL ORDER ON |
| C.3243 | WHEEL DISC | | 4 FOR USE WITH "DISC" WHEEL |
| C.3367 | BADGE FOR WHEEL DISC | | 4 |
| AN.104/L C.736 | Nut, securing Badge to Wheel Discs Washer, Shakeproof, under Nuts | | 8 8 |
| C.3041 | Nut, securing Road Wheels to Hub Studs | | 20 |
| | BALANCE-WEIGHT FOR ROAD WHEELS | | |
| C.3985 C.3986 C.3987 C.3988 C.3989 C.3990 | Balance-Weight (½ oz.) Balance-Weight (1 oz.) Balance-Weight (1½ ozs.) Balance-Weight (2 ozs.) Balance-Weight (2½ ozs.) Balance-Weight (3 ozs.) | | As req'd. |
| C.1102 | HUB CAP, R.H. | | 2 FOR USE WITH "WIRE" WHEEL |
| C.1103 | HUB CAP, L.H. | | 2 FOR USE WITH "WIRE" WHEEL |

STEERING

| | Description. | No. | Unit. | Remarks. |
|------------------------|---|--------------|-------------|--|
| C.3448 | STEERING UNIT (COMPLETE WITH DROP-ARM BUT LESS STEERING WHEEL AND CONTROLS) | | . 1 | RIGHT HAND DRIVE ONLY |
| C.3449 | STEERING UNIT (COMPLETE WITH DROP-ARM BUT LESS STEERING WHEEL AND CONTROLS) | | 1 | LEFT HAND DRIVE ONLY |
| 58 | Column, Outer (28/12/7) | S.1 | 1 | |
| 957 | Steering-Box (complete with Trunnion Bush and | S.2 | 1 | |
| 968 | Rockershaft Oil Seal Assembly) (S.1/17) Column, Inner (S.3/30) | S.3 | 1 | RIGHT HAND DRIVE ONLY |
| 969 | Column, Inner (S.3/31) | | 1 | LEFT HAND DRIVE ONLY |
| 962 | Main-Nut (complete with Transfer Tube, Tube Retainer, Bolts, Tab Washers and Steel Balls) (Supplied complete only) (S.2/11) | S.4 | 1 | RIGHT HAND DRIVE ONLY |
| 963 | Main-Nut (complete with Transfer Tube, Tube Retainer, Bolts, Tab Washers and Steel Balls) | | 1 | LEFT HAND ONLY |
| 37 | (Supplied complete only) (S.2/14) Ball (Steel) between Main Nut and Worm on Inner | S.5 | 14 | |
|)7 | Column (17/4/1) Washer, Ball Race, at each end of Inner Column Worm (17/8/1) | S. 6 | 2 | |
| 996 | Worm (12/9/1) Ball-Race in each end of Steering Box (S.23/1) | S.7 | 2 | |
| 36 | Ball (Steel) between Ball-Race and Ball-Race Washer (17/3/1) | S.8 S.9 | 28 2 | |
| 54 989 | Washer, Packing, adjacent to Ball-Races (12/12/1) Plate, End, at bottom of Steering Box (S.11/4) | S.10 | 1 | |
| 984 | Gasket, for Steering Box (S.10/6) | S.11 | As req | |
| 986 | Shim, between End Plate and Steering Box (S.10/8) Stud at each end of Steering Box (13/4/1) | S.12 S.13 | As req 8 | 'd. |
| 5 2 ! | Nut, securing Outer Column and End Plate to | S.14 | 8 | |
| | Steering Box (11/4/1) | | _ | |
| 03 55 | Washer, Spring, under Nuts (12/4/1) Stud, in End Plate, for Clip Bracket (13/2/2) | S.15 S.16 | 8 2 | |
| 53 | Seal, Oil (Felt) between End Plate and Clip Bracket (27/6/1) | S.17 | 1 | |
| 27 0 | Bracket, Clip, on End Plate (S.15/3) Nut, securing Clip Bracket to End Plate (11/2/1) | S.18 S.19 | 1 2 | |
| 01 | Washer, under Nuts (12/2/1) | S.20 | 2 | |
| 2 | Bolt, through Clip Bracket (10/1/1) | S.21 | 1 | |
| 9 00 | Nut on Bolt (11/1/1) Washer, Spring, under Nut (12/1/1) | S.22 S.23 | 1 | |
| 977 | Rockershaft (S.7/13) | S.24 | 1 | |
| 101 | Seal, Oil, for Rockershaft (27/9/4) | S.25 S.26 | 1 1 | PIGHT HAND DRIVE ONLY |
| 980 981 | Drop-Arm (S.9/20) Drop-Arm (S.9/21) | 3.20 | i | RIGHT HAND DRIVE ONLY LEFT HAND DRIVE ONLY |
| 5 | Nut, securing Drop-Arm to Rockershaft (11/8/2) | S.27 | 1 | |
| 28 44 | Pin, Split, securing Nut (16/1/2) Roller, on Spigot of Main Nut (24/5/1) | S.28 S.29 | 1 | |
| 46 992 | Plate, Cover, at top of Steering Box (S.12/9) | S.30 | 1 | RIGHT HAND DRIVE ONLY |
| 991 | Plate, Cover, at top of Steering Box (S.12/8) | | 1 | LEFT HAND DRIVE ONLY |
| 985 18 | Gasket, between Cover Plate and Steering Box (5.10/7) Stud, in Steering Box, for Cover Plate (13/3/1) | S.31 S.32 | 1 3 | |
| 1 | Nut, securing Cover Plate to Steering Box (11/3/1) | 5.33 | š | |
| G.105/X | Washer, Spring, under Nuts (12/3/1) | S.34 | 3 | |
| 25 49 | Screw, securing Cover Plate to Steering Box (14/3/1) Screw, in Cover Plate, adjusting Rockershaft (25/8/2) | S.35 S.36 | 1 1 | |
| 6 | Nut, locking Adjusting Screw in Cover Plate (11/8/4) | S.37 | 1 | |
| 77 4 | Spring, inside Adjusting Screw (S.6/3) Bolt, in end of Adjusting Screw, retaining spring (10/6/1) | S.38 S.39 | 1 | |
| 44 2.3059 | Plug, Filler, in Cover Plate (21/7/2) Bracket, Trunnion, securing Steering Unit at lower | S.40 S.41 | 1 1 | RIGHT HAND DRIVE ONLY |
| .3077 | end Bracket, Trunnion, securing Steering Unit at lower end | | 1 | LEFT HAND DRIVE ONLY |
| .1036 | Circlip, on upper end of Inner Column, retaining Steering Wheel | S.42 | 1 | |
| IB.143/23D I.8150/8 | Bolt, securing Trunnion Bracket to Chassis Frame Nut on Bolts | S.43 S.44 | 2 2 | |
| .3004/4 | Washer under Nuts | S.45 | 2 | |
| .3766 | Grommet (Rubber) for Steering Outer Column | S.46 | 1 | |
| 5D.3145 13 | Plate, retaining Grommet Bracket, supporting Steering Unit | | 1 | |
| IB.131/23D | Bolt, securing Support Bracket | | į | |
| W.205/T | Washer, Plain, on Bolt | | 2 1 | |
| N.131/L .725 | Nut on Bolt Washer, Shakeproof, under Nut | | i | |
| • | 40 | | • | |

STEERING

| Part No. | Description. | 2 - 1 - 2 - 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4 | Plate No. | No. per Unit. | Remarks. |
|--|---|--|--|---|---|
| C.3949 | IDLE LEVER ASSE | MBLY | | 1 | RIGHT HAND DRIVE ONLY |
| C.3950 | IDLE LEVER ASSE | MBLY | | 1 | LEFT HAND DRIVE ONLY |
| C.3209 C.3210 C.3204 C.3809 C.3795 C.3202 C.3201 C.3203 C.3885 | Housing for Screwed S Housing for Screwed S Plate, Cover, on Top of Screw, Shakeproof, sec Plug, Oil Filler, in Cov Bush, in Housing Shaft (Screwed) for Idl Seal (Rubber) in botto Lever, Idle | Shaft of Housing uring Cover Plate ver Plate le Lever | S.47 S.48 S.49 S.50 S.51 S.52 S.53 S.54 | 1 1 4 1 1 1 | RIGHT HAND DRIVE ONLY LEFT HAND DRIVE ONLY |
| C.3625 C.3625 C.3004/4 L.103/7U C.3116/4 C.2280 | Nut, securing Idle Leve Washer under Nut Pin, Split, locking Nut Nut, securing Idle Leve Washer, Tab, locking | er to Screwed Shaft | \$.55 \$.56 \$.57 | ;} ;} | Fitted from Chassis No. 660001 to 660014 670001 to 670024 Fitted to Chassis No. 660015 and subs. 670025 and subs. 679001 and subs. 677001 and subs. |
| C.3450 | TRACK ROD ASSE | MBLY | | 1 | Fitted from Chassis No. 660001 to 660114 670001 to 670388 |
| C.3451 C.3493 > | Tube only for Track R End, Track Rod (L.H. Screwed Pin-Plate Ref 66) | od Thread) (complete with 65 and Cover-Plate Ref. | \$.58 \$.59 | 1 | |
| C.3494 | End, Track Rod (R.H. | Thread) (complete with f. 65 and Cover-Plate Ref. | \$.60 | 1 | |
| C.3165 NB.131/10D C.3116/2 FG.105/X C.3083 C.3076 C.3089 C.3625 C.3004/4 L.103/7U C.3116/4 | Clamp, securing Ends Bolt through Clamps Nut on Bolts Washer, Spring, under Spring, between Plates Nipple, Grease, on Trac Seal (Rubber) between I Nut, securing Drop-A Screwed Pins Washer under Nuts Pin, Split, locking Nuts | Nuts and Screwed Pins k Rod Ends (Tec. NA.5703) Levers and Track Rod Ends arm and Idle Levers to | S.61 S.62 S.63 S.64 S.67 S.68 S.69 S.70 | 2 | Fitted from Chassis No. 660001 to 660014 670001 to 670024 Fitted to Chassis No. |
| C.2280 | Screwed Pins Washer, Tab, locking | | | 2 | 660015 to 660114 670025 to 670388 |
| C.4138 | TRACK ROD ASSE | MBLY | | 1 | Fitted to Chassis No. 660115 and subs. 670389 and subs. 667001 and subs. 677001 and subs. |
| C.4135 | TRACK ROD END | ASSEMBLY, R.H. | | 1 | Fitted to Chassis No. |
| C.4136 | TRACK ROD END | ASSEMBLY, L.H. | | 1 | 660115 and subs. 669001 and subs. 670389 and subs. 679001 and subs. |
| NN.150/L C. 1 139 | Nut for Track Rod Ends Washer, Tab, under Nut | s | | 2 2 | 667001 and subs. 677001 and subs. |
| C.3070 | STEERING CONNI | ECTING TUBE ASS | Y. | 2 | |
| C.3071 C.3063 C.3062 C.3362 C.3076 C.3020 C.3165 | Nipple, Grease, in Retai Seal (Rubber) on Ball-J | ght hand ning Plates (Tec. NA.5798) ning Plates (Tec. NA.5703) | S.73 S.74 S.75 S.76 S.76 S.77 S.78 | 2 2 2 2 2 2 4 4 | Fitted from Chassis No. 660001 to 660227 670001 to 670760 |
| NB.131/10D NN.131/L FG.105/X C.3625 | Bolt through Clamps Nut on Bolts Washer, Spring, under Nut, securing Track Ro | · Nuts d Ends and Steering Arms | S.79 S.80 S.81 S.82 | 4 4 4 | |
| C3004/4 L.103/7U | to Ball-Joints Washer, under Nuts Pin, Split, locking Nuts | : | S.83 S.84 | 4 4 | |

STEERING

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
|---|---|------------------------------|------------------|---|---------|
| C.4726 | STEERING TIE ROD ASSY., R.H. | | 1] | | |
| C.4727 | STEERING TIE ROD ASSY., L.H. | | 1 | | |
| C.3362 | Nipple, Grease, on Outer end of Steering Tie Rods | | 2 | Fitted to Chassis No. | |
| C.3076 | (Tecalemit NA.5798) Nipple, Grease, on Inner end of Steering Tie Rods (Tecalemit NA.5703) | | 2 | 660228 and subs. 669001 and 670761 and subs. 679001 and 667001 and subs. 677001 and | d subs. |
| NN.750/L FW.108/T L.104/10U C.3020 | Nut on Steering Tie Rods Washer, Plain, under Nuts Pin, Split, retaining Nuts Seal (Rubber) on ends of Steering Tie Rods | | 4 4 4 4 | | |
| C.3721 | STEERING WHEEL (TELESCOPIC) | S.85 | 1 | | |
| C.1037 C.3366 C.1024 C·3386 | Screw, Grub, in Steering Wheel Washer at top and bottom of Telescopic Dust Cover Cover, Dust (Telescopic) Washer at bottom of Telescopic Dust Cover | S.86 S.87 S.88 S.89 | 2 2 1 1 | | |
| | | | | | |
| C.5661 | STEERING WHEEL (16" TELESCOPIC) | | 1 | SUPPLIED ONLY WHEN SPECIALLY ORDERED | |
| | | | | | |
| | | | | | |
| C.2766 | STEERING COLUMN CONTROL (LUCAS 32809/A—CC.1/L7) | S.90 | 1 | | |
| | (For Spares details, see page 86) | | | | |
| NB.131/12D C.3116/2 | Bolt, Stop, for Steering Lock Nut, locking Stop Bolts in position | S.91 S.92 | 2 | | |

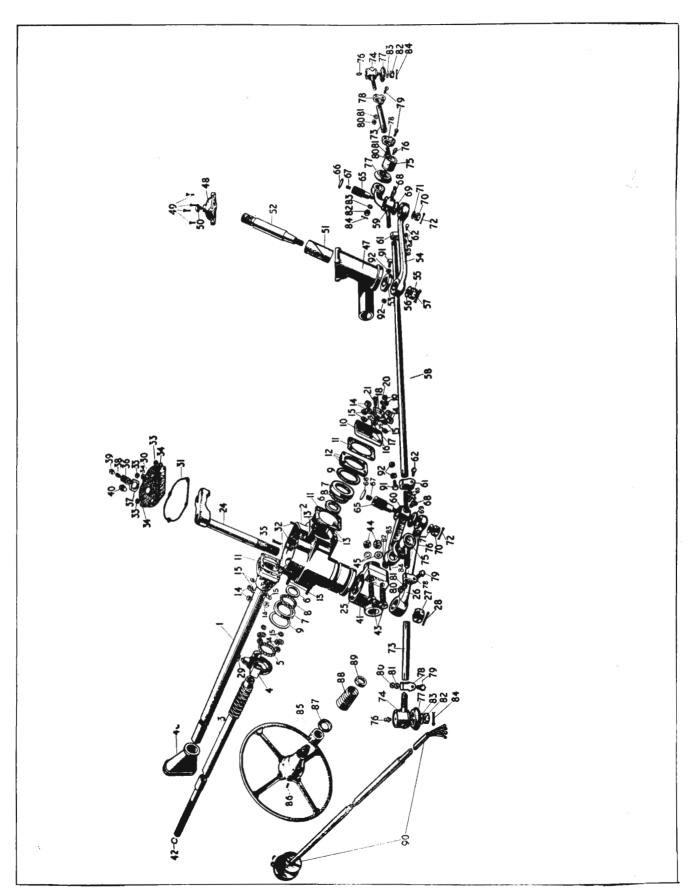


PLATE S

PROPELLER SHAFT

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---------------------------|--|--------------|------------------|---|
| C.3445 | PROPELLER SHAFT COMPLETE (48/0507) | | 1 | Fitted from Chassis No. 660001 to 660934 669001 to 669002 670001 to 671796 679001 to 679214 |
| 12 | Yoke, Flange (K2/2/239) | K.1 | 2 | |
| 13 | Yoke, Sleeve (K2/3/68) | K.2 | | |
| 14 18 | Journal Assembly (K2/5/GB108) Bearing, Needle, Assembly (K2/6/38) | K.3 K.4 | 2 8 | |
| 19 | Ring, Snap (K2/7/GB.19) | K.5 | 8 | |
| 248 | Nipple, Grease, on Journal (94/GB.1598) | K.6 | 2 | |
| 26 | Cap, Dust (3/14/39) | K.7 | 1 | |
| 27 | Washer (Steel) in Dust Cap (3/15/33) | K.8 | 1 | |
| 28 | Washer (Cork) in Dust Cap (K3/16/43) | K.9 | 1 | |
| K2/62/216/ GB.312/2621 | Shaft, Tubular, Assembly | K.10 |) 1 | |
| | | | | |
| C.3308 | Bolt, § A.N.F., securing Propeller Shaft to Rear Axle and Gearbox | K11. | . 8 | |
| NN.737/L | Nut on Bolts | K.12 | | |
| C.787 | Washer on Bolts | K.13 | | |
| L.102.5/8U C.969 | Pin, Split, securing Nuts Nipple, Grease, on Sleeve Yoke (Tecalemit NA. | K.14 K.15 | | Fitted from Chassis No. |
| C.767 | 5705) | N.1. | , , | 660001 to 660115 |
| C 0044 | NU I. C Classes Value (Taradamite NIA | | | 670001 to 670536 |
| C.3044 | Nipple, Grease, on Sleeve Yoke (Tecalemit NA. 5701) | | 1 | Fitted to Chassis No. 660116 and subs. 669001 and subs. 670537 and subs. 679001 and subs. |
| 46 | Unit Package (comprising Journal Assembly, | | 2 | |
| | Needle Bearings and Snap Rings) (K5/L.4) | | | |
| 1133 | End, Sliding, Assembly (comprising Flange Yoke, Sleeve Yoke, Dust Cap and Journal Assembly) (KR.1301/GB.3) | | 1 | |
| | | | | |
| C.6768 | PROPELLER SHAFT COMPLETE | | 1 | Fitted to Chassis No. 660935 and subs. 669003 and subs. |
| | (51/1123) | | | 671797 and subs. 679215 and subs. |
| 2EX/51/1123 | Shaft, Tubular, Assembly All other items as for Propeller Shaft C.3445 | | 1 | |

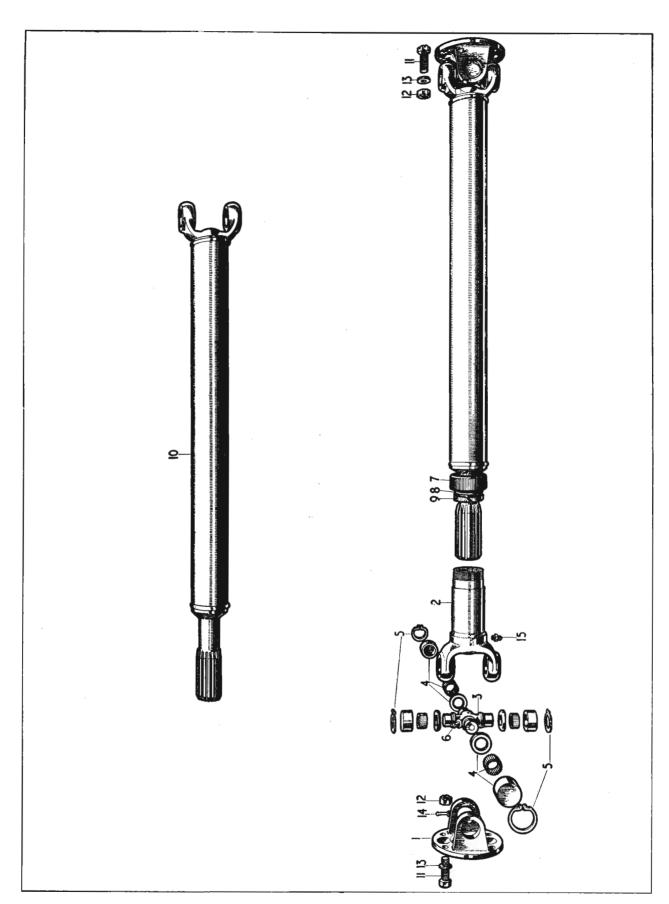


PLATE K.

| Part No. | Description. | Plate No. | No. pe Unit. | |
|-----------------------|---|-------------------|-----------------|---|
| C.3452 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 3-64: I) | | 1] | |
| C.3821 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 3·27:1) | | 1 | Floor Land the following Charts |
| C.4460 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 3.92:1) | | 1 | Fitted to the following Chassis 660001 to 660517 Also to 660700, 660728 and 660729 |
| C. 44 61 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 4:30:1) | | 1 | 670001 to 671097 Also to 671130, 671131 and 671207 |
| C. 446 2 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 4-56: I) | | 1 | |
| C.3452/1 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 3 64 : I) | | 1 | |
| C.3821/1 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 3·27: I) | | 1 | Fitted to the following Chassis 660518 to 660570 |
| C. 44 60/1 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 3.92:1) | | 1 | Also to 660572, 660574 to 660579, 660581 to 660589, 660601 to 660605, 660608, 660616, 660623 to 660625, 660638, 660640, 660645, |
| C. 44 61/1 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 4:30:1) | | 1 | 660714 to 660727, 660729 to 660768, 660770 to 660802 671098 to 671106 |
| C. 446 2/1 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 4:56:1) | | 1 | |
| C.5150 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 3·64:1) | | 1] | Fitted to the following Chassis |
| C.5151 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 3:27:1) | | 1 | 660571, 660573, 660580, 660590 to 660600, 660606, 660607, 660609 to 660615, 660617 to 660622, 660626 to 660637, 660639, |
| C.5152 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 3.92:1) | , | 1 | 660641 to 660644, 660646 to 660699, 660701 to 660713, 660803 to 660934, |
| C.5153 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 4:30:1) | | 1 | 671107 to 671129, 671132 to 671206, 671208 to 671796 669001 and 669002 |
| C.5154 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO 4:56:1) | | 1 | 679001 to 679221 |
| | NOTE.—From Chassis No. 660935 onwards, 671797 onwards, 669003 onwards, 679222 on- wards, either E.N.V. or Salisbury Rear Axles may be fitted | | | |
| C. 7301 | REAR AXLE ASSEMBLY (E.N.V.) (RATIO $3.64:1$) | | 1 | FOR USE WITH TANDEM CYLINDER BRAKES from Chassis No. 660557 to 660979 669001 to 669002 671097 to 672048 679001 to 679621 |
| 319 | AXLE CASING (A.259/1) | L.1 | 1 | |
| 804 | Stud (Short) for the attachment of Pinion Housing (A.254/60) | L.2 | 8 | |
| 805 | Stud (Long) for the attachment of Pinion Housing (A.254/61) | L.3 | 2 | |
| 5652 293 666 | Nut on Studs (A.254/29) Washer, Spring, under Nuts (A.100/28) Pin, Dowel, locating Pinion Housing on Casing | L.4 L.5 L.6 | 10 10 2 | |
| 903 794 | (A.238/27) Plug, Oil Drain (A.254/32) Nipple, Grease, on outer end of Axle Casing (A.254/4) | L.7 L.8 | 1 2 | |
| 373 | PINION HOUSING (COMPLETE WITH BEARING CAPS AND BOLTS) (H.108/1) | L.9 | 1 | |
| 375 | Bolt, securing Bearing Caps (H.108/3) | L.10 | 4 | |
| | Plate, locking Bearing Cap Bolts (H.101/4) | L.11 | 4 | |
| 294 302 345 | Washer, Jointing, between Pinion Housing and Axle Casings (A.254/31) Plug, Oil Filler (H.106/28) | L.12 L.13 | 1 | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--------------------|--|--------------|------------------|---|
| 379 | DIFFERENTIAL UNIT (RATIO 3.64:1) (H.108/14/51) | | 1] | • |
| 380 | DIFFERENTIAL UNIT (RATIO 3-27:1) (H.108/18/59) | | · 1 | tted to the following Chassis 660001 to 660570 |
| 378 | DIFFERENTIAL UNIT (RATIO 3.92:1) (H.108/12/47) | | 1 [| so to 660572, 660574 to 660579, 660581 to 660589, 660601 to 660605, 660608, 660616, 660623 to 660625, 660638, 660640, |
| 377 | DIFFERENTIAL UNIT (RATIO 4.30:1) (H.108/10/43) | | 1 | 660645, 660700, 660714 to 660802 670001 to 671106 |
| 376 | DIFFERENTIAL UNIT (RATIO 4.56:1) (H.108/9/41) | | 1 | so to 671130, 671131, 671207 |
| 496 | Case, Differential (M.146/1/2) | L.16 | 1 pair SU | UPPLIED ONLY IN PAIRS |
| 498 447 | Gear, Side, for Differential (M.146/3) Piece, Star, for Differential Pinion Mate Gears (M.133/5) | L.17 L.18 | 2 1 | |
| 499 | Gear, Differential Pinion Mate (M.146/4) | L.19 | 4 | |
| 451 452 | Washer, Thrust, for Side Gears (M.135/13) Washer, Thrust, for Pinion Mate Gears (M.135/14) | L.20 L.21 | 2 4 | |
| 500 | Bolt, securing Differential Case (M.146/6) | L.22 | 8 | |
| 501 610 | Plate, locking Bolts (M.146/8) Crown-Wheel and Pinion (Ratio 3.64:1) | L.23 L.24 | 4 1 pair | |
| | (Supplied only in pairs) (HP.178) | | | |
| 613 | Crown-Wheel and Pinion (Ratio 3.27:1) (Supplied only in pairs) (HP.186) | L.24 | 1 pair | |
| 614 | Crown-Wheel and Pinion (Ratio 3.92 : 1) (Supplied only in pairs) (HP.188) | L.24 | 1 pair | |
| 606 | Crown-Wheel and Pinion (Ratio 4.30 : 1) (Supplied only in pairs) (FHP.1000) | L.24 | 1 pair | |
| 7407 | Crown-Wheel and Pinion (Ratio 4.56:1) (Supplied only in pairs) (FHP.1001) | L.24 | 1 pair | |
| 502 | Bolt, securing Crown-Wheel to Differential Case (M.146/9) | L.25 | 10 | |
| 503 384 | Plate, locking Crown-Wheel Bolts (M.146/11) Bearing, Roller, Pinion Head (Timken 3490/3420) | L.26 L.27 | 5 1 | *6. |
| 315 | (H.108/40) Shim, adjusting Pinion Head Bearing (.004") | L.28 | As req'd. | |
| 316 | (H.105/38) Shim, adjusting Pinion Head Bearing (.006") | L.28 | As req'd. | |
| 318 | (H.105/38A) Shim, adjusting Pinion Head Bearing (·010") | L.28 | As req'd. | |
| 385 | (H.105/38B) Bearing, Roller, Pinion Shank (Timken 02475/02420) | L.29 | 1 | |
| 319 | (H.108/41) Shim, adjusting Pinion Shank Bearing (004") (H.105/39) | L.30 | As req'd. | |
| 320 | Shim, adjusting Pinion Shank Bearing (.006") (H.105/39A) | L.30 | As req'd. | |
| 321 | Shim, adjusting Pinion Shank Bearing (-010") (H.105/39B) | L.30 | As req'd. | |
| 343 | Piece, Distance, between Shank of Pinion and Shank Adjusting Shims (H.106/8) | L.31 | 1 | |
| 314 807 | Seal, Oil, in end of Pinion Housing (H.105/22) Bearing, Roller, for Differential Box (Timken | L.32 L.33 | 1 2 | |
| 382 | 25577/25522) (A.254/63) Nut, adjusting Differential Box (H.108/33) | L.34 | 2 | |
| 383 406 | Plate, locking Adjusting Nut (H.108/34) Screw, Set, securing Adjusting Nut Lock-Plate to Bearing Cap (NM.119/36) | L.35 L.36 | 2 | |
| | | | | |
| 5616 | DIFFERENTIAL UNIT (RATIO 3-64: I) (M.162/14/51) | | | ted to the following Chassis |
| 5617 | DIFFERENTIAL UNIT (RATIO 3-27:1) (M.162/18/59) | | ' (| 660571, 660573, 660580, 660590 to 660600, 660606, 660607, 660609 to 660615, 660617 to 660622, 660626 to 660637, 660639, |
| 5615 | DIFFERENTIAL UNIT (RATIO 3-92:1) (M.162/12/47) | | 1 6 | 660641 to 660644, 660646 to 660699, 660701 to 660713, 660803 to 660934, |
| 7409 | DIFFERENTIAL UNIT (RATIO 4:30:1) | | 1 6 | 571107 to 671129, 671132 to 671206, |
| 7408 | (M.162/10/43) DIFFERENTIAL UNIT (RATIO 4:56:1) | | 1 ' | 671208 to 671796 669001 and 669002 679001 to 679221 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--------------|--|--------------|------------------|--|
| | DIFFERENTIAL UNIT (CONTINUED) | | | |
| 592 | Case, Differential (M.162/1) | | 1 | |
| 594 | Gear, Side, for Differential (M.162/3) | | 2 | |
| 596 | Shaft, Cross, for Differential Pinion Mate Gears | | 1 | |
| 595 | (M.162/5) Gear, Differential Pinion Mate (M.162/4) | | 2 | |
| 597 | Lock-Pin through Differential Case and Cross | | 1 | |
| 598 | Shaft (M.162/6) | | 2 | |
| 599 | Washer, Thrust, for Side Gears (M.162/13) Washer, Thrust, for Pinion Mate Gears (M.162/14) | | 2 | |
| 600 | Spacer Block on Shaft (M.162/15) | | 1 | |
| 601 | Bearing, Roller, for Differential Case (Timken | | 2 | |
| | (25522/25580) (M.162/16) | | | |
| | For all other Spares, see Differential Unit H.108 | | | |
| 820 | REAR AXLE SHAFT (WITH THRUST | L.37 | 2] | Fitted to the following Chassis |
| | BUTTON) (ALTERNATIVE TO | | | 660001 to 660570 |
| | A.259/110) (A.259/11) | | } | Also to 660572, 660574 to 660579, 66058° to 660589, 660601 to 660605, 660608 |
| 820 | DEAD AVIE CHAFT (ALTERNATIVE | | , | 660616, 660623 to 660625, 660638, 660640 |
| 620 | REAR AXLE SHAFT (ALTERNATIVE | | 2 | 660645, 660700, 660714 to 660802 670001 to 671106 |
| | TO A.259/II) (A.259/110) | | , | Also to 671130, 671131, 671207 |
| | | | | |
| 822 | REAR AXLE SHAFT (A.272/11) | | 2 | Fitted to the following Chassis |
| | | | , | 660571, 660573, 660580, 660590 to 660600 |
| | | | | 660606, 660607, 660609 to 660615, 660615 to 660622, 660626 to 660637, 660639 |
| | | | | 660641 to 660644, 660646 to 660699 |
| | | | | 660701 to 660713, 660803 to 660934 |
| | | | | 671107 to 671129, 671132 to 671206 671208 to 671796 |
| 662 | Button, Thrust, on Inner End of Axle Shafts (A.238/11A) | L.38 | 2 | USED ONLY WITH SHAFT A.259/II |
| 821 | Piece, Distance, on Shafts (A.259/16) | L.39 | 2 | |
| 810 | Ring, Sealing (Rubber) in Distance Piece (A.254/66) | | 2 | |
| 808 656 | Housing for Hub Bearings (A.254/65) Shim, Adjusting, between Bearing Housing and | L.40 L.41 | 2 As req | 'd |
| | Brake Anchor Plate (·002") (A.238/10) | | 713 104 | • |
| 657 | Shim, Adjusting, between Bearing Housing and | L.41 | As req | 'd. |
| 658 | Brake Anchor Plate ('006") (A.238/10A) Shim, Adjusting, between Bearing Housing and | L.41 | As req | 'd |
| | Brake Anchor Plate (-010") (A.238/10B) | | 73 104 | |
| 659 | Shim, Adjusting, between Bearing Housing and | L.41 | As req | 'd. |
| 660 | Brake Anchor Plate (-032") (A.238/10C) | 1 41 | A | u . |
| 000 | Shim, Adjusting, between Bearing Housing and Brake Anchor Plate (-062") (A.230/10D) | L.41 | As req | u. |
| 801 | Seal, Oil, in Bearing Housings (A.254/22) | L.42 | 2 | |
| 807 | Bearing, Roller, for Hubs (Timken 25577/25522) | L.43 | 2 | |
| 664 | (A.254/63) Nut, locking Hub Bearing on Axle Shaft (A.238/20) | L.44 | 2 | |
| 665 | Washer, Tab, for Locknut (A.238/21) | L.45 | 2 | |
| 663 | Washer, Tongued, between Tab Washer and Hub Bearing (A.238/14) | L.46 | 2 | |
| 799 | Seal, Oil, for Axle Shaft (A.254/12) | L.47 | 2 | |
| 796 | Bolt (Short), securing Bearing Housing and Brake | L.48 | 8 | |
| 812 | Anchor Plate to Axle Casing (A.254/6) Rolf (Long), securing Rearing Housing and Brake | | 4 | |
| 012 | Bolt (Long), securing Bearing Housing and Brake Anchor Plate to Axle Casing (A.254/67) | | . 7 | |
| 797 | Nut on Bolts (A.254/7) | L.49 | 12 | |
| FG106 287 | Washer, Spring, under Nuts (A.254/62) Pin, Split, through Nuts (A.100/9) | L.50 L.51 | 12 12 | |
| C.3040 | Stud for Brake Drum and Road Wheels | L.52 | 10 | |
| C.3076 | Nipple, Grease, on Hubs | | 2 | |
| 5534 | PINION COMPANION FLANGE | L.53 | 1 | |
| | (NM.121/23) | | | |
| 344 | Nut, securing Companion Flange to Pinion (H.106/25) | L.54 | | |
| 295 | Pin, Split, through Nut (H.101/27) | L.55 | 1 | |

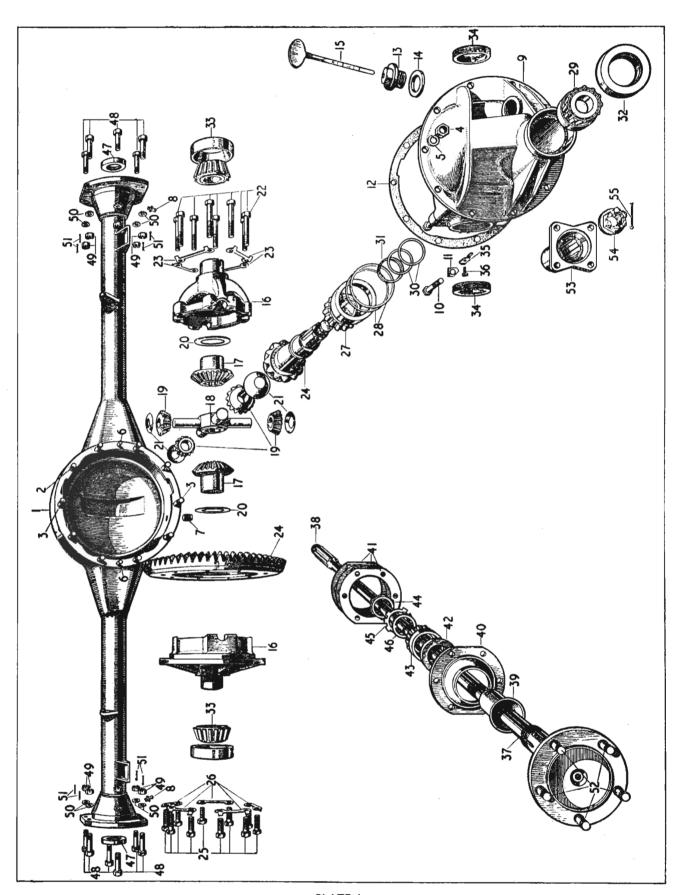


PLATE L.

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|-------------------|---|---|------------------|--|
| C.6687 | REAR AXLE ASSEMBLY (SALISBURY 2HA) (RATIO 3.77:1) | | 1 | NOTE.—FROM CHASSIS No. 660935 ONWARDS 669003 ONWARDS 671797 ONWARDS 679222 ONWARDS EITHER SALISBURY OR E.N.V. REAR AXLES MAY BE FITTED |
| C.5762 | REAR AXLE ASSEMBLY (SALISBURY 2HA) (RATIO 4.09:1) | | 1 | |
| C.5763 | REAR AXLE ASSEMBLY (SALISBURY 2HA) (RATIO 4.27:1) | | 1 | |
| 3883 74 | Carrier and Tube Assembly (2HA-101/8) Screw, Set, securing Differential Caps (S.A.E. Thread) (8-73-3136) | XL.1 XL.2 | . 1 4 | |
| 76 | Lock Washer on Setscrews (8-75-GB.39) | XL.3 | 4 | |
| 3872 3823 | Cover for Carrier (2HA-064) | XL.4 XL.5 | 1 2 | |
| 3847 | Plug for Filler and Drain apertures (HA-059) Gasket for Cover (2HA-026) | XL.7 | 1 | |
| 53 | Screw, Set, securing Cover to Carrier (S.A.E. | XL.B | 10 | • |
| 61 | Thread) (6-73-1110) Lock Washer for Cover Screws (6-75-19) | XL.9 | 10 | |
| 3878 | Case, Differential, Assy. (2HA-082/2) | ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,, | 1 · | |
| 38 4 5 | Bearing, Roller, on Differential Case (Timken | XL.10 | 2 | |
| 3863 | 25577-25523) (2HA-024) Shim , adjusting Differential (-003" thick) (2HA-046) | XL.11 | 2] | |
| 3864 | Shim, adjusting Differential (-005" thick) (2HA-047) | XL.11 | 2 L | USE SHIM OF DESIRED THICKNESS |
| 3865 3866 | Shim, adjusting Differential (-010" thick) (2HA-048) Shim, adjusting Differential (-030" thick) (2HA-049) | XL.11 XL.11 | 2] | OSE STILL OF BESINES THICKINESS |
| 3889 | Crown Wheel and Pinion (Ratio 3.77:1) | XL.12 | ĺγ | |
| 3888 | (2HA-105/11) Crown Wheel and Pinion (Ratio 4:09:1) (2HA-105/10) | XL.12 | 1 | NOT INTERCHANGEABLE WITH RATIOS SHOWN ON PAGE 28E |
| 3891 | Crown Wheel and Pinion (Ratio 4:27:1) (2HA-105/13) | XL.12 | 1 | RATIOS SHOWN ON PAGE 26E |
| 3875 | Screw, Set, securing Crown Wheel to Differential Case (S.A.E. Thread) (2HA-075/1) | XL.13 | 10 1 | |
| 3873 | Lock Strap for Crown Wheel Setscrews (2HA-074) | XL.14 | 5 | |
| 38 44 | Bearing, Roller, at inner end of Pinion (Timken 31593-31520) (2HA-023) | XL.15 | 1 | |
| 3860 | Shim, Inner, adjusting Pinion (-003" thick) (2HA-043) | XL.16 | 2 | LICE CLUM OF PECIPER THEY LESS |
| 3861 3862 | Shim, Inner, adjusting Pinion (·005" thick) (2HA-044) Shim, Inner, adjusting Pinion (·010" thick) (2HA-045) | XL.16 XL.16 | 2 } | USE SHIM OF DESIRED THICKNESS |
| 3839 | Spacer Tube, between inner and outer Bearing | XL.17 | ī, | |
| 3856 | (2HA-018) Shim, Outer, adjusting Pinion (·003" thick) (2HA-039) | XL.18 | 2] | |
| 3857 | Shim, Outer, adjusting Pinion (-005" thick) (2HA-040) | XL.18 | 2 [| USE SHIM OF DESIRED THICKNESS |
| 3858 3859 | Shim, Outer, adjusting Pinion (·010" thick) (2HA-041) Shim, Outer, adjusting Pinion (·030" thick) (2HA-042) | XL.18 XL.18 | 2] | |
| 3843 | Bearing, Roller, at outer end of Pinion (Timken | XL.19 | ĩ | |
| 3853 | 02872-02820) (2HA-022) | XL.20 | 1 | |
| 3840 | Slinger, Oil, on Pinion (2HA-036) Seal, Oil, on Pinion (2HA-019) | XL.21 | 1 | |
| 3841 | Gasket for Pinion Oil Seal (2HA-020) | XL.22 | 1 | |
| 3879 112 | Flange, Companion, Assembly (2HA-083) Nut, securing Flange to Pinion (S.A.E. Thread) | XL.23 XL.24 | 1 | |
| 114 | (12-74-121) Washer under Nut (12-75-GB.29) | XL.25 | 1 | |
| 68 | Pin, Cotter, securing Nut (7-72-39) | XL.26 | i | |
| | | | | |
| 3878 | DIFFERENTIAL CASE ASSEMBLY (2HA-082/2) | | 1 -: | SUITABLE FOR 3-77:1, 4-09:1 and 4-27:1 RATIOS |
| 3831 | Case, Differential (2HA-006/4) | XL.27 | 1 | |
| 3929 3855 | Gear, Side, for Differential (4HA-007) Washer, Thrust, for Side Gears (2HA-038) | XL.28 XL.29 | 2 | |
| 3835 | Gear, Differential Pinion Mate (2HA-008/1) | XL.30 | 2 | |
| 3854 | Washer, Thrust, for Pinion Mate Gears (2HA-037) | XL.31 XL.32 | 2 | |
| 2027 | | A1 1/ | 1 | |
| 3837 3932 | Shaft for Pinion Mate Gears (2HA-012) Spacer, on Shaft (4HA-033) | XL.33 | i | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|--|--|---------------------------------|--|
| 3879 | PINION COMPANION FLANGE ASSEMBLY (2HA-083) | XL.23 | 1 | |
| 3842 | Shield, Dust, for Companion Flange (2HA-021) | | 1 | |
| 3924 | REAR AXLE SHAFT (4HA-005) | XL.35 | 2 | |
| C.7356 3848 3846 | Key, securing Hub to Shaft (Salisbury 2HA-029) Seal, Oil, for Shafts, in end of Carrier (2HA-027) Bearing, Roller, for Hubs (Timken 25877-25821) (2HA-025) | XL.36 XL.37 XL.38 | 2 2 2 | |
| 131 | Nut, Slotted, on Axle Shafts (S.A.E. Thread) (16-74-71) | XL.39 | 2 | |
| C.1479 73 | Washer under Nuts (Salisbury 16-75-GB.39) Pin, Cotter, securing Nuts (8-72-19) | XL.40 XL.41 | 2 2 | |
| C.6774 | REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 30422) | | 1 | |
| C.6775 | REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 30423) | | 1 | |
| 3867 3868 3869 3870 3933 C.1483 | Shim, adjusting Hub Bearing ('003" thick) (2HA-050) Shim, adjusting Hub Bearing ('005" thick) (2HA-051) Shim, adjusting Hub Bearing ('010" thick) (2HA-052) Shim, adjusting Hub Bearing ('030" thick) (2HA-053) Plate, retaining Hub Bearings (4HA-035) Gasket, between Backplate and Oil Seal Container | XL.42 XL.42 XL.42 XL.42 XL.43 XL.44 | 2 2 2 2 2 2 2 | USE SHIM OF DESIRED THICKNESS |
| C.1481 C.1480 57 | (Salisbury 2HA-031) Seal, Oil, on Backplates (Salisbury 2HA-032) Container for Oil Seal (Salisbury 2HA-030) Screw, Set, securing Backplate to Carrier (S.A.E. | XL.45 XL.46 XL.47 | 2 2 10 | |
| 60 62 | Thread) (6-73-2119) Nut on Setscrews (S.A.E. Thread) (6-74-11) Washer, locking Nuts (6-75-GB.49) | XL.48 XL.49 | 10 10 | |
| C.5064 | *REAR AXLE HUB | XL.50 | 2 | |
| C.7228 | *BRAKE DRUM | XL.51 | 2 | |
| C.3078 C.3040 | *Screw, Set, locating Brake Drums on Hubs *Stud, securing Brake Drums and Road Wheels to Hubs | XL.52 XL.53 | 4 10 | |
| C.3041 C.970 | "Nut on Studs Nipple, Grease, on Axle Tubes (Tecalemit NA.5797) NOTE.—Items marked * are for use with "Disc" Type Road Wheels only | XL.54 XL.55 | 10 2 | |
| | THE FOLLOWING ITEMS ARE REQUIRED FOR "SPECIAL EQUIPMENT" MODELS (i.e., Cars bearing the prefix "S," to the Chassis number) | | | |
| C.6022 C.6023 C.6277 NN.143/L C.1096/1 C.1102 C.1103 C.7273 | Hub, right hand, Rear Hub, left hand, Rear Stud in Hubs Nut on Hub Studs Washer, Spring, under Nuts Hub Cap, right hand Hub Cap, left hand Brake Drum, Rear | | 1 10 10 10 10 1 | FOR USE ONLY WITH WIRE WHEELS up to Chassis No. |
| C.6025 | Brake Drum, Rear | | 2 | 672646 and 679894 FOR USE ONLY WITH WIRE WHEELS for Chassis No. 660001 and subs. 672647 and subs. 679895 and subs. |

| Part No. | Description. | | Plate No. | No. per Unit. | Remarks. |
|-------------------|---|---------------|--------------|------------------|---|
| C.4024 C.4023 | BRAKE CABLE, L.H. | OR HAND- | | 1 } | Fitted to Chassis No. 660001 and subs. 670001 and subs. |
| C.3116/3 C.741 | Nut, securing Abutment Brackets Washer, Shakeproof, under Nuts | | | 2 2 | |
| | | | | | |
| C.7228 | BRAKE DRUM | | | 2 | 500 HS5 WITH 401000 TVD5 DO 40 |
| C.3078 | Screw, Set, locating Brake Drum of Flange | on Axle Shaft | | 4 } | FOR USE WITH "DISC" TYPE ROAD WHEELS ONLY |
| C.3041 | Nut, securing Road Wheels and Brai | ke Drums | | 10 | |

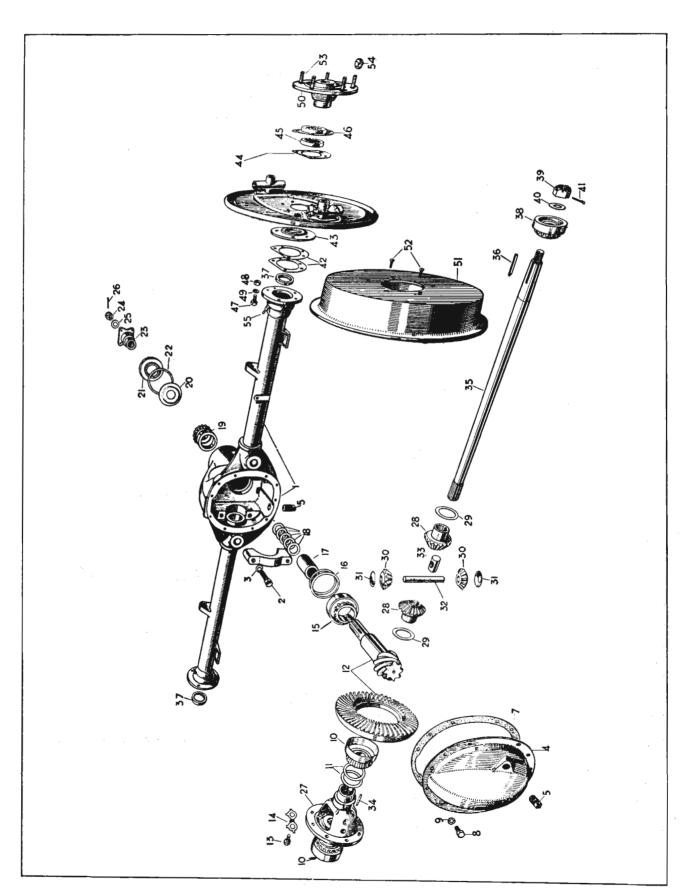


PLATE XL

| Part No. | Description. | No. | No. per Unit. | Remarks. |
|-------------------|--|----------------|------------------|--|
| C.5764 | REAR AXLE ASSEMBLY (SALISBURY 4HA) (RATIO 2-93:1) | | 1 | NOTE.—FROM CHASSIS No. 660935 ONWARDS 669003 ONWARDS 671797 ONWARDS 679222 ONWARDS EITHER SALISBURY OR E.N.V. REAR AXLES MAY BE FITTED |
| C.5759 | REAR AXLE ASSEMBLY (SALISBURY 4HA) (RATIO 3·31:1) | | 1 | Varies Hall BE HILLED |
| C.5760 | REAR AXLE ASSEMBLY (SALISBURY 4HA) (RATIO 3.54:1) | | 1 | |
| C.5761 | REAR AXLE ASSEMBLY (SALISBURY 4HA) (RATIO 3·77:I) | | 1 | |
| C.5762 | REAR AXLE ASSEMBLY (SALISBURY 4HA) (RATIO 4.09:1) | | 1 | |
| C.5763 | REAR AXLE ASSEMBLY (SALISBURY 4HA) (RATIO 4.27:1) | | 1 | |
| 3943 74 | Carrier and Tube Assembly (4HA-101) Screw, Set, securing Differential Caps (S.A.E. Thread) (8-73-3136) | XL.1 XL.2 | 1 4 | |
| 76 | Lock Washer on Setscrews (8-75-GB.39) | XL.3 | 4 | |
| 3939 3823 | Cover for Carrier (4HA-064) Plug for Filler and Drain apertures (HA.059) | XL.4 XL.5 | 1 2 | |
| 3931 | Gasket for Cover (4HA-026) | XL.7 | ĩ | |
| 44 | Screw, Set, securing Cover to Carrier (S.A.E. | XL.8 | 10 | |
| 47 | Thread) (5A-73-110) Lock Washer for Cover Screws (5-75-19) | XL.9 | 10 | |
| 39 4 1 | Case, Differential, Assy. (4HA-082) | ,,,,,,, | 1 | |
| 3845 | Bearing, Roller, on Differential Case (Timken | XL.10 | 2 | |
| 3935 | 25577-25523) (2HA-024) Shim, adjusting Differential (·003" thick) (4HA-046) | XL,11 | 2] | |
| 3936 | Shim, adjusting Differential (-005" thick) (4HA-047) | XL.11 | 2 (| USE SHIM OF DESIRED THICKNESS |
| 3937 | Shim, adjusting Differential (-010" thick) (4HA-048) | XL.11 | | OSE STAIN OF DESIRED THICKNESS |
| 3938 3947 | Shim, adjusting Differential (-030" thick) (4HA-049) Crown Wheel and Pinion (Ratio 2-93:1) | XL.11 XL.12 | | |
| | (4HA-105/6) | | | |
| 3948 | Crown Wheel and Pinion (Ratio 3-31:1) (4HA-105/8) | XL.12 | 1 | |
| 3949 | Crown Wheel and Pinion (Ratio 3.54:1) | XL.12 | . 1 | · |
| 2010 | (4HA-105/9) | XL.12 | . 1 | NOT INTERCHANGEABLE WITH RATIOS SHOWN ON PAGE 28C |
| 3950 | Crown Wheel and Pinion (Ratio 3.77:1) (4HA-105/7) | AL.12 | ` ' | RATIOS SHOWN ON PAGE AC |
| 3952 | Crown Wheel and Pinion (Ratio 4:09:1) | | 1 | |
| 3951 | (4HA-105/13) Crown Wheel and Pinion (Ratio 4:27:1) | | 1 | |
| 3,31 | (4HA-105/12) | | _ J | |
| 3919 | Screw, Set, securing Crown Wheel to Differential Case (S.A.E. Thread) (3HA-075/2) | XL.13 | 10 | |
| 3940 | Lock Strap for Crown Wheel Setscrews (4HA-074) | XL.14 | 5 | |
| 3844 | Bearing, Roller, at inner end of Pinion (Timken | XL.15 | 1 | |
| 3860 | 31593-31520) (2HA-023) Shim, Inner, adjusting Pinion (-003" thick) (2HA-043) | XL.16 | 2] | |
| 3861 | Shim, Inner, adjusting Pinion (-005" thick) (2HA-044) | XL.16 | | |
| 3862 | Shim, Inner, adjusting Pinion (-010" thick) (2HA-045) | XL.16 | | |
| 3856 | Shim, Outer, adjusting Pinion (-003" thick) (2HA-039) | XL.18 | 2 | |
| 3857 | Shim, Outer, adjusting Pinion (-005" thick) | XL.18 | 2 } | USE SHIM OF DESIRED THICKNESS |
| 3858 | (2HA-040) Shim, Outer, adjusting Pinion (-010" thick) | XL,18 | 2 | |
| 3030 | (2HA-041) | | | |
| 3859 | Shim Outer, adjusting Pinion (-030" thick) | XL.18 | 2 | |
| 3843 | (2HA-042) Bearing, Roller, at outer end of Pinion (Timken | XL.19 | 1 | |
| | 02872-02820) (2HA-022) | V1 20 | | |
| 3934 3840 | Slinger, Oil, on Pinion (4HA-036) Seal, Oil, on Pinion (2HA-019) | XL.20 XL.21 | | |
| 3841 | Gasket for Pinion Oil Seal (2HA-020) | XL.22 | | |
| 3879 | Flange, Companion, Assembly (2HA-083) | XL.23 | | |
| 115 | Nut, securing Flange to Pinion (S.A.E. Thread) (12LN-NF.9) | XL.24 | 1 | |
| | | | | |

| Case Differential (4HA-005) XL.28 2 3929 Gear, Side, for Differential (4HA-007) XL.28 2 2 3835 Gear, Differential Pinion Mate (2HA-008)1 XL.29 2 2 3835 Gear, Differential Pinion Mate (2HA-008)1 XL.30 2 2 3835 Shaft for Pinion Mate Gears (2HA-037) XL.31 2 3836 XL.29 3837 Shaft for Pinion Mate Gears (2HA-037) XL.31 2 3837 Shaft for Pinion Mate Gears (2HA-037) XL.31 2 3838 Shaft for Pinion Mate Gears (2HA-012) XL.32 1 3838 Shaft for Pinion Mate Gear Shaft in Differential XL.34 1 Case (2HA-013) The property of the prop | Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|------------------------------|--|----------------------------------|------------------------|---|
| DIFFERENTIAL CASE ASSEMBLY (4HA-082) 1 Suitable for 2-93: 1, 3-31: 1 and 3-54 | 3942 | DIFFERENTIAL CASE ASSEMBLY (4HA-082/1) | | 1 | SUITABLE FOR 3.77:1 RATIO |
| Case | 3928 | Case, Differential (4HA-006/1) | XL.27 | 1 | Suitable for 3·77: Ratio |
| 1927 Case, Differential (H4-A006) | 3941 | DIFFERENTIAL CASE ASSEMBLY (4HA-082) | | 1 | Suitable for 2-93: 1, 3-31: 1 and 3-54: 1 |
| Washer, Thrust, for Side Gears (2HA-038) | 3927 | Case, Differential (4HA-006) | XL.27 | 1 | Ratios |
| Sass | | | | | |
| Washer, Thrust, for Pinion Mate Gears (2HA-037) XL.31 2 | | | | | |
| Shaft for Pinion Mate Gears (2HA-012) | | | | | |
| Pin, locking Pinion Mate Gear Shaft in Differential XL.34 1 | | Shaft for Pinion Mate Gears (2HA-012) | | | |
| PINION COMPANION FLANGE ASSEMBLY (2HA-083) 1 (2HA-083) | | | | | |
| (2HA-083) 3842 Shield, Dust, for Companion Flange (2HA-021) 3924 REAR AXLE SHAFT (4HA-005) C7356 Key, securing Hub to Shaft (Salisbury 2HA-029) 3848 Seal, Oll, for Shaft, in end of Carrier (2HA-027) 3846 Seal, Oll, for Shaft, in end of Carrier (2HA-027) 3846 Seal, Oll, for Shaft, in end of Carrier (2HA-027) 3846 Seal, Oll, for Shaft, in end of Carrier (2HA-027) 3847 Washer under Nuts (Salisbury 167-5-GB.39) C.6674 REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 31415) C.6675 REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 31416) C.7826 REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 35430) C.7827 REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 35430) C.7828 REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 35431) Seal, Oll, diplating Hub Bearing (003° thick) (2HA-051) 35431 Shim, adjusting Hub Bearing (003° thick) (2HA-051) 3868 Shim, adjusting Hub Bearing (005° thick) (2HA-051) 3870 Shim, adjusting Hub Bearing (006° thick) (2HA-051) 3871 Shim, adjusting Hub Bearing (007° thick) (2HA-051) 3872 Shim, adjusting Hub Bearing (007° thick) (2HA-051) 3873 Plate, retaining Hub Bearing (008° thick) (2HA-051) 3874 Shim, adjusting Hub Bearing (008° thick) (2HA-051) 3875 Shim, adjusting Hub Bearing (008° thick) (2HA-051) 3876 Shim, adjusting Hub Bearing (008° thick) (2HA-051) 3877 Shim, adjusting Hub Bearing (008° thick) (2HA-051) 3878 Shim, adjusting Hub Bearing (008° thick) (2HA-051) 3879 Shim, adjusting Hub Bearing (008° thick) (2HA-051) 3870 Shim, adjusting Hub Bearing (008° thick) (2HA-051) 3871 Seal, Oll, on Backplate (010° thick) (2HA-051) 3872 Shim, adjusting Hub Bearing (010° thick) (2HA-051) 3873 Shim, adjusting Hub Bearing (010° thick) (2HA-051) 3874 Shim, adjusting Hub Bearing (010° thick) (2HA-051) 3875 Shim, adjusting Hub Bearing (010° thick) (2HA-051) 3876 Shim, adjusting Hub Bearing (010° thick) (2HA-051) 3877 Shim, adjusting Hub Bearing (010° thick) (2HA-051) 3878 Shim, adjusting Hub Bearing (010° thick) (2HA-051) 3879 Shim, adjusting Hub Bearing (010° thick) (2HA-051) 3870 Shim, adjusting Hub Bearing (010° thick) (2HA-051) | 3030 | | AL.34 | · | |
| 3842 Shield, Dust, for Companion Flange (2HA-021) 1 3924 REAR AXLE SHAFT (4HA-005) XL.35 2 C.7356 Key, securing Hub to Shaft (Salisbury 2HA-029) XL.36 2 3848 Seal, Oil, for Shaft, in end of Carrier (2HA-021) XL.37 2 3846 Bearing, Roller, for Hubs (Timken 25877-25821) XL.38 2 (2HA-025) Nut, Slotted, on Axle Shafts (S.A.E. Thread) (16-74-71) XL.39 2 (2HA-025) YL.40 2 73 Pin, Cotter, securing Nuts (8-72-19) XL.41 2 C.6674 REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 31415) C.6675 REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 31416) C.7826 REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 31416) C.7827 REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 31416) Saskaja) Saskaja Shirm, adjusting Hub Bearing (003" thick) (2HA-050) XL.42 2 3686 Shirm, adjusting Hub Bearing (000" thick) (2HA-051) XL.42 2 3687 Shirm, adjusting Hub Bearing (000" thick) (2HA-051) XL.42 2 3688 Shirm, adjusting Hub Bearing (000" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (000" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (000" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (000" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thick) (2HA-051) XL.42 2 3689 Shirm, adjusting Hub Bearing (010" thi | 3879 | | XL.23 | 1 | |
| C.7356 Key, securing Hub to Shaft (Salisbury 2HA-029) XL.36 2 3848 Seal, Oil, for Shaft, in end of Carrier (2HA-027) XL.37 2 3846 Bearing, Roller, for Hubs (Timken 25877-25821) XL.38 2 (2HA-025) Nut, Slotted, on Axle Shafts (S.A.E. Thread) (16-74-71) XL.39 2 (2HA-027) Washer under Nuts (Salisbury 16-75-GB.39) XL.41 2 C.6674 REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 31415) C.6675 REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 1 667001 only 677001 to 67407. 669935 to 661086 671797 to 67407. 669935 to 661086 677221 to 68120. 667001 only 677001 to 67749 31416) C.7826 REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 35430) C.7827 REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 1 1 667001 only 677001 to 677492 and subs. 669034 and subs. 681207 and subs. 669034 and subs. 681207 and subs. | 3842 | Shield, Dust, for Companion Flange (2HA-021) | | 1 | |
| Seai, Oil, for Shaft, in end of Carrier (2HA-027) | 3924 | REAR AXLE SHAFT (4HA-005) | XL.35 | 2 | |
| Seal, Oil, for Shaft, in end of Carrier (2HA-027) | C 7356 | Key securing Hub to Shaft (Salishury 2HA-029) | YI 36 | 2 | |
| 131 | 3848 | Seal, Oil, for Shaft, in end of Carrier (2HA-027) Bearing, Roller, for Hubs (Timken 25877-25821) | XL.37 | 2 | |
| C.6675 REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 31416) Titled from Chassis No. 660935 to 661986 671797 to 67407. 669003 to 669030 to 667001 only 677001 to 67749 (677001 to 67749) | C.1479 | Nut, Slotted, on Axle Shafts (S.A.E. Thread) (16-74-71) Washer under Nuts (Salisbury 16-75-GB.39) | XL.40 | 2 | |
| C.6675 REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 31416) C.7826 REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 35430) C.7827 REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 35431) Shim, adjusting Hub Bearing (-003" thick) (2HA-050) | C.6674 | | | 1] | |
| 35430) C.7827 REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 35431) Shim, adjusting Hub Bearing (-003" thick) (2HA-050) XL.42 2 Shim, adjusting Hub Bearing (-005" thick) (2HA-051) XL.42 2 Shim, adjusting Hub Bearing (-010" thick) (2HA-052) XL.42 2 Shim, adjusting Hub Bearing (-010" thick) (2HA-052) XL.42 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.42 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.42 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.42 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.42 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.42 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.42 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.43 2 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.44 2 Shim, adjusting Hub Bearing (-055" thick) (2HA-055) XL.43 2 Shim, adjusting Hub Bearing (-055" thick) (2HA-055) XL.43 2 Shim, adjusting Hub Bearing (-055" thick) (2HA-055) XL.43 2 Shim, adjusting Hub Bearing (-055" thick) (2HA-055) XL.43 2 Shim, adjusting Hub Bearing (-055" thick) (2HA-055) XL.44 2 Shim, adjusting Hub Bearing (-055" thick) (2HA-055) XL.42 2 Shim, adjusting Hub Bearing (-055" thick) (2HA-055) XL.42 2 Shim, adjusting Hub Bearing (-055" thick) (-055" thick) (-055" thic | C.6675 | REAR BRAKE ASSEMBLY, L.H. (LOCKHEED | | 1 | 669003 to 669033 679222 to 681206 |
| C.7827 REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 35431) 667002 and subs. 677492 and subs. 35431) 667002 and subs. 677492 and subs. 36807 Shim, adjusting Hub Bearing (-005" thick) (2HA-050) XL.42 2 2 2 2 2 2 2 3869 Shim, adjusting Hub Bearing (-010" thick) (2HA-051) XL.42 2 2 2 2 3870 Shim, adjusting Hub Bearing (-030" thick) (2HA-052) XL.42 2 2 2 3870 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.42 2 2 2 2 2 2 2 2 2 | C.7826 | | | 1 | 661087 and subs. 674076 and subs. |
| 3868 Shim, adjusting Hub Bearing (-005" thick) (2HA-051) XL.42 2 Shim, adjusting Hub Bearing (-010" thick) (2HA-052) XL.42 2 3 3870 Shim, adjusting Hub Bearing (-030" thick) (2HA-053) XL.42 2 3 3933 Plate, retaining Hub Bearings (4HA-035) XL.43 2 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 | C.7827 | | | 1 | |
| C.1481 | 3868 3869 3870 3933 | Shim, adjusting Hub Bearing (-005" thick) (2HA-051) Shim, adjusting Hub Bearing (-010" thick) (2HA-052) Shim, adjusting Hub Bearing (-030" thick) (2HA-053) Plate, retaining Hub Bearings (4HA-035) Gasket, between Backplate and Oil Seal Container | XL.42 XL.42 XL.42 XL.43 | 2 2 2 2 | USE SHIM OF DESIRED THICKNESS |
| 60 Nut on Setscrews (S.A.E. Thread) (6-74-11) XL.48 10 | C.1480 | Seal, Oil, on Backplate (Salisbury 2HA-032) Container for Oil Seal (Salisbury 2HA-030) Screw, Set, securing Backplate to Carrier (S.A.E. | XL.46 | 2 | |
| | 60 | | XL.48 | 10 | |
| | | | | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|--|----------------|--|---|
| C.5064 | *REAR AXLE HUB | XL.50 | 2 | |
| C.7228 | *BRAKE DRUM | XL.51 | 2 | |
| C.3078 C.3040 | *Screw, Set, locating Brake Drums on Hubs *Stud, securing Brake Drums and Road Wheels to Hubs | XL.52 XL.53 | | |
| C.3041 C.970 | *Nut on Studs Nipple, Grease, on Axle Tubes (Tecalemit NA.5797) | XL.54 XL.55 | | |
| | NOTE.—Items marked * are for use with "Disc" Type Road Wheels only. | | | |
| | THE FOLLOWING ITEMS ARE REQUIRED FOR "SPECIAL EQUIPMENT" MODELS (i.e., Cars bearing the prefix "S." to the Chassis number.) | | | |
| C.6022 C.6023 C.6277 NN.143/L C.1096/1 C.1102 C.1103 C.6025 C.6025 | Hub, right hand, Rear Hub, left hand, Rear Stud in Hubs Nut on Hub Studs Washer, Spring, under Nuts Hub Cap, right hand Hub Cap, left hand Brake Drum, Rear Brake Drum, Rear | | 1 10 10 10 10 1 1 2 | FOR USE ONLY WITH WIRE WHEELS |
| C.7273 | Brake Drum, Rear | | 2 | for Chassis No. 660001 and subs. 672647 and subs. 667001 and subs. 677001 and subs. FOR USE ONLY WITH WIRE WHEELS up to Chassis No. 672646 and 679894 |

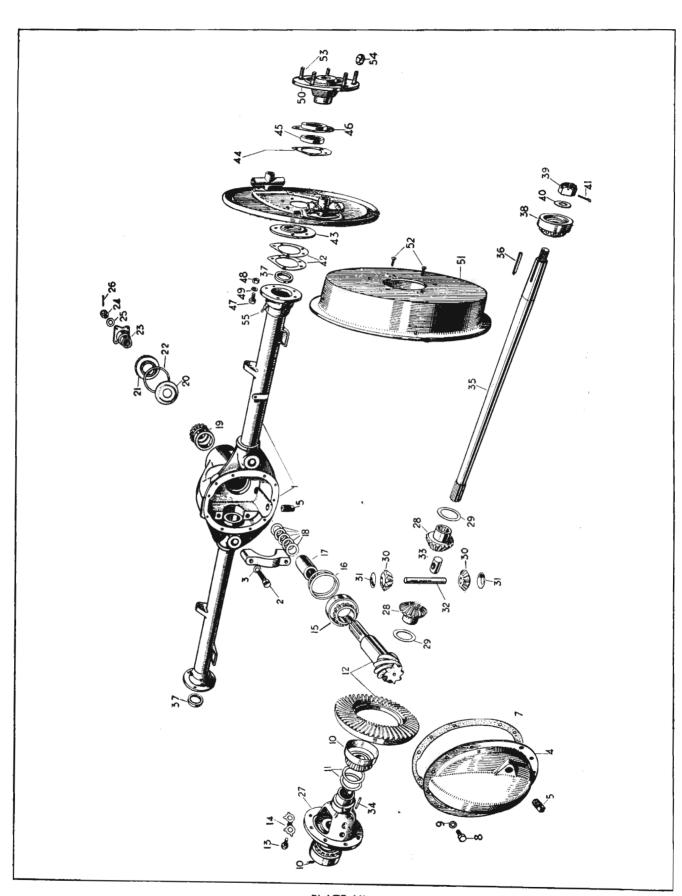


PLATE XL

660001 TO 660979 669001 TO 669002

FOR CHASSIS No. 670001 TO 672048 679001 TO 679621

| Part No. | Description. | Plate No. | No. pe Unit. | Remarks. |
|----------------------|--|--------------|-----------------|---|
| C.3889 | FRONT BRAKE ASSEMBLY, R.H. (LOCKHEED 28165) | | 1 | For Chassis Nos. to which these Assemblies apply, please refer to BRAKE SHOE |
| C.3890 | FRONT BRAKE ASSEMBLY, L.H. (LOCKHEED 28166) | Q.1 | 1 | ASSEMBLIES 28177 AND 28356 ON PAGE 34 |
| 941 | Backplate, R.H. (28159) | Q.2 | 1 | |
| 1030 2037 1978 | Backplate, L.H. (28160) Wheel-Cylinder Assembly (25452) Nut, Plain, securing Wheel Cylinders (K.18609) | Q.3 | 4 12 | |
| 1986 C.3924 | Washer, Spring, under Nuts (K.19208) Pipe, connecting Top and Bottom Wheel Cylinders | Q.4 Q.5 | 12 | |
| 2042 | (Lockheed T4/10B) Shoe Assembly (28177) | Q.6 | - 41 | For Chassis Nos. to which these Shoes are |
| 7403 | Shoe Assembly (28356) | Q.6 | 4 } | fitted, SEE FRONT BRAKE SHOE ASSEMBLY ON PAGE 34 |
| 2007 201 4 | Adjuster, Micram. (21787) Mask (22459) | Q.7 Q.8 | 4 | |
| 2021 C.3525 | Spring, Pull-off, for Brake Shoes (24701) Scoop, Air, Assembly, R.H. | Q.9 | 1 | |
| C.3603 7406 | Scoop, Air, Assembly, L.H. Rivet, Pop, securing Air Scoops (28392) | | 1 8 | |
| | | | - | |
| C.4816 | FRONT BRAKE ASSEMBLY, R.H. (LOCKHEED 29483) | | 1 | |
| C.4817 | FRONT BRAKE ASSEMBLY, L.H. (LOCKHEED 29484) | | 1 | Fitted from Chassis No. 660557 to 660979 669001 to 669002 671097 to 672048 679001 to 679621 |
| 1933 | Shoe Assembly (29477) All other Spares as for Assemblies C.3889 and C.3890 | | 4] | |
| C.3525 | AIR SCOOP ASSEMBLY, R.H. | | 1 | |
| C.3603 | AIR SCOOP ASSEMBLY, L.H. | Q.10 | 1 | For Chassis Nos. to which these Assemblies |
| C.3526 | Scoop only, R.H. | Q.11 | 1 | apply, please refer to BRAKE SHOE ASSEMBLIES 28177 AND 28356 ON |
| C.3604 C.3527 | Scoop only, L.H. Stone-Guard | Q.12 | 1 2 | PAGE 34 |
| C.3528 C.3813 | Clip, Spring, retaining Stone-Guards Rivet, Semi-Tubular, securing Clips | Q.13 | 2 4 | |
| 2037 | FRONT WHEEL-CYLINDER ASSY. | | 4 | |
| 2025 | Body only (complete with Bolts and Abutment | Q.14 | 4 | |
| 2015 | Strips) (25410) Piston and Dust Cover (22619) | Q.15 | 4 | |
| 2762 2013 | Cup (2762) Filler, Cup (22118) | Q.16 Q.17 | 4 | ALTERNATIVE TO 29660 |
| 2098 2098 | Filler, Cup (29660) Spring, for Cup Filler (30977) | | 4 } | ALTERNATIVE TO 22118 AS A UNIT NOT SUPPLIED SEPARATELY |
| C.3905 | Banjo for Top Left Hand Front Wheel Cylinder | | 1 | |
| C.3904 | (Lockheed 22863) Banjo for Top Right Hand Front Wheel Cylinder | Q.18 | 1 | |
| C.3907 | (Lockheed 22864) Banjo for Bottom Wheel Cylinders (Lockheed | Q.19 | 2 | |
| C.3906 C.3925 | 22865) Bolt for Banjos (Lockheed 10543) Gasket (Small) for Wheel Cylinders (Lockheed | Q.20 Q.21 | 4 2 | |
| C.3926 | KL.44518) Gasket (Large) for Wheel Cylinders (Lockheed | Q.22 | 2 | |
| C.3908 | KL.44522) Screw, Bleeder, in bottom Wheel Cylinders (Lock- heed 12272) | Q.23 | 2 | |

FOR CHASSIS No. 660001 TO 660079 669001 TO 669002

670001 TO 672048 679001 TO 679621

| Part No. | Description. | Plate No. | No. pe Unit. | |
|--|---|--|---------------------------------|--|
| 2042 | FRONT BRAKE SHOE ASSEMBLY (28177) | Q.6 | 4 | Fitted from Chassis No. 660001 to 660209 Also to 660212, 660214, 660215, 660217, |
| 1905 2585 | Linings only (28176) Rivet, securing Linings (KLB.48043) | | 4 56 | 660220, 660222, 660223 670001 to 670591 Also to 670593 to 670601, 670603 to 670638, 670640, 670643 to 670662, 670664 to 670667, 670670 to 670690, 670692, 670695, 670698, 670699, 670703, 670713, 670715, 670720, 670727, 670729, 670731 to 670733, 670735, 670737 to 670737, 670744, 670748 to 670761, 670780, 670795 to 670797, 670799 to 670858, 670875, 670880 |
| 7403 | FRONT BRAKE SHOE ASSEMBLY (28356) | Q.6 | 4 | Fitted to the following Chassis Nos.:— 660210, 660211, 660213, 660216, 660218, 660219, 660221, 660224, 660225, 660226, |
| 450 2585 | Linings only (28355) Rivet, securing Linings (KLB.48043) | | 68 | 660227 to 660556 670592, 670602, 670639, 670641, 670642, 670663, 670668, 670669, 670691, 670693, 670694, 670696, 670697, 670700 to 670702, 670704 to 670712, 670714, 670716 to 670719, 670721 to 670726, 670728, 670730, 670734, 6707334, 6707336, 670740, 670741, 670745 to 670747, 670762 to 670779, 670781 to 670794, 670798, 670859 to 670874, 670876 to 670879, 670881 to 671096 |
| 1933 | FRONT BRAKE SHOE ASSEMBLY (29477) | | 4 | Fitted from Chassis No. 660557 to 660979 669001 to 669002 |
| 505 2585 | Linings only (29476) Rivet, securing Linings (KLB.48043) | | 68 | 671097 to 672048 679001 to 679621 |
| C.3891 | REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 28169) | | 1 | FOR USE WITH E.N.V. AXLES ONLY For Chassis Nos. to which these Assemblies apply, please refer to BRAKE SHOE |
| C.3892 | REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 28170) | Q.24 | 1 | ASSEMBLIES 28177 AND 28356 ON PAGE 34A |
| 1096 1187 1302 | Backplate, R.H. (28163) Backplate, L.H. (28164) Wheel-Cylinder (28175) | Q.25 | 1 1 2 | |
| 2042 1933 7403 7404 2005 2020 2014 | Shoe Assembly (Leading) (28177) Shoe Assembly (Trailing) (28178) Shoe Assembly (Leading) (28356) Shoe Assembly (Trailing) (28357) Boot for Wheel Cylinders (21740) Adjuster, Micram. (23978) Mask (22459) | Q.26 Q.27 Q.26 Q.27 Q.28 Q.29 Q.30 | 2 2 2 2 2 2 2 | For Chassis Nos. to which these Shoes are fitted, SEE REAR BRAKE SHOE ASSEMBLIES ON PAGE 34A |
| 7405 1930 | Abutment (28490) Screw, Set, securing Abutment to Backplate (K.11804) | Q.31 Q.32 | 4 | |
| 1987 2012 2021 | Washer, Spring, on Setscrews (K.19209) Spring, Tension (21935) Spring, Pull-off (24701) | Q.33 Q.34 Q.35 | 4 2 2 | |

660001 TO 660979 669001 TO 669002

FOR CHASSIS No. 670001 TO 672048 679001 TO 679621

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|------------------|---|--------------|------------------|--|
| 1302 | REAR WHEEL CYLINDER ASSEMBLY (28175) | | 2 | |
| 202 4 | Body only (25409) | Q.36 | 2 | |
| 2016 | Piston and Dust Cover (22625) | Q.37 | 2 | |
| 2762 2013 | Cup (2762) Filler, Cup (22118) | Q.38 Q.39 | 2 | ALTERNATIVE TO 29660 |
| 2098 | Filler, Cup (29660) | Q.37 | 2) | ALTERNATIVE TO 22118 AS A UNIT |
| 098 | Spring for Cup Filler (30977) | | 2 } | NOT SUPPLIED SEPARATELY |
| 2003 224 | Piston, Hydraulic (21735) Lever for Handbrake Operation (28174) | Q.40 Q.41 | 2 | |
| 2004 | Pin for Handbrake Lever (21737) | Q.42 | 2 | |
| 2654 | REPAIR KIT FOR SERVICING REAR WHEEL CYLINDER 28175 (KL.71470) | | 2 | |
| C.3907 | Banjo for Rear Wheel Cylinders (Lockheed 22865) | Q.43 | 2 | |
| C.3906 C.3925 | Bolt for Banjos (Lockheed 10543) Gasket (Small) for Wheel Cylinders (Lockheed | Q.44 Q.45 | 2 2 | |
| C.3926 | KL.44518) Gasket (Large) for Wheel Cylinders (Lockheed KL.44522) | Q.46 | 2 | |
| C.3908 | Screw, Bleeder, for Wheel Cylinders (Lockheed 12272) | Q.47 | 2 | |
| 2042 | LEADING-SHOE ASSEMBLY (REAR | Q.26 | 2 | Fitted from Chassis No. 660001 to 660209 |
| 1933 | BRAKES) (28177) TRAILING-SHOE ASSEMBLY (REAR | Q.27 | 2 | Also to 660212, 660214, 660215, 660217, 660220, 660222, 660223 670001 to 670591 |
| | BRAKES) (28178) | | J | Also to 670593 to 670601, 670603 to 670638 |
| 1905 2585 | Linings (28176) Rivet, securing Linings (KLB.48043) | | 4 56 | 670640, 670643 to 670662, 670664 to 670667, 670670 to 670690, 670692, 670693 670698, 670699, 670703, 670713, 670715 670720, 670727, 670729, 670731 to 670735, 670735, 670737 to 670739, 670742 to 670744, 670748 to 670761, 670780, 67079 to 670797, 670799 to 670880 |
| 7403 | LEADING-SHOE ASSEMBLY (REAR BRAKES) (28356) | Q.26 | 2 | Fitted to the following Chassis Nos.:— 660210, 660211, 660213, 660216, 660218 660219, 660221, 660224, 660225, 660225 |
| 740 4 | TRAILING-SHOE ASSEMBLY (REAR BRAKES) (28357) | Q.27 | 2 | 660227 to 660979 670592, 670602, 670639, 670641, 67064 |
| 450 2585 | Linings (28355) Rivet, securing Linings (KLB.48043) | | 4 68 | 670663, 670668, 670669, 670691, 670693, 670694, 670696, 670697, 670700 to 670703, 670704 to 670712, 670714, 670716 to 670719, 670721 to 670726, 670728, 670734, 670734, 670734, 670741, 670741, 670741, 670741, 670741, 670741, 670789, 670899, 670899, 670891, 670894, 670899, 670881 to 670879, 670881 to 670879, 670881 to 6708899, 670881 to 6708891, |

FOR CHASSIS No. 660001 TO 660979 669001 TO 669002

670001 TO 672048 679001 TO 679621

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---|---|--------------|-------------------------|---|
| C.6774 | REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 30422) | | 1 | FOR USE WITH SALISBURY REAR AXLE ONLY from Chassis No. |
| C.6775 | REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 30423) | | 1 | 669935 to 669979 669001 to 669002 671797 to 672048 679222 to 679621 |
| 693 2053 1302 1933 2042 2005 2020 2014 2012 2012 2021 2008 | Backplate, R.H. (30200) Backplate, L.H. (30201) Wheel Cylinder Assembly (28175) Shoe Assembly, Leading (29477) Shoe Assembly, Trailing (29478) Boot for Wheel Cylinders (21740) Adjuster, Micram (23978) Mask (22459) Spring, Tension (21935) Spring, Pull-off (24701) Spring, "Beehive", steadying Shoes (21792) | | 1 1 2 2 2 2 2 2 2 2 2 4 | |
| 1302 | REAR WHEEL CYLINDER ASSEMBLY (28175) | | 2 | |
| | For Spares items, see page 34A | | | |
| 1933 | LEADING SHOE ASSY. (REAR BRAKES) (29477) | | 2 | |
| 2042 | TRAILING SHOE ASSY. (REAR BRAKES) (29478) | | 2 | |
| 505 2585 | Linings only (29476) Rivet, securing Linings (KLB.48043) | | 4 56 | |
| | NOTE.—Between Chassis No. 660935 to 660979; 671797 to 672048; 669001 to 669002 and 679001 to 679621, either E.N.V. or Salis- bury Rear Axles may be fitted. Care should therefore be exercised when ordering Rear Brake Assemblies | | | |
| C.7228 | BRAKE DRUM (FRONT AND REAR) | Q.48 | 4 } . | FOR USE WITH "DISC" TYPE ROAD |
| C.3078 C.3041 | Screw, Set, locating Brake Drums on Hubs Nut, securing Brake Drums on Hub Studs | Q.49 Q.50 | 8 20 | WHEELS ONLY |

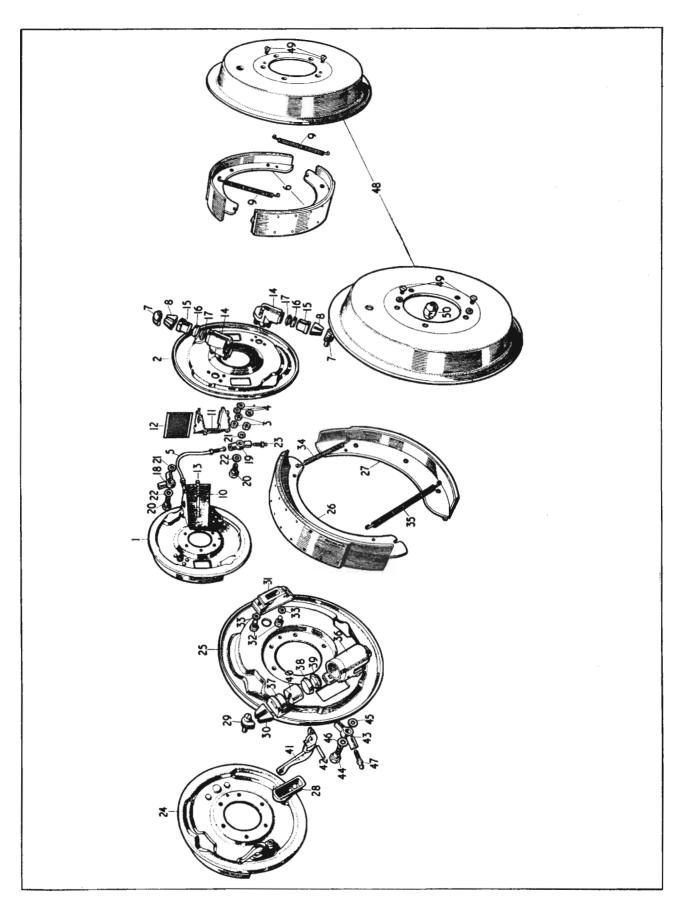


PLATE Q.

FOR CHASSIS No. 660980 AND SUBS. 669003 AND SUBS.

672049 AND SUBS. 679622 AND SUBS. 667001 AND SUBS. 677001 AND SUBS.

| Part No. | Description. | Plate No. | No. pe Unit. | |
|------------------|---|-----------------|-----------------|---|
| C.6667 | FRONT BRAKE ASSEMBLY, R.H. (LOCK-HEED 30638) | AQ.1 | 1] | Fitted from Chassis No. 660980 to 661086 669003 to 669033 |
| C.6668 | FRONT BRAKE ASSEMBLY, L.H. (LOCK-HEED 30639) | | 1 | 672049 to 674075 679622 to 681206 667001 only 677001 to 677491 |
| 4178 | Backplate only, R.H. (30636) | | 1 | |
| 4179 4269 | Backplate only, L.H. (30637) Shoe Assembly (31269) | AQ.2 AQ.3 | 1 4 | · |
| 4173 | Spring, Pull-Off, for Front Brake Shoes (30628) | AQ.3A | 4 | |
| 4195 | Bar for Automatic Shoe Adjustment (31057) | AQ.4 | 4 | |
| 4198 4330 | Pad, Friction, at each side of Bar (31059) Plate (bottom) enclosing Friction Pads (34015) | AQ.5 AQ.6 | 8 4 | |
| 4333 | Plate (top) enclosing Friction Pads (34016) | AQ.6A | 4 | |
| 4197 4205 | Boit, securing Friction Pads and Plates to Bars (31058) | AQ.7 | 4 | |
| FN.405/L | Spring, Coil, on Bolts (31061) Nut, Slotted, on Bolts (31705) | AQ.8 AQ.9 | 4 4 | |
| L.101·5/6U | Pin, Split, retaining Slotted Nut (K.19803) | AQ.10 | 4 | |
| 4172 | Spring, Ratchet, operating Shoe adjustment (30627) | AQ.11 | 4 | |
| 4328 1983 | Pin, anchoring Bar to Brake Shoes (33453) Washer, Plain on Anchor Pin (K.19109) | AQ.12 AQ.13 | 4 | |
| 2402 | Circlip, retaining Anchor Pin (KL.40002) | AQ.14 | 4 | |
| 4168 | Pin, Anchor, in Backplates, for Pull-Off Spring | AQ.15 | 4 | |
| FN.105/L | (30619) Nut on Anchor Pins (K.18609) | AQ.16 | 4 | |
| FG.105/X 4177 | Washer, Spring, under Nuts (K.19208) Wheel Cylinder Assembly (30635) | AQ.17 AQ.18 | 4 4 | |
| C.7824 | FRONT BRAKE ASSEMBLY, R.H. (LOCKHEED 35428) | | 1 | |
| C.7825 | FRONT BRAKE ASSEMBLY, L.H. (LOCKHEED 35429) | | 1 | Fitted to Chassis No. 661087 and subs. 674076 and subs. 667002 and subs. 677492 and subs. |
| 4344 | Shoe Assembly (35130) NOTE.—All other items as for assemblies C.6667 or C.6668 respectively | | 4] | |
| C.3924 | Bridge-Pipe, connecting Wheel Cylinders on Front Brakes (T.4/10B) | AQ.19 | 2 | |
| 4177 | FRONT WHEEL CYLINDER ASSEMBLY (30635) | AQ.18 | 4 | |
| 4174. | Body only (complete with Bolts and Abutment Strips) (30629) | AQ.20 | 4 | |
| 4175 | Piston (30631) | AQ.21 | 4 | |
| 2762 | Seal (2762) | AQ.22 | 4 | |
| 2098 2098 | Filler for Seal (29660) Spring for Filler (30977) | AQ.23 AQ.23A | 4 } | NOT SUPPLIED SEPARATELY |
| 4 176 | Boot (Rubber) over end of Piston (30632) | AQ.24 | 4 | |
| 6699 | Clip, securing Boot (31127) | AQ.25 | 4 | |
| 2655 | REPAIR KIT FOR SERVICING FRONT WHEEL CYLINDER 30635 (KL.71490) | | 2 | |
| C 2004 | Bania for Ton D.H. Event Wheel Culinder (20074) | 40.20 | 1 | |
| C.3904 C.3905 | Banjo for Top R.H. Front Wheel Cylinder (22864) Banjo for Top L.H. Front Wheel Cylinder (22863) | AQ.26 | 1 | |
| C.3907 | Banjo for Bottom Front Wheel Cylinders (22865) | AQ.27 | 2 | |
| C.3906 | Bolt, securing Banjos (10543) Gasket (Small) on Banjo Bolts (KI 44518) | AQ.28 | - 4 4 | |
| C.3925 | Gasket (Small) on Banjo Bolts (KL.44518) | AQ.29 | 4 | |
| C.3926 | Gasket (Large) on Banjo Bolts (KL.44522) | AQ.30 | 7 | |

660980 AND SUBS. 672049 AND SUBS. 669003 AND SUBS. 679622 AND SUBS.

FOR CHASSIS No. 667001 AND SUBS. 677001 AND SUBS.


| Part No. | Description. | Plate No. per No. Unit. Remarks. | |
|--|--|--|------------|
| 4269 | FRONT BRAKE SHOE ASSEMBLY (31269) | AQ.3 4 Fitted from Chassis No. | |
| 4184 2586 | Linings only (M.14) (30725) Rivet, securing Linings (KLB.48045) | 660980 to 661086 669003 to 66903 672049 to 674075 679622 to 68120 48 667001 only 677001 to 67749 |)6 |
| 4343 | FRONT BRAKE SHOE ASSEMBLY (35130) | Fitted to Chassis No. 661087 and subs. 669034 and subs | s . |
| 4344 2586 | Linings only (M.20) (35129) Rivet, securing Linings (KLB.48045) | 4 674076 and subs. 681207 and subs 667002 and subs. 677492 and subs | |
| C.6674 | REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 31415) | AQ.32 1 FOR USE ONLY WHEN SALISE REAR AXLE IS FITTED For Chassis No. | URY |
| C.6675 | REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 31416) | 660980 to 661086 669003 to 66903 fo 672049 to 674075 679622 to 68120 667001 only 677001 to 67749 | 06 |
| 4326 4273 4269 2008 4180 4181 4483 | Backplate only, R.H. (31393) Backplate only, L.H. (31394) Shoe Assembly (31269) Spring, "Beehive" Steadying Shoes (21792) Spring, Pull-Off (Adjuster side) (30708) Spring, Pull-Off (Wheel Cylinder side) (30709) Adjuster Assy., on R.H. Rear Brake (30731) | AQ.33 1 AQ.34 4 AQ.35 4 AQ.36 2 AQ.37 2 | |
| 4484 4268 FG.106/X 5885 2005 | Adjuster Assy., on L.H. Rear Brake (30732) Screw, Set, securing Adjusters (31265) Washer, Spring, on Setscrews (K.19209) Wheel Cylinder Assembly (30730) Boot for Rear Wheel Cylinders (21740) | AQ.38 1 AQ.39 4 AQ.40 4 AQ.41 2 AQ.41A 2 | |
| C.7826 | REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 35430) | FOR USE ONLY WHEN SALISE | |
| C.7827 | REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 35431) | REAR AXLE IS FITTED to Chass 661087 and subs. 669034 and sub: 674076 and subs. 681207 and sub: 667002 and subs. 677492 and sub: | s. s. |
| 4343 | Shoe Assembly (35130) | 4] | |
| | NOTE.—All other items as for assemblies C.6674 or C.6675 respectively | | |
| 4483 | ADJUSTER ASSEMBLY ON R.H. REAR BRAKE (30731) | for USE ONLY WITH SALISI | ALIRY |
| 4484 | ADJUSTER ASSEMBLY ON L.H. REAR BRAKE (30732) | AQ.38 1 REAR AXLE | |
| 4187 4183 4182 4215 4215 4213 4263 4321 4319 4264 | Body only (complete with Abutment Strip) (30754) Screw, operating Brake Shoe Adjustment (30722) Wheel Assy., operating Screws (30717) Bracket for Adjuster (31185) Spring "Clicker" (31186) Plate and Pinion, under "Clicker" Spring (31184) Spring, Coil, under Plate and Pinion (31187) Screw, Set, securing Bracket and "Clicker" Spring to Adjuster Body (33125) Plate, locking Setscrews (33110) Stud, for Screwdriver adjustment through Brake | AQ.42 2 AQ.43 2 AQ.44 2 AQ.45 2 AQ.45 2 AQ.47 2 AQ.47 2 AQ.48 2 AQ.49 4 AQ.50 2 AQ.51 2 | |
| 5885 | Drum (31188) REAR WHEEL CYLINDER ASSEMBLY (30730) | AQ.41 2 FOR USE ONLY WITH SALISI | BURY |
| | | REAR AXLE | |
| 2024 4185 2003 2762 2098 | Body only (complete with Abutment Strip) (25409) Piston (complete with Dust Cover) (30728) Piston, Hydraulic (21735) Seal, behind Hydraulic Piston (2762) Filler for Seal (29660) | AQ.52 2 AQ.53 2 AQ.54 2 AQ.55 2 AQ.56 2) NOT SUBBLIED SERABATELY | |
| 2098 1224 2004 | Spring for Filler (30977) Lever for Handbrake operation (28174) Pin, Fulcrum, securing Handbrake Lever (21737) | AQ.56 2 AQ.56A 2 AQ.57 2 AQ.58 2 | |

FOR CHASSIS No. 660980 AND SUBS. 669003 AND SUBS.

672049 AND SUBS. 679622 AND SUBS.

667001 AND SUBS. 677001 AND SUBS.

| Part No. | Description. | Plate No. | No. pe Unit. | r Remarks. |
|--------------------------------------|---|----------------------------------|----------------------------|--|
| 2654 | REPAIR KIT FOR SERVICING REAR WHEEL CYLINDER 30730 OR 28175 (KL.71470) | | 2 | |
| C.3907 C.3906 C.3925 C.3926 | Banjo for Rear Wheel Cylinders (22865) Bolt, securing Banjos (10543) Gasket (Small) on Banjo Bolts (KL.44518) Gasket (Large) on Banjo Bolts (KL.44522) | AQ.59 AQ.60 AQ.61 AQ.62 | 2 | |
| C.3908 | Screw, Bleeder, in Banjo (12272) | AQ.63 | | |
| 4269 | REAR BRAKE SHOE ASSEMBLY (31269) | AQ.34 | 4 | FOR USE ONLY WHEN SALISBURY REAR AXLE IS FITTED for Chassis No. |
| 4184 2586 | Linings only (M.14) (30725) Rivet, securing Linings (KLB.48045) | | 48 | 660980 to 661086 669003 to 669033 672049 to 674075 679622 to 681206 667001 only 677001 to 677491 |
| 4344 | REAR BRAKE SHOE ASSEMBLY (35130) | | 4 | FOR USE ONLY WHEN SALISBURY REAR AXLE IS FITTED to Chassis No. 661087 and subs. 669034 and subs. |
| 4343 2586 | Linings only (M.20) (35129) Rivet, securing Linings (KLB.48045) | | 4 48 ∫ | 674076 and subs. 681207 and subs. 667002 and subs. 677492 and subs. |
| C.7228 | BRAKE DRUM (FRONT AND REAR) | Q.48 | 4 | |
| C.3078 C.3041 | Screw, Set, locating Brake Drums on Hubs Nut, securing Brake Drums on Hub Studs | Q.49 Q.50 | 8 20 | |
| C.4818 | REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 34505) | | 1] | FOR USE ONLY WHEN E.N.V. REAR AXLE IS FITTED for Chassis No. |
| C.4819 | REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 34506) | | 1 | 660980 and subs. 669003 and subs. 672049 and subs. 679622 and subs. |
| 1096 1187 4313 4314 2001 | Backplate only, R.H. (28163) Backplate only, L.H. (28164) Shoe Assembly, Leading (33029) Shoe Assembly, Trailing (33030) Spring, "Beehive", steadying Shoes (21686) | | 1 1 2 2 4 | |
| 2021 2012 2020 FN.106/L | Spring, Pull-off, for Shoes (24701) Spring, Tension, for Shoes (21935) Adjuster, Micram (23978) Nut, securing Adjusters (K.18611) | | 2 2 2 4 | |
| FG.106/X 1302 2005 | Washer, Spring, under Nuts (K.19209) Wheel Cylinder Assembly (28175) Boot for Wheel Cylinders (21740) | | 4 2 2 | |
| 1302 | REAR WHEEL CYLINDER ASSEMBLY (28175) | | 1 | FOR USE ONLY WHEN E.N.V. REAR AXLE IS FITTED |
| 2024 2016 2762 | Body only (25409) Piston and Dust Cover (22625) Cup (2762) | | 2 2 2 | AALL IS HITED |
| 2098 2098 | Filler, Cup (29660) Spring for Cup Filler (30977) | | 2 2 2 2 2 2 | |
| 2003 1224 2004 | Piston, Hydraulic (21735) Lever for Handbrake operation (28174) Pin for Handbrake Lever (21737) | | 2 2 2 | |
| 4313 | LEADING-SHOE ASSY. (REAR BRAKES) (33029) | | 2 | FOR USE ONLY WHEN E.N.Y. REAR |
| 4314 | TRAILING-SHOE ASSY. (REAR BRAKES) (33030) | | 2 | AXLE IS FITTED |
| 7402 2585 | Linings only (33028) Rivet, securing Linings (KLB.48043) | | 4 56 | |

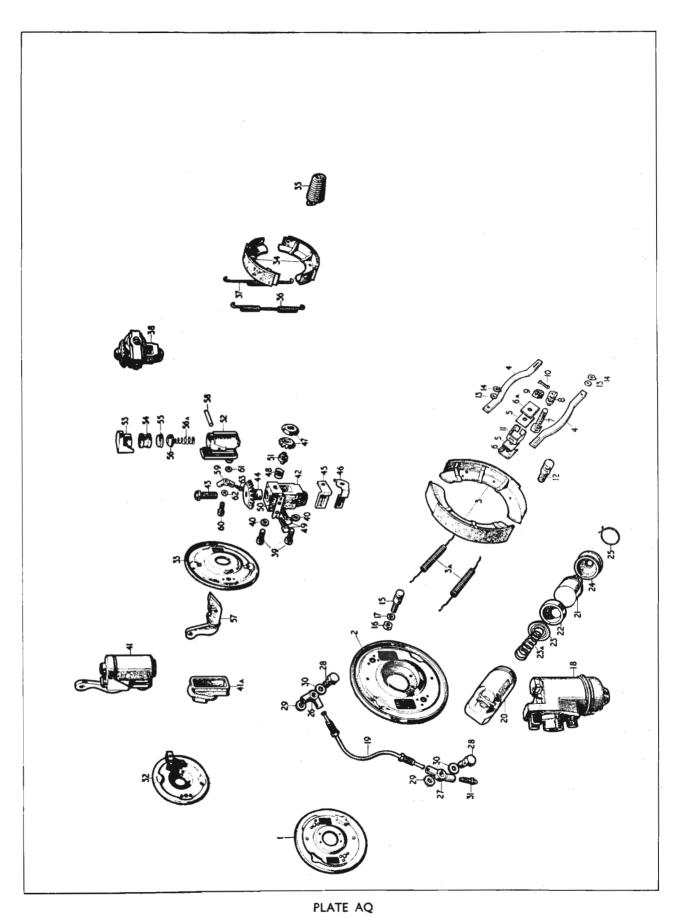

FOR CHASSIS No. 660001 TO 660979 669001 TO 669002

670001 TO 672048 679001 TO 679621

| Part No. | Description. | Plate No. | No. pe Unit. | |
|----------------------------|--|---------------------|-----------------|---|
| C.3222 | BRAKE PEDAL | R.1 | 1 | RIGHT HAND DRIVE ONLY |
| C.3221 | BRAKE PEDAL | R.2 | 1 | For Chassis No. 660001 to 660058 LEFT HAND DRIVE ONLY For Chassis No. 670001 to 670184 |
| C.4030 | BRAKE PEDAL | | 1 | RIGHT HAND DRIVE ONLY For Chassis No. |
| C.4031 | BRAKE PEDAL | | 1 | 660059 to 660979 669001 to 669002 LEFT HAND DRIVE ONLY For Chassis No. |
| C.3223 | Bearing, Roller, inside Pedal Boss | R.3 | 1 | 670185 to 672048 670001 to 679621 |
| .3224 | Sleeve for Roller Bearing | R.4 | 1 | |
| 1.3363 15.434.43D | Nipple, Grease (Tec. NA.5790) on Pedal Boss | R.5 R.6 | 1 1 | |
| IS.131/12D IN.231/L | Bolt, Stop, for Pedal Nut, locking Stop Bolt | R.7 | i | |
| .3709 | Bracket, Support, between Pedal Shaft and Master Cylinder | R.8 | 1 | Fitted from Chassis No. 660001 to 660058 |
| C.4032 | Bracket, Support, between Pedal Shaft and Master Cylinder | | 1 | 670001 to 670184 Fitted to Chassis No. 660059 to 660979 669001 to 669002 |
| IN.143/L | Nut, securing Brake Pedal and Support Bracket to | | 1 | 670185 to 672048 679001 to 679621 |
| • | Shaft | рα | 4 | LEET WAND DRIVE ONLY |
| 2.3361 2.3317 2.3252 | Shaft for Brake Pedal Spring, Return, for Brake Pedal Fork-End, connecting Pedal with Push Rod on Master | R.9 R.10 R.11 | 1 1 1 | LEFT HAND DRIVE ONLY |
| .106/175 | Cylinder Pin, Clevis, through Pedal and Fork-End | R.12 | 1 | 4. |
| W.106/T | Washer, Plain, on Clevis Pin | R.13 | i | • |
| .103/7Ú | Pin, Split, through Clevis Pin | R.14 | 1 | |
| .3601 | BRAKE PEDAL STEM AND PLATE ASSY. | R.15 | 1 | |
| 92 | Pad (Rubber) on Stem Plate | R.16 | 1 | |
| .3673 | Excluder, Draught, on Pedal Stem | R.17 | 1 | Fitted from Chassis No. 660001 to 660058 670001 to 670184 |
| C.4036 | Excluder, Draught, on Pedal Stem | | 1 | Fitted to Chassis No. 660059 to 660979 669001 to 669002 670185 to 672048 679001 to 679621 |
| NB.131/10D | Bolt, securing Stem to Pedal | R.18 | 1.1 | |
| IN.131/L | Nut on Bolt | R.19 | 1 | |
| 2.740 | Washer, Shakeproof, under Nut | R.20 | 1 | |
| 2.3858 | BRAKE MASTER CYLINDER ASSEMBLY (LOCKHEED 24404) | ¹ R.21 | 1 | |
| 867 | Cylinder and Tank (complete with Plug) (28928) | R.22 | 1 | |
| 95 | Cup (112) | R.23 | 1 | |
|)0 998 | Cup, secondary (400) Piston (21421) | R.24 R.25 | 1 | |
| 002 | Washer, retaining Piston (1002) | R.26 | i | |
| 571 | Circlip for Piston Retaining Washer (KL.47011) | R.27 | 1 | |
| 997 | Spring (21412) | R.28 R.29 | 1 | : |
| 330 37 | Valve Assembly (3830) Boot (437) | R.30 | i | |
| 19 | Plug in Cylinder (23558) | R.31 | i | |
| 540 | Gasket for Plug (KL.44542) | R.32 | 1 | |
| 945 542 | Cap, Filler (15097) Gasket for Filler Cap (KL 44547) | R.33 R.34 | 1 | |
| 999 | Gasket for Filler Cap (KL.44547) Push-Rod (21422) | R.35 | i | |
| 653 | REPAIR KIT FOR SERVICING MASTER CYLINDER C.3858 (KL.71410) | | 1 | |
| .3899 | Banjo for Master Cylinder (Lockheed 23776) | R.36 | 1 | RIGHT HAND DRIVE ONLY |
| C.3953 | Banjo for Master Cylinder (Lockheed 7960) | R.37 | 1 | LEFT HAND DRIVE ONLY |
| 3900 | Bolt for Banjo (Lockheed 8048) Gasket (Small) for Banjo (Lockheed KI 44518) | R.38 R.39 | 1 | |
| 3925 3926 | Gasket (Small) for Banjo (Lockheed KL.44518) Gasket (Large) for Banjo (Lockheed KL.44522) | R.40 | 1 | |
| .3901 | Switch, Stop-light (Lockheed 23388) | R.41 | 1 | |
| .3902 | Banjo at top of Master Cylinder (Lockheed 1641) | R.42 | 1 | |
| C.3903 | Bolt for Banjo (Lockheed 237) | R.43 | 1 | |
| | | | | |

660001 TO 660979 669001 TO 669002

FOR CHASSIS No. 670001 TO 672048 679001 TO 679621

| art No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|---|--|---|-------------------------|
| | BRAKE MASTER CYLINDER ASSY. (conti | nued) | | |
| C.3927 | Gasket (Small) for Banjo (Lockheed KL.44519) | R.44 | 1 | |
| .3928 | Gasket (Large) for Banjo (Lockheed KL.44524) | R.45 | 1 | |
| 3857 | Rod, Operating, for Master Cylinder | R.46 | 1 | |
| N.206/L \B.137/24D | Nut, Lock, on Operating Rod Bolt, securing Master Cylinder to Support Bracket | R.47 R.48 | 2 2 | |
| NN.137/L | and Frame Nut on Boits | R.49 | 2 | SUPERSEDED BY C.4105 |
| 2.741 2.4105 | Washer, Shakeproof, on Bolts Plate, Tapped, for Master Cylinder Bolts | R.50 | 2 1 | SUPERSEDES NUT NN.137/L |
| C.3960 | SHIELD ASSEMBLY FOR MASTER CYLINDER | R.51 | 1 | LEFT HAND DRIVE ONLY |
| 2.3540 | SUPPLY TANK ASSEMBLY (GIRLING | | 1 | |
| | H.2812) | | | |
| C.3609 | Glass Body only (Girling 48/MQ/201) | R.52 R.53 | 1 | |
| 607 127 | Adapter, Outlet (H.2811) Nut, securing Outlet Adapter (H1253) | R.54 | 1 | |
| 90 | Washer under Nut (190) (45/BS/5) | R.55 | i | |
| 68 | Washer, Jointing, on each side of Body (H.2620) | R.56 | 2 | |
| 281 | Cover, Top (H.1792) | R.57 | 1 | |
| 146 | Cap on Top Cover (H.1470) | R.58 | 1 | |
| 282 | Washer, Jointing, between Top Cover and Body (H.1794) | R.59 | 1 | |
| 513 | Clip Assy., supporting Supply Tank (H.2276) | R.60 | 1 | |
| 283 72 4 | Screw, securing Top Cover to Clip Assy. (H.1796) Nut on Screws (30/BS/123) | R.61 R.62 | 4 | |
| NS.125/4D | Screw, securing Clip Assy. to Scuttle | R.63 | 2 | |
| IN.125/L | Nut on Setscrews | R.64 | 2 | |
| .724 | Washer, Shakeproof, under Nuts | R.65 | 2 | |
| .3730 | LOW PRESSURE PIPE (RUBBER) FROM SUPPLY TANK (LOCKHEED 16741) | R.66 | 1 | |
| .3738 | Clip on Low Pressure Pipe (Lockheed 20203) | R.67 | 2 | |
| | HYDRAULIC PIPES AND FITTINGS | | R | IGHT HAND DRIVE ONLY |
| C.3141 | Pipe from Master Cylinder to Low Pressure Hose | R.68 | 1 | |
| C. 3 922 | (Lockheed T.865/B) Union, 3-Way, on R.H. side of Chassis Frame | R.69 | , 1 | |
| C 404 14D | (Lockheed 7965) | | | |
| S.106/4D | Screw, Set, securing 3-Way Union | D 70 | 4 | |
| 176 | Washer Shakenroof on Setscrew | R.70 R.71 | 1 | |
| | Washer, Shakeproof, on Setscrew Pipe from Master Cylinder to Front 3-Way Union | R.70 R.71 R.72 | 1 1 1 | |
| C.3948 | Washer, Shakeproof, on Setscrew Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose | R.71 | 1 | |
| 3948 3913 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) | R.71 R.72 | 1 | |
| 3948 3913 3914 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) | R.71 R.72 R.73 R.74 | 1 1 | |
| C.3948 C.3913 C.3914 C.3909 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) | R.71 R.72 R.73 R.74 R.75 | 1 1 1 1 2 | |
| C.3948 C.3913 C.3914 C.3909 C.3910 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) | R.71 R.72 R.73 R.74 R.75 R.76 | 1 1 1 2 2 | |
| C.3948 C.3913 C.3914 C.3909 C.3910 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) Washer, Shakeproof, under Locknuts (Lockheed K.19411) | R.71 R.72 R.73 R.74 R.75 R.76 R.77 | 1 1 1 2 2 2 | |
| 3948 3913 3914 3909 3910 3911 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) Washer, Shakeproof, under Locknuts (Lockheed K.19411) Gasket for Hose Assemblies (Lockheed KL.44518) | R.71 R.72 R.73 R.74 R.75 R.76 R.77 | 1 1 1 2 2 2 2 | |
| 2.3948 2.3913 2.3914 2.3909 2.3910 2.3911 2.3925 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) Washer, Shakeproof, under Locknuts (Lockheed K.19411) Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) | R.71 R.72 R.73 R.74 R.75 R.76 R.77 | 1 1 1 2 2 2 2 | |
| | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) Washer, Shakeproof, under Locknuts (Lockheed K.19411) Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Tube Connector (Lockheed 5248) | R.71 R.72 R.73 R.74 R.75 R.76 R.77 R.78 R.79 | 1 1 1 2 2 2 2 1 | |
| C.3948 C.3913 C.3914 C.3909 C.3910 C.3911 C.3925 C.3918 C.3923 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) Washer, Shakeproof, under Locknuts (Lockheed K.19411) Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) | R.71 R.72 R.73 R.74 R.75 R.76 R.77 | 1 1 1 2 2 2 2 | |
| C.3948 C.3913 C.3914 C.3909 C.3910 C.3911 C.3925 C.3928 C.3923 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) Washer, Shakeproof, under Locknuts (Lockheed K.19411) Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Tube Connector (Lockheed 5248) Pipe from Tube Connector to Rear Hose (Lockheed T.4A/40B) Hose Assembly from Supply Pipe to Rear 3-Way | R.71 R.72 R.73 R.74 R.75 R.76 R.77 R.78 R.79 | 1 1 1 2 2 2 2 1 | |
| C.726 C.3948 C.3913 C.3914 C.3909 C.3910 C.3925 C.3925 C.3923 C.3920 C.3920 C.3909 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) Washer, Shakeproof, under Locknuts (Lockheed K.19411) Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Tube Connector (Lockheed 5248) Pipe from Tube Connector to Rear Hose (Lockheed T.4A/40B) Hose Assembly from Supply Pipe to Rear 3-Way Union (Lockheed KL.48924) Locknut, securing Hose Assembly to Bracket on | R.71 R.72 R.73 R.74 R.75 R.76 R.77 R.78 R.79 | 1 1 1 2 2 2 2 1 1 | |
| C.3948 C.3913 C.3914 C.3909 C.3910 C.3911 C.3925 C.3918 C.3923 C.3920 C.3909 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) Washer, Shakeproof, under Locknuts (Lockheed K.19411) Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Tube Connector (Lockheed 5248) Pipe from Tube Connector to Rear Hose (Lockheed T.4A/40B) Hose Assembly from Supply Pipe to Rear 3-Way Union (Lockheed KL.48924) Locknut, securing Hose Assembly to Bracket on Frame (Lockheed 23897) Washer, Shakeproof, under Locknut (Lockheed | R.71 R.72 R.73 R.74 R.75 R.76 R.77 R.78 R.79 R.80 R.81 | 1 1 1 2 2 2 2 1 1 1 | |
| 2.3948 2.3913 2.3914 2.3909 2.3910 2.3911 2.3925 2.3928 2.3920 2.3920 2.3909 2.3910 | Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B) Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B) Pipe from Front 3-Way Union to L.H. Front Hose (Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Backplates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) Washer, Shakeproof, under Locknuts (Lockheed K.19411) Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Tube Connector (Lockheed 5248) Pipe from Tube Connector to Rear Hose (Lockheed T.4/40B) Hose Assembly from Supply Pipe to Rear 3-Way Union (Lockheed KL.48924) Locknut, securing Hose Assembly to Bracket on Frame (Lockheed 23897) | R.71 R.72 R.73 R.74 R.75 R.76 R.77 R.78 R.79 R.80 R.81 R.82 R.83 | 1 1 1 2 2 2 2 1 1 1 1 | |

FOR CHASSIS No. 660001 TO 660979 669001 TO 669002

670001 TO 672048 679001 TO 679621

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|------------------|--|--------------|------------------|-----------------------|
| | HYDRAULIC PIPES AND FITTINGS | (continued |) | RIGHT HAND DRIVE ONLY |
| NB.125/10D | Bolt, securing 3-Way Union to Bracket on Rear | R.87 | 1 | |
| NN.125/L | Axie Nut on Bolt | R.88 | 1 | |
| C.724 | Washer, Shakeproof, under Nut | R.89 | 1 | |
| C.3916 | Pipe from Rear 3-Way Union to R.H. Rear Wheel Cylinder (Lockheed T.4/24B) | R.90 | 1 | |
| C.3917 | Pipe from Rear 3-Way Union to L.H. Rear Wheel | R.91 | 1 | |
| C.3529 | Cylinder (Lockheed T.4/47B) Clip, securing Pipes to Chassis Frame (Trimount 304) | R.92 | 7 | |
| | HYDRAULIC PIPES AND FITTINGS | | | LEFT HAND DRIVE ONLY |
| C.3896 | Pipe from Master Cylinder to Low Pressure Hose | R.93 | 1 | |
| C.3922 | (Lockheed T.869/B) Union, 3-Way, on L.H. and R.H. sides of Chassis | R.94 | 2 | |
| C.3722 | Frame (Lockheed 7965) | _ | | |
| FS.106/4D | Screw, Set, securing 3-Way Unions | R.70 R.71 | 2 | |
| C.726 C.3912 | Washer, Shakeproof, on Setscrews Pipe from Master Cylinder to L.H. Front 3-Way | R.95 | 1 | |
| C.3913 | Union (Lockheed T.4/21B) Pipe from L.H. 3-Way Union to L.H. Front Hose | R.96 | 1 | |
| C.3909 | (Lockheed T.4/12B) Hose Assembly from Supply Pipes to Front Back- | R.75 | 2 | |
| | plates (Lockheed KL.48924) | | | |
| C.3910 | Locknut, securing Hose Assemblies to Brackets (Lockheed 23897) | R.76 | 2 | |
| C.3911 | Washer, Shakeproof, under Locknuts (Lockheed K.19411) | R.77 | 2 | |
| C.3925 C.3921 | Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from L.H. Front 3-Way Union to R.H. Front 3-Way Union (Lockheed T.4/27B) | R.78 R.97 | 2 1 | |
| C.3913 | Pipe from R.H. Front 3-Way Union to R.H. Front | R.73 | 1 | |
| C.3919 | Hose (Lockheed T.4/12B) Pipe from R.H. Front 3-Way Union to Tube Connector (Lockheed T.4A/66B) | R.98 | 1 | |
| C.3923 C.3920 | Tube Connector (Lockheed 5248) Pipe from Tube Connector to Rear Hose (Lockheed T.4A/40B) | R.80 R.81 | 1 | |
| C.3909 | Hose Assembly from Supply Pipe to Rear 3-Way | R.82 | 1 | |
| C.3910 | Union (Lockheed KL.48924) Locknut, securing Hose Assembly to Bracket on | R.83 | 1 | |
| C.3911 | Frame (Lockheed 23897) Washer, Shakeproof, under Locknut (Lockheed | R.84 | 1 | |
| C.3925 | K.19411) Gasket for Hose Assembly (Lockheed KL.44518) | R.85 | 1 | |
| C.3916 | Pipe from Rear 3-Way Union to R.H. Rear Wheel | R.90 | i | |
| C.3917 | Cylinder (Lockheed T.4/24B) Pipe from Rear 3-Way Union to L.H. Rear Wheel | R.91 | 1 | |
| C.3529 | Cylinder (Lockheed T.4/47B) Clip, securing Pipes to Chassis Frame (Trimount | R.92 | 7 | |
| C.0327 | 304) | | • | |
| | | | | |
| C.2958 | BLEEDER TUBE AND CONTAINER (LOCKHEED 3919) | | 1 | |
| | | | | |
| C.2957 | WRENCH, OPERATING BLEEDER SCREW (LOCKHEED 13836) | | 1 | |

660001 TO 660979 669001 TO 669002

FOR CHASSIS No. 670001 TO 672048 679001 TO 679621

| Part No. | Description. | Plate No. | No. pe Unit. | |
|---------------------|---|----------------|-----------------|---|
| C.3714 | HANDBRAKE LEVER | R.99 | 1 | RIGHT HAND DRIVE ONLY |
| C.3272 | HANDBRAKE LEVER | R.99 | 1 | LEFT HAND DRIVE ONLY |
| C.3717 | Rod, Operating, through Handbrake Lever | R.100 | 1 | RIGHT HAND DRIVE ONLY |
| C.4169 C.606 | Rod, Operating, through Handbrake Lever Spring, on Rod, at top of Lever | R.101 | 1 | LEFT HAND DRIVE ONLY |
| C.3873 | Knob on Operating Rod | R.102 | 1 | |
| :.3657 \S.102/3D | Pawl, on Rod, at bottom of Lever Screw, Set, in Pawl | R.103 R.104 | 1 | |
| 2.723 | Washer, Shakeproof, on Setscrew | R.105 | 1 | |
| NB.131/12D | Bolt, securing Handbrake Lever to Shaft Nut on Bolt | R.106 R.107 | 1 | |
| NN.131/L C.725 | Washer, Shakeproof, under Nut | R.108 | i | |
| C.755 | Key, Woodruff, securing Handbrake Lever in position on Shaft | R.109 | 1 | |
| C.3687 | RATCHET FOR HANDBRAKE LEVER | | 1 | Fitted from Chassis No. 670001 to 670010 |
| C.3805 | RATCHET FOR HANDBRAKE LEVER | R.110 | 1 | Fitted to Chassis No. 660001 and subs. 670011 and subs. |
| NB.125/5D | Bolt, securing Ratchet to Frame | R.111 | 2 | |
| NN.125/L C.724 | Nut on Bolts Washer, Shakeproof, under Nut | R.112 R.113 | 2 2 | |
| C.3654 | SHAFT, SUPPORTING HANDBRAKE LEVER | R.114 | 1 | RIGHT HAND DRIVE ONLY |
| C.3655 | SHAFT, SUPPORTING HANDBRAKE LEVER | R.114 | 1 | LEFT HAND DRIVE ONLY |
| C.3656 | OPERATING LEVER ON SHAFT | R.115 | 1 | |
| NB.131/12D | Bolt, securing Operating Lever to Shaft | | 1 | |
| NN.131/L | Nut on Bolt | | 1 | |
| C.725 C.755 | Washer, Shakeproof, under Nut Key, Woodruffe, securing Operating Lever in posi- tion on Shaft | R.116 | 1 | |
| C. 3722 | Spring, at back of Operating Lever | R.117 | | |
| C.3265 | Trunnion in Operating Lever | R.118 | 1 | |
| C.3875 | COMPENSATOR ROD ASSEMBLY | | 1 | Fitted from Chassis No. 670001 to 670010 |
| C.3322 | COMPENSATOR ROD ASSEMBLY | R.119 | 1 | Fitted to Chassis No. 660001 and subs. 670011 and subs. |
| | | R.120 | 1 | |
| C.3264 | Spring on Compensator Rod | | | |
| C.3266 | Nut on Compensator Rod | R.121 | 1 | |
| | | | 1 1 1 | |

FOR CHASSIS No. 660001 TO 660979 669001 TO 669002

670001 TO 672048 679001 TO 679621

| Part No. | Description. | Plate No. | No. per Unit. Remarks. |
|---|--|---|--|
| C.3274/1 | COMPENSATOR ASSEMBLY FOR HAND- BRAKE CABLE | R.125 | 1 . |
| C.3872 | HANDBRAKE CABLE ASSEMBLY, OPERATING REAR BRAKES | | 1 Fitted from Chassis No. 670001 to 670010 FOR USE WHEN E.N.V. REAR AXL IS FITTED |
| C.3828 | HANDBRAKE CABLE ASSEMBLY, OPERATING REAR BRAKES | R.126 | 1 Fitted to Chassis No. 660001 and subs. 670011 and subs. FOR USE WHEN E.N.V. REAR AXL IS FITTED |
| C.6677 | HANDBRAKE CABLE ASSEMBLY, OPERATING REAR BRAKES | | 1 FOR USE WHEN SALISBURY REAL AXLE IS FITTED |
| 19 4 7 | Grease Nipple on Handbrake Cable | | 2 |
| NB.131/9D NN.131/L C.740 J.105/11S | Bolt, Clinch, at end of Cables Nut on Bolts Washer, Shakeproof, under Nuts Pin, Clevis, securing Fork-End on Cables to Operat- | R.127 | 2 2 2 2 2 |
| FW.105/T L.103/7U | ing Lever on Backplates Washer, Plain, on Clevis Pins Pin, Split, through Clevis Pins | R.128 R.129 | 2 2 |
| | | | |
| C.3867 | ABUTMENT BRACKET FOR HAND- BRAKE CABLE | | 1 Fitted from Chassis No. 670001 to 670010 |
| C.5771 | ABUTMENT BRACKET FOR HAND- BRAKE CABLE | R.130 | 1 Fitted to Chassis No. 660001 and subs. 670011 and subs. 667001 and subs. 667001 and subs. |
| NB.131/11D NN.131/L C.725 NS.125/4D NN.125/L C.724 C.3617 | Bolt, Clinch, for Abutment Bracket Nut on Bolts Washer, Shakeproof, under Nuts Bolt, securing Abutment Bracket Nut on Bolts Washer, Shakeproof, under Nuts Clip, securing Handbrake Cables and Hydraulic | R.131 R.132 R.133 R.134 R.135 R.136 R.137 | 2 2 2 2 4 4 4 3 |
| NS.325/5H NS.325/8H NN.125/L | Pipes to Rear Axle Screw, Set, for Clip securing Pipe to Axle Screw, Set, for Clips securing Brake Cables to Axle Nut on Setscrews | R.138 R.139 R.140 | 1 2 3 |
| C.5066 | RETURN SPRING FOR HANDBRAKE | | 2 |
| C.5067 | Retainer for Return Springs | | |

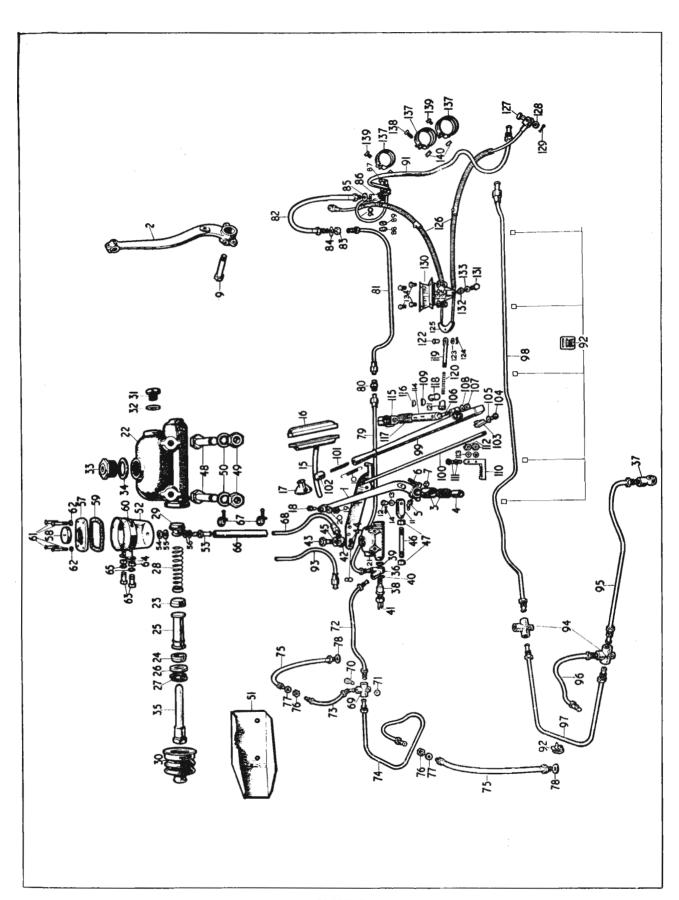


PLATE R

660980 AND SUBS. 669003 AND SUBS. 672049 AND SUBS. 679622 AND SUBS. FOR CHASSIS No. 667001 AND SUBS. 677001 AND SUBS.

| Part No. | Description. | Plate No. | No. pe | Remarks. |
|----------------------|--|----------------|--------|---|
| C.3222 | BRAKE PEDAL | AR.1 | 1 | RIGHT HAND DRIVE ONLY For Chassis No. |
| | | | | 660980 and subs. 667001 and subs. 669003 and subs. |
| C. 3221 | BRAKE PEDAL | | 1 | LEFT HAND DRIVE ONLY For Chassis No. 672049 and subs. 677001 and subs. |
| C.3223 | Bearing, Roller, inside Pedal Boss | AR.2 | 1 | 679622 and subs. |
| 2.3224 | Sleeve for Roller Bearing | AR.3 | 1 | |
| :.3363 NS.131/12D | Nipple, Grease (Tecalemit NA.5790) on Pedal Boss Bolt, Stop, for Pedal | AR.4 | 1 1 | |
| NN.231/L | Nut on Stop Bolt | AR.5 | 1 | |
| C.6696 NN.143/L | Bracket, Support, between Pedal and Master Cylinder Nut, securing Brake Pedal and Support Bracket to Shaft | AN.3 | i | |
| C.3361 C.4801 | Shaft for Brake Pedal Spring, Return, for Brake Pedal | AR.6 | 1 | LEFT HAND DRIVE ONLY |
| 2.6761 | Fork-End, connecting Pedal to Master Cylinder | AR.7 | i | • |
| .106/17S :W.106/T | Pin, Clevis, through Pedal and Fork-End Washer, Plain, on Clevis Pin | | 1 | |
| 103/7U | Pin, Split, through Clevis Pin | | i | |
| C.6708 | BRAKE PEDAL STEM AND PLATE ASSEMBLY | AR.8 | 1 | |
| 792 | Pad (Rubber) on Stem Plate | AR.9 | 1 | |
| C.4036 NB.131/10D | Excluder, Draught, on Pedal Stem Bolt, securing Stem to Pedal | AR.10 | 1 | |
| NN.131/L | Nut on Bolt | | 1 | |
| C.740 | Washer, Shakeproof, under Nut | | 1 | |
| C.6712 | BRAKE MASTER CYLINDER ASSEMBLY (LOCKHEED 31526) | AR.11 | 1 | |
| 1189 | Cylinder only (30828) | AR.12 | 1 | |
| 1279 1280 | Piston, Primary (31647) Piston, Secondary (31648) | AR.13 AR.14 | 1 | |
| 1281 | Spring, Coil, for Pistons (31649) | AR.15 | 2 | |
| 1190 | Seal on Pistons (30832) | AR.16 | 3 | |
| 1002 1572 | Washer, Stop, in front of Primary Piston (1002) Circlip, retaining Stop Washer (1012) | AR.17 AR.18 | 1 1 | |
| 1192 | Stop for Secondary Piston (30834) | AR.19 | 1 | |
| 1310 1538 | Pin, Stop, for Secondary Piston (32964) Gasket on Stop Pin (KL.44509) | AR.20 AR.21 | 1 1 | |
| 1193 | Adapter, Outlet, at end and top of Master Cylinder | AR.22 | 2 | |
| 4327 | (30835) Gasket for Adapters (33443) | | 2 | |
| 1278 | Seal for Outlet Adapters (31593) | AR.23 | 2 | |
| 534 508 | Valve Body (2379) Seal in Valve Body (608) | AR.24 AR.25 | 2 | |
| 2009 | Spring for Valve (6714) | AR.26 | 2 | |
| 1884 1451 | Washer for Valve (5966) Adapter Assy., Inlet (complete with Tilting Valves) | AR.27 AR.28 | 2 2 | |
| | (32961) | AR.29 | 2 | • |
| 4277 4191 | Seal for Inlet Adapters (31592) Push-Rod in end of Master Cylinder (30833) | AR.30 | 1 | |
| 2022 | Boot (Rubber) over Push-Rod (24995) | AR.31 | 1 | |
| 2656 | REPAIR KIT FOR SERVICING MASTER CYLINDER C.6712 (KL.71504) | | 1 | |
| C. 7216 | Plate, Tapped, behind Master Cylinder Mounting Bracket | AR.32 | 1 | |
| NB.131/22D C.7212 | Bolt, securing Master Cylinder to Frame Washer, Distance, between Master Cylinder and | AR.33 AR.34 | 2 } | Fitted from Chassis No. 660001 to 669002 670004 to 677539 679004 to 679004 |
| NB.131/21D | Mounting Bracket Bolt, securing Master Cylinder to Frame | | 2 | 670001 to 672539 679001 to 679840 Fitted to Chassis No. 660996 and subs. 669003 and subs. |
| C.6693 | Rod, Operating, between Master Cylinder Push-Rod | AR.35 | 1 | 672540 and subs. 679841 and subs. 667001 and subs. 677001 and subs. |
| | and Fork-End on Pedal | | | ** |
| NN.237/L | Nut, locking Operating Rod | AR.36 | 2 | |

FOR CHASSIS No. 660980 AND SUBS. 669003 AND SUBS.

672049 AND SUBS. 679622 AND SUBS. 667001 AND SUBS. 677001 AND SUBS.

| Part No. | Description. | Plate No. | No. pe Unit. | r Remarks. |
|---|---|---|-----------------------|-----------------------|
| C.3953 C.3953 | Banjo for Outlet Adapters (7960) Banjo for Outlet Adapter in end of Master Cylinder | AR.37 AR.38 | 2 1] | RIGHT HAND DRIVE ONLY |
| C.7210 | (7960) Banjo for Outlet Adapter at top of Master Cylinder | AR.39 | 1 } | LEFT HAND DRIVE ONLY |
| C.3900 C.3906 C.3925 C.3926 C.5218 | (7962) Bolt (Hollow) for Stop Light Switch and Banjo (8048) Bolt for Banjo (10543) Gasket (Small) on Banjo Bolts (KL.44518) Gasket (Large) on Banjo Bolts (KL.44522) Switch, Stop Light (31082/B) (in end Outlet Adapter for R.H. Drive cars and in top Outlet Adapter for L.H. Drive cars) | AR.40 AR.41 AR.42 AR.43 AR.44 | 1 1 2 2 1 | |
| | | | | |
| C.6700 | SHIELD ASSY. BETWEEN MASTER CYLINDER AND EXHAUST PIPES | AR.45 | 1 | LEFT HAND DRIVE ONLY |
| | | | | |
| C.6427 | TWIN SUPPLY TANK (LOCKHEED 7218) | | 1 | |
| 1885 407 2045 1040 4340 4339 FG.105/X | Tank (complete with Outlet Adapters) (6839) Cap, Filler (407) Washer for Filler Cap (29828) Clamp, securing Supply Tank (1040) Bolt, through Clamp (34681) Nut on Bolt (34680) Washer, Spring, under Nut (K.19204) | AR.46 AR.47 AR.48 AR.49 AR.50 AR.51 AR.52 | 1 1 1 1 1 | |
| | HYDRAULIC PIPES AND FITTINGS | | | RIGHT HAND DRIVE ONLY |
| C.7189 | Pipe, from Supply Tank to Low Pressure Hose (T.12/8B) | AR.53 | 2 | |
| C.3730 | Hose, Low Pressure, between Supply Tank and Master Cylinder (16741) | AR.54 | 2 | |
| C.7208 C.7201 | Clip, securing Low Pressure Hoses (K.20202) Pipe, from Low Pressure Hose to front Inlet on Master | AR.55 AR.56 | 4 2 | |
| C.7190 | Cylinder (T.12/6B) Pipe, from Low Pressure Hose to rear Inlet on Master Cylinder (T.857/B) | AR.57 | 1 | |
| C.7191 | Pipe, from Banjo at front of Master Cylinder to Front 3-way Union (T.4/24B) | AR.58 | 1 | |
| C.3922 FS.106/4D C.726 | Union, 3-way, at front of Chassis Frame (7965) Screw, Set, securing 3-way Union Washer, Shakeproof, on Setscrew | AR.59 AR.60 | 1 1 1 | |
| C.3913 C.3914 | Pipe, from Front 3-way Union to R.H. Front Hose (T.4/12B) Pipe, from Front 3-way Union to L.H. Front Hose | AR.61 | 1 | |
| C.3909 | (T.4/35B) Hose, from Supply Pipes to Front Backplates | AR.62 | 2 | |
| C.3925 C.3910 | (KL.48924) Gasket, at connection of Hoses to Brackets (KL.44518) Nut, securing Hoses to Brackets on Chassis Frame | AR.63 AR.64 | 2 2 | |
| C.3911 C.7192 | (23897) Washer, Shakeproof, under Nuts (K.19411) Pipe, from Banjo at top of Master Cylinder to Tube Connector (T.4A/44B) | AR.65 AR.66 | 2 | |

660980 AND SUBS. 669003 AND SUBS. 672049 AND SUBS. 679622 AND SUBS. FOR CHASSIS No. 667001 AND SUBS. 677001 AND SUBS.

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|------------|--|--------------|------------------|--------------------|
| | HYDRAULIC PIPES AND FITTINGS (con | tinued) | RIG | HT HAND DRIVE ONLY |
| C.3923 | Tube Connector at rear of Chassis Frame (5248) | AR.67 | 1 | |
| C.3920 | Pipe, from Tube Connector to Rear Hose (T.4A/40B) | AR.68 | 1 | |
| C.3909 | Hose, from Supply Pipe to 3-way Union on Rear Axle (KL.48924) | AR.69 | 1 | |
| C.3925 | Gasket, at connection of Hose to Bracket (KL.44518) | AR.70 | 1 | |
| C.3910 | Nut, securing Hose to Bracket on Chassis Frame (23897) | AR.71 | 1 | |
| C.3911 | Washer, Shakeproof, under Nuts (K.19411) | AR.72 | 1 | |
| C.3922 | Union, 3-way, on Rear Axle (7965) | AR.73 | 1 | |
| NB.125/10D | Bolt, securing 3-way Union to Rear Axle | | 1 | |
| NN.125/L | Nut on Bolt | | 1 | |
| C.724 | Washer, Shakeproof, under Nut | | 1 | |
| C.3916 | Pipe, from Union on Axle to R.H. Rear Backplate (T.4/24B) | AR.74 | 1 | |
| C.3917 | Pipe, from Union on Axle to L.H. Rear Backplate (T.4/47B) | AR.75 | 1 | |
| C.3529 | Clip, securing Pipes to Chassis Frame | AR.76 | 7 | |

| | HYDRAULIC PIPES AND FITTINGS | | | LEFT HAND DRIVE ONLY |
|----------------|--|-------|---|----------------------|
| C.7189 | Pipe, from Supply Tank to Low Pressure Hose (T.12/8B) | AR.53 | 2 | |
| C.3730 | Hose, Low Pressure, between Supply Tank and Master Cylinder (16741) | AR.54 | 2 | |
| C.7208 | Clip, securing Low Pressure Hoses (K.20202) | AR.55 | 4 | |
| C.7200 | Pipe, from Low Pressure Hose to Master Cylinder (T.12/13B) | AR.77 | 2 | |
| C.7193 | Pipe, from Banjo at front of Master Cylinder to Front 3-way Union (T.4/21B) | AR.78 | 1 | |
| C.3922 | Union, 3-way, at front of Chassis Frame (7965) | AR.59 | 1 | |
| FS.106/4D | Screw, Set, securing 3-way Union | | 1 | |
| C.726 | Washer, Shakeproof, on Setscrew | | 1 | |
| C.7194 | Pipe, from Front 3-way Union to R.H. Front Hose (T.4/35B) | AR.79 | 1 | |
| C.7195 | Pipe, from Front 3-way Union to L.H. Front Hose (T.4/12B) | AR.80 | 1 | |
| C.3909 | Hose, from Supply Pipes to Front Backplates (KL.48924) | AR.62 | 2 | |
| C.3925 | Gasket for Hoses (KL.44518) | AR.63 | 2 | |
| C.3910 | Nut, securing Hoses to Brackets on Chassis Frame (23897) | AR.64 | 2 | |
| C.3911 | Washer, Shakeproof, under Nuts (K.19411) | AR.65 | 2 | |
| C.7198 | Pipe, from Banjo at top of Master Cylinder to Tube Connector (T.4A/47B) | AR.81 | 1 | |
| C.3923 | Tube Connector at rear of Chassis Frame (5248) | AR.67 | 1 | |
| C.7199 | Pipe, from Tube Connector to Rear Hose (T.4A/40B) | AR.82 | 1 | |
| C.3909 | Hose, from Supply Pipe to 3-way Union on Rear Axle (KL.48924) | AR.69 | 1 | |
| C.3925 | Gasket for Hose (KL.44518) | AR.70 | 1 | |
| C.3910 | Nut, securing Hose to Bracket on Chassis Frame (23897) | AR.71 | 1 | |
| C.3911 | Washer, Shakeproof, under Nut (K.19411) | AR.72 | 1 | |
| C.3922 | Union, 3-way, on Rear Axle (7965) | AR.73 | 1 | |
| NB.125/10D | Bolt, securing 3-way Union to Rear Axle | | 1 | |
| NN.125/L | Nut on Bolt | | 1 | |
| C.724 | Washer, Shakeproof, under Nut | | 1 | |
| C.7196 | Pipe, from Union on Axle to R.H. Rear Backplate (T.4/47B) | AR.83 | 1 | |
| C. 7197 | Pipe, from Union on Axle to L.H. Rear Backplate (T.4/24B) | AR.84 | 1 | |
| C.3529 | Clip, securing Pipes to Chassis Frame | AR.76 | 7 | |

BRAKE CONTROLS

FOR CHASSIS No. 660980 AND SUBS. 669003 AND SUBS.

672049 AND SUBS. 679622 AND SUBS.

667001 AND SUBS. 677001 AND SUBS.

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
|----------|--|--------------|------------------|----------|---|
| C.2958 | BLEEDER TUBE AND CONTAINER (LOCK-HEED 3919) | | 1 | | * |
| C.2957 | WRENCH FOR BLEEDER SCREW (LOCK- HEED 13836) | | 1 | | |

FOR HANDBRAKE LEVER, CABLE AND ALL FITTINGS, PLEASE REFER TO PAGES 38 AND 39.

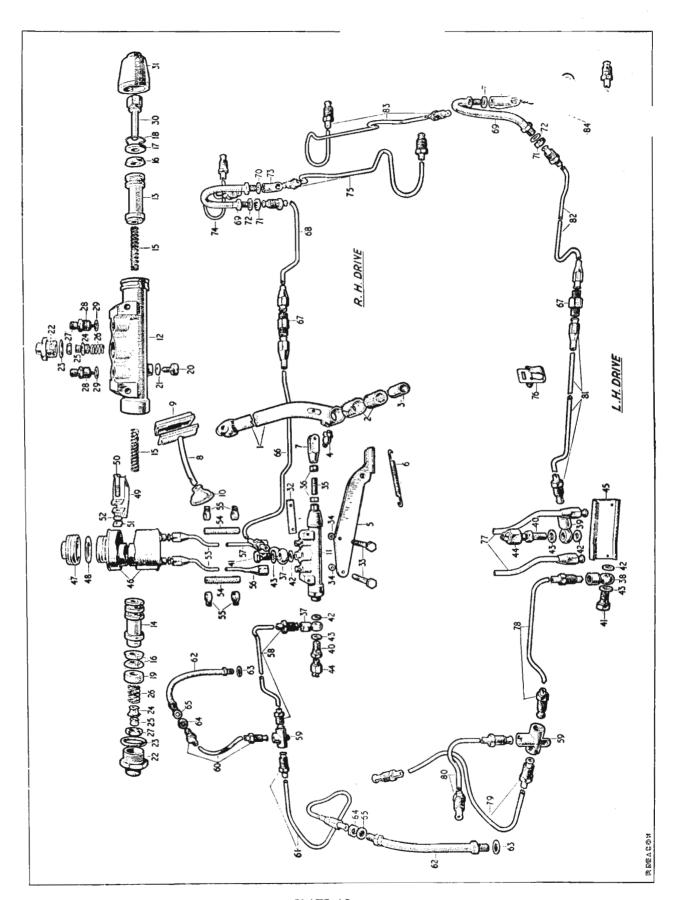


PLATE AR

| Part No. | Description. | Plate No. | No. pe Unit. | |
|-------------------------|---|--------------|-----------------|---|
| C.3387 | CHASSIS FRAME, COMPLETE | T.1 | 1 | Fitted from Chassis No. 660001 to 660058 670001 to 670184 |
| C.3387/1 | CHASSIS FRAME, COMPLETE | | 1 | Fitted to Chassis No. 660059 to 660993 669001 to 669002 670185 to 672481 679001 to 671985 |
| C.6692 | CHASSIS FRAME, COMPLETE | | 1 | Fitted to Chassis No. 660994 and subs. 672482 and subs. |
| C.6762 | CHASSIS FRAME, COMPLETE | | 1 | Fitted to Chassis No. 669003 and subs. 679816 and subs. 677001 and subs. |
| C.3825 | Crossmember, Centre, Assy. | T.2 | 1 | |
| C.3394 C.3430 | Crossmember, Front Crossmember, Rear | T.3 T.4 | 1 | |
| C.3416 | Plate, Shackle, on Rear Crossmember | T.5 | 2 | |
| C.3886 | Bracket for R.H. Steering Lock Stop | T.6 | 1 | |
| C.3887 | Bracket for L.H. Steering Lock Stop | T.7 | 1 | |
| NS.131/12D N.N.131/L | Bolt, Stop, for Steering Lock Nut on Stop Bolts | | 2 4 | |
| C.3431 | Bracket, Mounting, for Radiator | T.8 | 2 | |
| C.3432 | Bracket, Holding down, for Radiator | T.9 | 2 | |
| C.3433 C.5838 | Bracket, Stay, for Radiator Channel for Bonnet Lock Mounting Plate | T.10 | 2 1) | Fitted to Chassis No. |
| C.6791 | Bracket for mounting of Radiator | | 2 | 669001 and subs. 679001 and subs. 667001 and subs. |
| C.3883 C.3884 | Bracket Assembly for Front Suspension, R.H. Bracket Assembly for Front Suspension, L.H. | T.11 T.12 | 1 | |
| C.3396 | Bracket, Engine Mounting, Front R.H. | T.13 | i | |
| C.3397 | Bracket, Engine Mounting, Front L.H. | | 1 | |
| C.3248 C.3399 | Housing for Clutch Shaft Bearing Bracket, Stop, R.H., for Clutch Pedal | T.14 | 2 2 | • |
| NB.125/10D | Bolt, for Clutch Pedal Stop | 1.17 | 2 | |
| N.N.125/L | Nut on Bolts | | 2 | |
| C3627 C3624 | Bracket, L.H., mounting Brake Cylinder Bracket, R.H., mounting Brake Cylinder | T.15 T.16 | 1 } | Fitted from Chassis No. 660001 to 660979 669001 to 669002 670001 to 672048 679001 to 679621 |
| C.6694 C.6695 | Bracket, R.H., mounting Brake Cylinder Bracket, L.H., mounting Brake Cylinder | - | 1 | Fitted to Chassis No. 660980 and subs. 6672049 and subs. 679622 and subs. 677001 and subs. |
| C.3188 | Bracket, R.H., mounting Brake Pedal | | 1 | |
| C.3199 C.3407 | Bracket, L.H., mounting Brake Pedal Bracket, Reaction, for R.H. Torsion Bar | T.17 | 1 | |
| C.3408 | Bracket, Reaction, for L.H. Torsion Bar | T.18 | i | |
| C.3406 | Bracket, mounting Engine at Rear | T.19 | 1 | |
| NB.137/6D NN.137/L | Bolt, securing Engine Mounting to Bracket Nut on Bolts | | 3 3 | |
| C.3402 | Bracket for Handbrake attachment | T.20 | 1 | |
| C.3403 | Tube in Handbrake Attachment Bracket | | 2 | |
| C.3413 C.3414 | Bracket, Outer Front, for R.H. Rear Spring Bracket, Outer Front, for L.H. Rear Spring | | · 1 | |
| C.3415 | Bracket, Inner Front, for Rear Spring | | 2 | |
| C.3419 | Extension Assembly, R.H. Extension Assembly, L.H. | T.21 T.22 | 1 | |
| C.3420 C.3207 | Bracket, Support, for Rear Rebound Buffer | T.23 | 2 | • |
| C.3428 | Bracket for Rebound Strap | T.24 | 4 | |
| C.3640 | Bracket for Front and Rear Brake Hoses | T.25 | 3 2 | |
| C.3855 C.5790 | Bracket for Brake Pipe Junction Bracket Assembly, R.H., for Front Bumper | T.26 T.27 | 1 | |
| C.5791 | Bracket Assembly, L.H., for Front Bumper | T.28 | 1 | |
| C.5779 | Bracket Assembly, No. 1, R.H., for Mounting Body Bracket Assembly No. 1, L.H., for Mounting Body | T.29 | 1 1 | |
| C.5780 C.5781 | Bracket Assembly No. 2, R.H., for Mounting Body | | 1 | |
| C.5782 | Bracket Assembly No. 2, L.H., for Mounting Body | T.30 | 1 | |
| C.3598 1048/A | Socket for Jack Plug for Jack Socket | T.31 T.32 | 2 | |
| C.3055 | Bracket for Anti-Roll Bar | T.33 | 2 | |
| C.3434 | Bracket for Propellor Shaft Tunnel | T.34 | 2 | |
| C.3646 C 3649 | Bracket Assembly fixing Silencer at front end | T.35 | 1 1 | |
| C.3649 C.3758 | Bracket, mounting Petrol Pump Bracket, Scuttle Stiffener | T.36 | 2 | |
| C.3846 | Bracket for Wing Supports | | 2 | |
| C.3489 | Bracket, mounting Damper | T.37 | 1 | |
| C.3866 | Bracket for Front Wing Valance | T.38 | 2 | |

| C.3671 Bolt "U" securing Rear Axle to Spring T.51 4 C.3095 Plate, under Springs, for "U" Bolts T.52 2 C.6676 Bolt "U" securing Rear Axle to Springs T.52 2 C.3094 Plate, under Springs, for "U" Bolts T.52 2 C.3094 Plate, under Springs, for "U" Bolts T.53 3 NN.150/L Nut, Lock, on "U" Bolts T.53 8 NN.150/L Nut, Lock, on "U" Bolts T.53 8 C.3877 Galter, Spring, Front T.55 2 C.3878 Galter, Spring, Front T.55 2 C.3879 REAR AXLE REBOUND STRAP T.57 2 C.3429 REAR AXLE REBOUND STRAP T.57 2 Buffer (Rubber) at bottom of Rebound Straps Not. on Bolts Not. o | Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|-----------------------|---|--------------|------------------|---|
| C.1439 | C.3661 | REAR ROAD SPRING | T.39 | 2 | 660001 to 661039 669001 to 669002 |
| C.1639 Washer (Ferobettos) for Road Springs | C.5721 | REAR ROAD SPRING | | 2 | 661040 and subs. 669003 and subs. 673320 and subs. 680397 and subs. |
| C.611 Washer (Fibre) for Road Springs Bush (Netalastik) in each eye of Spring at C.740 4 Plan, securing Springs at front and rear ends T.41 4 Plan, securing Springs at front and rear ends T.41 4 Plan, securing Springs at front and rear ends T.41 4 Plan, securing Springs at front and rear ends T.41 4 Plan, securing Springs at front and rear ends T.41 4 Plan, securing Springs T.42 2 C.3222 Bush (Netalastik) in Shackie T.42 2 Bush (Netalastik) in Shackie T.44 2 Bush (Netalastik) in Shackie T.44 2 Bush (Netalastik) in Shackie T.44 2 Bush (Netalastik) in Shackie T.46 2 Bush (Netalastik) in Shackie T.48 2 C.3829 Peg, locating Packing Piece T.50 2 C.3829 Peg, locating Packing Piece T.50 2 C.6676 Bolt "U" securing Rear Axle to Springs T.51 4 Plate, under Springs, for "U" Bolts T.52 2 Plate, under Springs, for "U" Bolts T.53 8 NN.150/L Nut, securing Rear Axle to Springs T.54 8 NN.150/L Nut, securing Rear Axle to Springs T.54 8 NN.150/L Nut, securing T.56 2 C.3829 REAR AXLE REBOUND STRAP T.55 2 C.3829 REAR AXLE REBOUND STRAP T.55 2 C.3429 Buffer (Rubber) at bottom of Rebound Straps Bolt, securing Re | | | | | 667001 and subs. 677001 and subs. |
| NB.143/28F | C.611 | | | 4 | |
| C.3507 | | | | | |
| C.3320/4 Nut, Self-Locking, on Spring Pins T.43 4 Washer on Spring Pins T.44 4 Washer on Spring Pins T.45 2 C.219 Shackle, anchoring rear end of Spring T.45 2 T.46 2 C.3627 C.3628 C.3621 C.3628 C.3621 C.3628 C.3621 C.3628 C.3621 C.3629 C.3624 C.3621 C.3627 C.3629 Peg, locating Packing Piece T.50 2 C.3627 C.3627 C.3628 Peg, locating Packing Piece T.50 2 C.3627 C.3627 C.3628 | | Piece, Distance, between front eye of Springs and | | | |
| C-640 | | Nut, Self-Locking, on Spring Pins | | | |
| C.1219 | | | | | |
| NB.143/233 | | | | | |
| C.38429 Piece, Packing, for Spring Seat T.49 2 REQUIRED ONLY WHEN REAR AXILE CASEA, C.3846 or C.3671 Bolt "U" securing Rear Axle to Spring T.50 2 REQUIRED ONLY WHEN E.N.V. REAR AXILE IS FITTED REQUIRED ONLY WHEN E.N.V. REAR AXILE IS FITTED REQUIRED ONLY WHEN E.N.V. REAR AXILE IS FITTED REQUIRED ONLY WHEN SALIS REQUIRED ONLY WHEN SAL | | | | | |
| C.3843 | | | | | |
| C.3071 | | | | 2 } | AXLE C.3452, C.3821, C.4460, C.4461 or |
| REQUIRED ONLY WHEN SALIS SURY REAR AXLE IS FITTED | C.3671 | Bolt "U" securing Rear Axle to Spring | T.51 | . } | REQUIRED ONLY WHEN E.N.V. |
| NN.150/L Nut, securing 1-U-T Bolts T.53 8 NN.250/L Nut, Lock, on "U" Bolts T.54 8 NN.250/L Nut, Lock, on "U" Bolts T.54 8 NN.250/L Nut, Lock, on "U" Bolts T.55 2 T.56 2 Nut T.57 2 Nut T.57 T.57 Nut T.57 T. | C.6676 | Bolt "U" securing Rear Axle to Springs | T.52 | 41 | REQUIRED ONLY WHEN SALIS |
| C.3429 REAR AXLE REBOUND STRAP T.57 2 801 801 801 801 801 801 801 | NN.150/L | Nut, securing "U" Bolts | | 8 | JOHN MEAN AREE IS ITTED |
| C.3429 REAR AXLE REBOUND STRAP 632 NB.137/7D C.3116/3 Polit, securing Rebound Straps Nut on Bolts Washer, Spring, under Nuts C.3035 Absorber, Shock, Front (Newton) C.7183 Absorber, Shock, Front (Newton) C.7183 Buffer (Rubber) at top of Shock Absorber C.7183 Bush, Conical (Rubber) in eye of Shock Absorber C.3753 Absorber, Shock, L.H. Rear (Girling) C.3754 Absorber, Shock, R.H. Rear (Girling) C.7214 Absorber, Shock, R.H. Rear (Girling) C.7215 Absorber, Shock, Rear R.H. C.7215 Absorber, Shock, Rear L.H. C.7216 Link-and-Pin Assy., for Rear Shock Absorbers (SA.250/17) Bush for Link-and-Pin Assy., (9007/16) L.104/10U Pin, Split, securing Newton Shock Absorber to Lower Rear Wishbone Pin Washer, Plain, on Bolts Nut on Bolts T.59 2 Fitted from Chassis No. 660001 to 660901 to 669002 670001 to 672049 679001 to 679621 Fitted to Chassis No. 660980 and subs. 679622 and subs. 667001 and subs. 677001 and subs. 677001 and subs. 677001 and subs. 667001 and subs. 677280 and subs. 667001 and subs. 677280 and | | | | | |
| Buffer (Rubber) at bottom of Rebound Straps T.58 2 | | | | | |
| Buffer (Rubber) at bottom of Rebound Straps T.58 2 | | | | - | |
| NB.137/7D | C.3429 | REAR AXLE REBOUND STRAP | T.57 | 2 | |
| C.3035 Absorber, Shock, Front (Newton) C.7183 Absorber, Shock, Front (Newton) C.7183 Absorber, Shock, Front (Newton) C.7184 Absorber, Shock, Front (Newton) C.3053 Buffer (Rubber) at top of Shock Absorber C.3273 Bush, Conical (Rubber) in eye of Shock Absorber C.3753 Absorber, Shock, L.H. Rear (Girling) C.3752 Absorber, Shock, R.H. Rear (Girling) C.7214 Absorber, Shock, Rear R.H. C.7215 Absorber, Shock, Rear L.H. C.7215 Absorber, Shock, Rear Shock Absorber (SA.250/17) Bush for Link-and-Pin Assy., for Rear Shock Absorber to Lower Rear Wishbone Pin C.7017 Washer at each side of Shock Absorber eye NB.156/30D Bolt, securing Girling Shock Absorbers to Frame NN.156/L Nut on Bolts D. Fitted from Chassis No. 669003 and subs. 67001 and subs. 67701 and subs. 67701 and subs. 67701 and subs. 677001 to 669002 67001 to 66903 and subs. 669003 and subs. 667001 and subs. 677280 and subs. 67729 and subs. 677001 and subs. 67 | NB.137/7D C.3116/3 | Bolt, securing Rebound Straps Nut on Bolts | T.58 | 4 | |
| C.7183 Absorber, Shock, Front (Newton) C.7183 Absorber, Shock, Front (Newton) C.3053 Buffer (Rubber) at top of Shock Absorber C.3273 Absorber, Shock, L.H. Rear (Girling) C.3752 Absorber, Shock, R.H. Rear (Girling) C.7214 Absorber, Shock, Rear R.H. C.7215 Absorber, Shock, Rear L.H. C.7215 Absorber, Shock, Rear L.H. C.7215 Absorber, Shock, Rear Shock Absorber (SA,250/17) Bush for Link-and-Pin Assy., for Rear Shock Absorber (SA,250/17) Bush for Link-and-Pin Assy. (9007/16) L.104/10U Pin, Split, securing Newton Shock Absorber to Lower Rear Wishbone Pin Washer at each side of Shock Absorbers to Bolt, securing Girling Shock Absorbers to Frame FW.110/T Washer, Plain, on Bolts Nut on Bolts Absorber, Plain, on Bolts Absorber, Shock, Front (Newton) Absorber, Shock, Absorber to Lower Rear Wishbone Pin Washer, Plain, on Bolts Absorber, Shock, Plain and subs. Absorber, Shock, Plain and subs. Absorber, Shock, Rear R.H. Absorber, Shock, Absorber T.60 Absorber T.60 Fitted to Chassis No. Fitted from Chassis No. Fitted from Chassis No. Fitted from Chassis No. 660001 to 660985 669001 to 669022 Fitted from Chassis No. 660001 to 67001 and subs. 67001 to 670021 and subs. 67001 to 672279 679001 to | | SHOCK ABSORBERS | | | |
| C.7183 Absorber, Shock, Front (Newton) Buffer (Rubber) at top of Shock Absorber C.3273 Bush, Conical (Rubber) in eye of Shock Absorber C.3753 Absorber, Shock, L.H. Rear (Girling) C.3752 Absorber, Shock, R.H. Rear (Girling) C.7214 Absorber, Shock, Rear R.H. C.7215 Absorber, Shock, Rear L.H. C.7216 Absorber, Shock, Rear Shock Absorber C.7217 Bush for Link-and-Pin Assy., for Rear Shock Absorbers (SA.250/17) Bush for Link-and-Pin Assy. (9007/16) L.104/10U Pin, Split, securing Newton Shock Absorber to Lower Rear Wishbone Pin Washer at each side of Shock Absorbers to Frame FW.110/T Washer, Plain, on Bolts Nut on Bolts Pitted to Chassis No. 667001 and subs. 677001 to 669003 and subs. 667001 to 669002 670001 to 669003 670001 to 669002 670001 to 672279 670001 to 679728 Fitted from Chassis No. 660001 to 669003 670001 to 669002 670001 to 679729 670001 to 669003 670001 to 669001 670001 to 679279 670001 to 679729 670001 to 669001 670001 to 669002 670001 to 679729 670001 to 679729 670001 to 669001 670001 to 679279 670001 to 679279 670001 to 679279 670001 to 679279 670001 to 669002 670001 to 670279 670001 to 679279 670001 to 67928 670001 to 679279 670001 | C.3035 | Absorber, Shock, Front (Newton) | T.59 | 2 | 660001 to 660979 669001 to 669002 |
| C.3053 Buffer (Rubber) at top of Shock Absorber T.60 4 Bush, Conical (Rubber) in eye of Shock Absorber T.61 4 C.3753 Absorber, Shock, L.H. Rear (Girling) T.62 1 Fitted from Chassis No. C.3752 Absorber, Shock, R.H. Rear (Girling) T.63 1 660001 to 660985 669001 to 669002 C.7214 Absorber, Shock, Rear R.H. C.7215 Absorber, Shock, Rear L.H. C.7215 Link-and-Pin Assy., for Rear Shock Absorbers (SA.250/17) Bush for Link-and-Pin Assy. (9007/16) L.104/10U Pin, Split, securing Newton Shock Absorber to Lower Rear Wishbone Pin FW.110/T Washer at each side of Shock Absorbers to Frame FW.110/T Washer, Plain, on Bolts Nut on Bolts 660001 to 660985 669001 to 669002 670001 to 679229 679001 to 679229 670001 to 679229 and subs. 667001 and subs. 677001 and subs. | C 7400 | About a State Fores (Norman) | | • | |
| C.3053 Buffer (Rubber) at top of Shock Absorber T.60 4 C.3273 Bush, Conical (Rubber) in eye of Shock Absorber T.61 4 Absorber, Shock, L.H. Rear (Girling) T.62 1 Fitted from Chassis No. C.3752 Absorber, Shock, R.H. Rear (Girling) T.63 1 Fitted from Chassis No. 660001 to 660985 669001 to 669002 670001 to 672279 679001 to 679728 C.7214 Absorber, Shock, Rear R.H. C.7215 Absorber, Shock, Rear L.H. C.7215 Absorber, Shock, Rear L.H. C.7216 Link-and-Pin Assy., for Rear Shock Absorbers (SA.250/17) Bush for Link-and-Pin Assy. (9007/16) L.104/10U Pin, Split, securing Newton Shock Absorber to Lower Rear Wishbone Pin Washer at each side of Shock Absorber eye NB.156/30D Bolt, securing Girling Shock Absorbers to Frame NN.156/L Nut on Bolts Nut on Bolts D. Fitted from Chassis No. 660903 670001 to 672279 679001 to 679728 Fitted to Chassis No. 660908 669001 to 660902 670001 to 672279 679001 to 679728 Fitted to Chassis No. 660908 669001 to 669902 670001 to 672279 679001 to 679728 Fitted from Chassis No. 660908 669001 to 669902 670001 to 672279 679001 to 679728 Fitted from Chassis No. 660908 669001 to 660902 670001 to 672279 679001 to 679728 Fitted from Chassis No. 660908 679001 to 669902 670001 to 672279 679001 to 669902 670001 to 660901 670001 to 660902 670001 to 660901 670001 to 672279 670001 to 660901 670001 to 672279 670001 to 660901 670001 to 672279 670001 to 660901 670001 to 672279 670001 to 660901 670001 to 660901 670001 to 672279 6 | C./183 | Absorber, Shock, Front (Newton) | | 2 | 660980 and subs. 669003 and subs. 672049 and subs. 679622 and subs. |
| C.3273 C.3753 C.3752 Absorber, Shock, L.H. Rear (Girling) C.3752 Absorber, Shock, R.H. Rear (Girling) C.3752 C.7214 C.7215 C.7215 Absorber, Shock, Rear R.H. C.7215 Absorber, Shock, Rear L.H. C.7217 Bush for Link-and-Pin Assy. (9007/16) C.3752 C.7214 C.7215 Absorber, Shock, Rear Shock Absorbers (SA.250/17) Bush for Link-and-Pin Assy. (9007/16) C.7217 Bush for Link-and-Pin Assy. (9007/16) C.7218 C.7218 C.7219 C.7219 C.7219 C.7219 C.7210 C.7210 C.7210 C.72110 C.7211 | C.3053 | Buffer (Rubber) at top of Shock Absorber | T.60 | 4 | |
| C.3752 Absorber, Shock, R.H. Rear (Girling) C.7214 Absorber, Shock, Rear R.H. C.7215 Absorber, Shock, Rear L.H. Absorber, Shock, Rear L.H. C.7216 Absorber, Shock, Rear L.H. Absorber, Shock, Rear L.H. C.7217 Absorber, Shock, Rear L.H. C.7218 Absorber, Shock, Rear L.H. Absorber, Shock, Rear L.H. C.7219 Absorber, Shock, Rear L.H. C.7210 Absorber, Shock, Rear R.H. Absorber, Shock, Rear R.H. C.7211 Fitted to Chassis No. 660903 and subs. 679729 and subs. | | | | | |
| C.7214 Absorber, Shock, Rear R.H. C.7215 Absorber, Shock, Rear L.H. 677 Link-and-Pin Assy., for Rear Shock Absorbers (SA.250/17) Bush for Link-and-Pin Assy. (9007/16) L.104/10U Pin, Split, securing Newton Shock Absorber to Lower Rear Wishbone Pin Washer at each side of Shock Absorber eye NB.156/30D Bolt, securing Girling Shock Absorbers to Frame Washer, Plain, on Bolts NN.156/L Nut on Bolts Absorber, Shock, Rear R.H. 1 Fitted to Chassis No. 669003 and subs. 6772280 and subs. 677001 and subs | | | | . > | 660001 to 660985 669001 to 669002 |
| 677 Link-and-Pin Assy., for Rear Shock Absorbers 2 (SA.250/17) Bush for Link-and-Pin Assy. (9007/16) L.104/10U Pin, Split, securing Newton Shock Absorber to Lower Rear Wishbone Pin FW.110/T Washer at each side of Shock Absorber eye NB.156/30D Bolt, securing Girling Shock Absorbers to Frame FW.109/T Washer, Plain, on Bolts NN.156/L Nut on Bolts 4 667001 and subs. 677001 and | | | | | Fitted to Chassis No. 660986 and subs. 669003 and subs. |
| (SA.250/17) Bush for Link-and-Pin Assy. (9007/16) L.104/10U Pin, Split, securing Newton Shock Absorber to Lower Rear Wishbone Pin Washer at each side of Shock Absorber eye NB.156/30D Bolt, securing Girling Shock Absorbers to Frame Washer, Plain, on Bolts NN.156/L Nut on Bolts 4 | 677 | Link-and-Pin Assy., for Rear Shock Absorbers | | 2 | |
| Lower Rear Wishbone Pin Washer at each side of Shock Absorber eye 4 NB.156/30D Bolt, securing Girling Shock Absorbers to Frame 4 FW.109/T Washer, Plain, on Bolts 4 NN.156/L Nut on Bolts 4 | | (SA.250/17) | | | |
| FW.110/T Washer at each side of Shock Absorber eye 4 NB.156/30D Bolt, securing Girling Shock Absorbers to Frame 4 FW.109/T Washer, Plain, on Bolts 4 NN.156/L Nut on Bolts 4 | L.104/10U | | | 2 | |
| NB.156/30D Bolt, securing Girling Shock Absorbers to Frame 4 FW.109/T Washer, Plain, on Bolts 4 NN.156/L Nut on Bolts 4 | FW 110/T | | | 4 | |
| FW.109/T Washer, Plain, on Bolts 4 NN.156/L Nut on Bolts 4 | | | | | |
| | FW.109/T | Washer, Plain, on Bolts | | 4 | |
| | NN.156/L C.729 | Nut on Bolts Washer, Shakeproof, under Nuts | | 4 | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---------------------------------------|--|--------------|------------------|---|
| C.3036 | REBOUND BUFFER, FRONT | T.64 | 2 | |
| C.3208 | REBOUND BUFFER, REAR | T.65 | 2 | |
| NB.125/5D | Bolt, securing Front Buffer to underside of Front | | 4 | |
| NN.125/L | Suspension Bracket Nut on Bolts | | 4 | |
| FG.104/X NB.131/5D | Washer, Spring, under Nuts Bolt, securing Rear Rebound Buffer to Bracket on | | 4 | 1 |
| | Frame Extension | | • | |
| NN.131/L FG.105/X | Nut on Bolts Washer, Spring, under Nuts | | 4 | |
| | EXHAUST SYSTEM | | | |
| C.3523 | Pipe, Exhaust (Twin) from Manifolds to Silencer | T.66 | 1 | |
| C:3523/2 C:495 | Pipe (Flexible) for Twin Exhaust Pipe Gasket between Exhaust Pipe and Manifold Flanges | T.67 | 1 2 | |
| C.3285 | Clip, securing Twin Exhaust Pipe to Silencer | T.68 | 1 | |
| NB.131/23D FW.105/T | Bolt through Clip Washer on Bolt | T.69 T.70 | . 1 2 | |
| NN.131/L | Nut on Bolt | T.71 | 1 | |
| C.3524 | Silencer | T.72 | 1 | Fitted to Chassis No. 660001 and subs. 670001 and subs. |
| C.3648 | Bracket, mounting Silencer at rear | T.73 | 1 | |
| FS.104/4D C.724 | Screw, Set, securing Mounting Bracket to Frame Washer, Shakeproof, on Setscrews | | 2 2 | |
| C.3659 | Pipe, Tail (complete with Mounting Brackets) | T.74 | ī | Fitted from Chassis No. 660001 to 660058 670001 to 670184 |
| C.4149 | Pipe, Tail (complete with Mounting Brackets) | | 1 | Fitted from Chassis No. 660059 to 660983 670185 to 672143 |
| C.6672 | Pipe, Tail (complete with Mounting Brackets) | | 1 | Fitted to Chassis No. 660984 and subs. 672144 and subs. |
| C.5766 C.5767 | Silencer Pipe, Tail (complete with Mounting Brackets) | | 1) | Fitted to Chassis No. 669001 and subs. 667001 and subs. 679001 and subs. 677001 and subs. |
| C.3690 | Mounting (Rubber) for suspension of Exhaust System | T.75 | 3 | SUPERSEDED BY C.5062 |
| FN.106/L | Nut on Mountings | | 6 | USED ONLY WITH C.3690 |
| C.726 C.5062 | Washer, Shakeproof, under Nuts Mounting (Rubber) for suspension of Exhaust | | 6 3 | SUPERSEDES C.3690 |
| NN.137/L | System Nut on Mountings | | 6 | USED ONLY WITH C.5062 |
| C.4155 | LINK BRACKET FOR TAIL PIPE SUSPENSION | | 1 | Fitted from Chassis No. 660059 to 660983 670185 to 672143 |
| C.5838 | LINK BRACKET FOR TAIL PIPE SUSPENSION | | 1 | Fitted to Chassis No. 660984 and subs. 672144 and subs. 667001 and subs. 677001 and subs. |
| NS.137/5D NN.137/L C.726 | Screw, Set, securing Link Bracket to Chassis Frame Nut on Setscrew Washer, Shakeproof, under Nut | | 1 1 1 | cover and subs. |
| . • • | EXHAUST SYSTEM (TWIN PIPE RACING TYPE) | | | FITTED TO SPECIAL EQUIPMENT MODELS (i.e., Cars bearing prefix "S" to Chassis number) |
| C.5728 C.5729 C.5198/1 C.495 | Down-Pipe, from Front Manifold to Silencer Down-Pipe, from Rear Manifold to Silencer Pipe (Flexible) for Down-Pipes (2\frac{1}{3.7}\tilde{\pi} i/d \times \frac{1}{3}\tilde{\pi} long) Gasket, between flanges of Down-Pipes and Manifolds | | 1 1 2 2 | · |

| Part No. | Description. | Plate No. | No. per Unit. | r Remarks. |
|----------------------|--|--------------|------------------|--|
| | EXHAUST SYSTEM (continued.) | | | |
| | (TWIN PIPE RACING TYPE) | | | • |
| C.5702 NB.137/6D | Bracket, supporting Down-Pipes Bolt, securing Bracket | | 1 | |
| NN.137/L FG.106/X | Nut on Bolt Washer, Spring, under Nut | | 1 | |
| C.5062 NN.137/L | Mounting (Rubber) for Down-Pipes Nut on Mounting | | 2 2 | |
| FG.106/X | Washer, Spring, under Nuts | | 2 2 | |
| FW.106/T C.5743 | Washer, Plain, for Mounting Silencer Assembly, complete with Tail Pipes | | 1 | |
| C.3584 NB.137/10D | Gasket, between flanges of Silencer and Down-Pipes Bolt, securing Silencer to Down-Pipes | | 2 8 | |
| NN.137/L FG.106/X | Nut on Bolts Washer, Spring, under Nuts | | 8 8 | |
| C.3648 FS.104/4D | Bracket, supporting rear end of Silencer Screw, Set, securing Bracket | | 1 2 | |
| C.724 | Washer, Shakeproof, on Setscrews | | 2 | |
| C.5062 NN.137/L | Mounting (Rubber) at rear end of Silencer Nut, on Mounting | | 2 | |
| FG.106/X FW.106/T | Washer, Spring, under Nuts Washer, Plain, for Mounting | | 2 1 | · · · · · · · · · · · · · · · · · · · |
| C.5707 NB.125/7D | Bracket for Tail Pipe suspension Bolt, securing Bracket to Body | | 1 2 | |
| NN.125/L FG.104/X | Nut on Bolts Washer, Spring, under Nuts | | 2 2 | |
| BD.4987 | Pad (Rubber) for Tail Pipe mounting | | 2 | |
| C.3052 NB.137/10D | Washer (Special) for top Pad Bolt, securing Tail Pipes to Bracket | | 1 | |
| NN.137/L FG.106/X | Nut on Bolt Washer, Spring, under Nut | | 1 | |
| | | | | |
| C.5743 | SILENCER AND TAIL PIPES ASSEMBLY (TWIN PIPE RACING TYPE) | | 1 | |
| C.5197 C.5200 | Silencer, Exhaust Tail-Pipe | | 1 2 | |
| C.3618 | PETROL TANK ASSEMBLY | T.76 | 1 | Fitted from Chassis No. |
| C.5010 | PETROL TANK ASSEMBLI | 1.70 | • | 660001 to 660058 670001 to 670184 |
| C.3618/1 | PETROL TANK ASSEMBLY | | 1 | Fitted to Chassis No. 660059 and subs. 669001 and subs. 679010 and subs. |
| C.2779 | Element Unit for Petrol Tank | T.77 T.78 | 1 | |
| C.937 AS.303/4H | Gasket for Element Unit Screw, securing Element Unit | 1.70 | 6 | |
| C.2296/6 C.990 | Washer (Copper) on Screws Filter Assembly | T.79 | 6 1 | |
| C.1617 C.3668 | Gasket for Filter Assembly Filler Spout | T.80 T.81 | 1 | · · |
| C.3735 | Pipe, Air Vent | T.82 | 1 | Fitted from Chassis No. 660001 to 660058 670001 to 670184 |
| C.6765 | PETROL TANK ASSEMBLY | | 1) | 070001 00 0701011 |
| C.990 | Filter Assembly | | 1 | |
| C.1617 C.6804 | Gasket for Filter Filler Spout | | 1 | FITTED TO DROP HEAD COUPE MODELS ONLY |
| C.7894 C.2779 | Pipe, Air Vent Element Unit for Petrol Tank | | 1 | |
| C.937 | Gasket for Element Unit | | i | • |
| | NOTE.—Petrol Tanks C.3618, C.3618/I or C.6765 are not required when Auxiliary Tank is fitted (see page 95A). | | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|---|----------------------|--|---|
| C.4198 C.4158 C.4159 NN.131/L NN.231/L C.4161 C.4162 C.4163 C.4164 C.4199 | Tray Assy., holding Petrol Tank Rod, Tie (Long) securing Petrol Tank at rear Rod, Tie (Short) securing Petrol Tank at front Nut on Tie Rods Nut, Lock, on Tie Rods Felt (32"×4") for Petrol Tank Mounting Felt (21"×1½") for Petrol Tank Mounting Felt (18"×1½") for Petrol Tank Mounting Felt (6"×2½") for Petrol Tank Mounting Felt (6"×2½") for Petrol Tank Mounting | | 1 2 2 8 6 1 1 2 5 2 | Fitted to Chassis No. 660059 and subs. 670185 and subs. 669001 and subs. 679001 and subs. |
| BD.4368 | PETROL FILLER HOSE (FROM FILLER BOX TO TANK) | | 1 | |
| | PETROL PIPES | | | |
| | | | | · · |
| C.3692 C.3693 C.3694 | Pipe Assembly, Rear Pipe Assembly, Centre Pipe Assembly, Front | T.83 T.84 T.85 | 1 1 1 | |
| C.3727 C.1040/7 AS.402/4H AN.102/L C.723 | Clip, securing Petrol Pipes to Chassis Frame Clip, securing Front Petrol Pipe to Dash Screw, Set, securing Clip to Dash Nut on Setscrew Washer, Shakeproof, under Nut | T.86 | 5 1 1 1 | |
| C.3463 | RADIATOR BLOCK ASSEMBLY | T.87 | 1 | Fitted from Chassis No. 660001 to 660028 670001 to 670070 |
| C.3463/1 | RADIATOR BLOCK ASSEMBLY | | 1 | also 670075 Fitted to Chassis No. 660029 to 660214 670071 to 670074 |
| C.3463/2 | RADIATOR BLOCK ASSEMBLY | | 1 | 670076 to 670682 Fitted to Chassis No. 660215 and subs. 670683 and subs. 679001 and subs. |
| C.3455 | Cap, Filler | T.88 | 1 | 667001 and subs. 677001 and subs. |
| C.3521 | Washer for Filler Cap | T.89 | | |
| C.980 C.981 | Tap, Drain Washer (Fibre) on Drain Tap | T.90 T.91 | 1 | |
| C.3718 | Packing (Rubber) between bottom of Radiator and Chassis Frame | T.92 | 4 | |
| C.3464 | TIE ROD, HOLDING DOWN RADIATOR | T.93 | 2 | Fitted to Chassis No. 660001 and subs. 677001 and subs. 670001 and subs. 679001 and subs. |
| C.6793 | TIE ROD, HOLDING DOWN RADIATOR | | 2 | Fitted to Chassis No. 669001 and subs. 667001 and subs. |
| NN.131/L C.725 L.103/7U | Nut, securing Tie Rods to Brackets on Radiator Washer, Shakeproof, under Nuts Pin, Split, securing Tie Rods to Brackets on Chassis Frame | T.94 T.95 T.96 | 2 | SOFOET and Subs. GOFOET and Subs. |
| C.3465 | TIE ROD, FROM RADIATOR TO BRACKETS ON CHASSIS SIDE-MEMBERS | Т.97 | 2 | |
| 552 | Eye-End for Tie Rods | T.98 | 2 | |
| | • | | _ | |

| Part No. | Description. | Plate No. | No. per Unit. | r Remarks. |
|--|---|----------------------------------|------------------|--|
| NB.131/7D NN.131/L | Bolt, through Eye-End, securing Tie Rods to Radiator Nut on Bolts | T.99 T.100 | 2 2 | |
| C.725 NN.137/L | Washer, Shakeproof, under Nuts Nut, securing Tie Rods to Brackets on Chassis Side Members | T.101 T.102 | 2 4 | |
| C.726 C.725 | Washer, Shakeproof, under bottom Nuts Washer, Shakeproof, under top Nuts | T.103 T.104 | 2 2 | |
| C.3674 | TOP WATER HOSE | T.105 | 1 | Fitted from Chassis No. 660001 to 660227 670001 to 670774 |
| C.3675 | BOTTOM WATER HOSE | T.106 | 5 1 | Fitted from Chassis No. 660001 to 660214 670001 to 670682 |
| C.6809 | TOP WATER HOSE | | 1 | Fitted to Chassis No. 660228 and subs. 669001 and subs. 667001 and subs. 677001 and subs. |
| C,4183 | BOTTOM WATER HOSE | | 1 | Fitted from Chassis No. 660215 and subs. 669001 and subs. 667001 and subs. 677001 and subs. |
| C.3676 | BY-PASS WATER HOSE | T.107 | 1 | |
| C.2905/2 C.2905/3 C.2905/4 C.2905/5 | Clip, securing By-Pass Hose to Water Pump Clip, securing By-Pass Hose to Thermostat Housing Clip, securing Top Water Hose Clip, securing Bottom Water Hose | T.108 T.109 T.110 T.111 | 1 1 2 2 | |
| C.3731 | THERMOSTAT (SMITH X.43655) | T.112 | 1 | |
| C.3732 | HOUSING FOR THERMOSTAT | T.113 | 1 | |
| C.3344 NN.131/L C.725 | Gasket, between Thermostat Housing and Radiator Nut, securing Thermostat Housing to Radiator Washer, Shakeproof, under Nuts | T.114 T.115 T.116 | 1 2 2 | |
| C.3961 | SPARE WHEEL TRAY | T.117 | 1] | Freed (co.) Close M |
| C.3860 C.3863 C.3864 | Strap, retaining Spare Wheel in Tray Hook, engaging top of Strap Nut on Hook | T.118 T.119 T.120 | 1 1 1 | Fitted from Chassis No. 660001 to 660058 670001 to 670184 |
| BD.4172 | SPARE WHEEL TRAY | | 1 | Final or Class N |
| BD.4518 BD.4520 BD.4515 C.3864 | Bracket, on Cross Rail, for Spare Wheel Clamp Hinge-Pin Assy., for Spare Wheel Clamp Clamp Assy., holding Spare Wheel Nut for Clamp | | 1 1 1 1 | Fitted to Chassis No. 660059 and subs. 670185 and subs. 667001 and subs. 667001 and subs. 677001 and subs. |

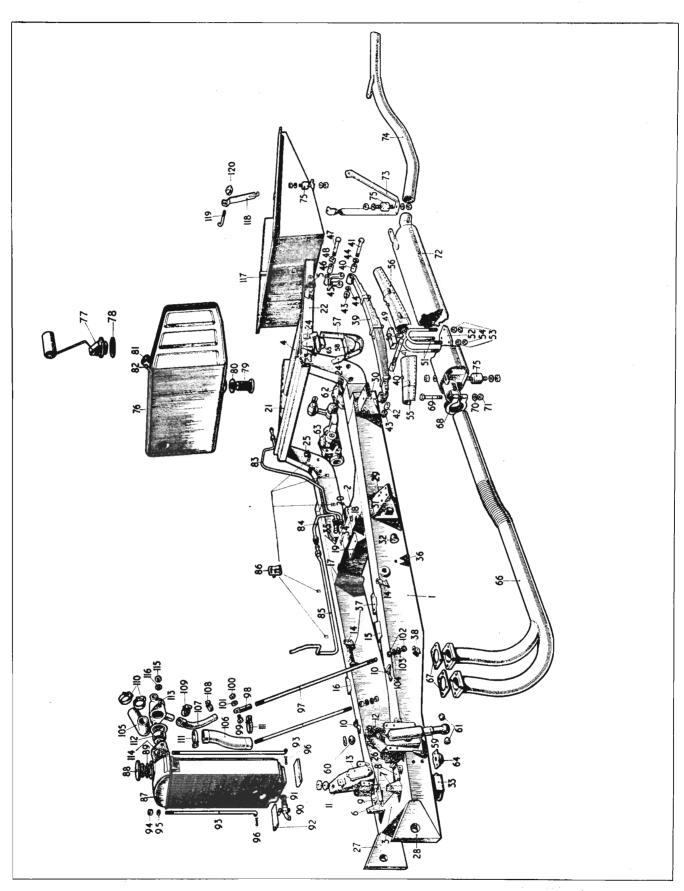


PLATE T.

| Part No. | Description. | Plate No. | No. per Unit. Remarks. |
|---|---|--------------|---|
| BD.3205 BD.3206 | BODY SHELL (COMPLETE WITH DOORS AND BOOT LID BUT LESS TRIMMINGS) (R.H. DRIVE ONLY) BODY SHELL (COMPLETE WITH DOORS AND BOOT LID BUT LESS TRIMMINGS) (L.H. DRIVE ONLY) | | Fitted from Chassis No. 660001 to 660058 670001 to 670184 |
| BD.2810 BD.2811 BD.3144 BD.3197 BD.2992 BD.3196 C.3301 C.3881 BD.3212 BD.3213 BD.2787 BD.2788 BD.2819 BD.2820 FS.504/6H BD.1494/7 FN.104/L C.724 M.108/6R M.108/12R BD.3216 BD.3217 BD.3218 BD.3218 BD.3218 BD.3218 BD.3218 | Sill Assembly, L.H. Sill Assembly, R.H. Bulkhead Assembly Bulkhead Assembly Dash Assembly Dash Assembly Bracket, supporting Steering Column Bracket for Bonnet Lock Control Wheel-Arch Assembly, L.H. Wheel-Arch Assembly, L.H. Pillar, Rear Standing, L.H. Pillar, Rear Standing, R.H. Bracket Assy., R.H., for Rear Standing Pillar Bracket Assy., R.H., for Rear Standing Pillar Screw, Set, securing Brackets Screw, Set, securing Brackets Nut on Setscrews Washer, Shakeproof, under Nuts Screw, Wood, securing Brackets Screw, Wood, securing Brackets Screw, Wood, securing Brackets Screw, Wood, securing Brackets Panel, Tonneau, Assembly Wing, Rear, L.H. Wing, Rear, R.H. Front End Assembly | | RIGHT HAND DRIVE ONLY LEFT HAND DRIVE ONLY RIGHT HAND DRIVE ONLY LEFT HAND DRIVE ONLY 1 1 1 1 1 1 1 1 6 8 14 14 14 6 4 1 |
| | SCUTTLE STIFFENING | | |
| C.3786 NS.137/5F C.741 NB.237/16F C.3320/3 FW.106/T C.3790 C.3791 C.3792 NN.143/L NB.131/6F NN.131/L C.740 NS.237/6F FW.106/T | Strut, Dash Stiffener Screw, Set, securing Strut to Frame Washer, Shakeproof, on Setscrews Bolt, securing Strut to Dash Nut, Philidas, on Bolts Washer, Plain, under Nuts Rod, Tie Insert for Tie Rods Eyebolt for Tie Rods Nut, securing Eyebolts Bolt, securing Eyebolts to Dash Nut, on Bolts Washer, Shakeproof, under Nuts Screw, Set, securing Dash to Frame Washer, Plain, on Setscrews | | 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 |
| | BODY MOUNTING | | |
| BD.3743 BD.3788 BD.3143 BD.3770 | Felt for Cross Member Felt (Black) (3"×45") Felt (Black) (1"×18") Felt (Rubberised) top L.H. of Petrol Tank (18½"× 15%") Felt (Rubberised) top R.H. of Petrol Tank (18½"× | | 2 2 2 1 |
| BD.3692/1 BD.3692/2 BD.3799/1 BD.3799/2 BD.3744 BD.3745 BD.3745 | Felt (Rubberised) top R.H. of Petrol Tank (18½" × 16") Shim for Body Mounting Shim for Body Mounting Shim for Body Mounting Shim for Body Mounting Pad (Rubberised Felt) Strip (Rubberised Felt) (1½" × 10") Strip (Rubberised Felt) (1½" × 14") | | As req'd. As req'd. As req'd. As req'd. 4 2 |

| | | | | 070001 10 070101 |
|---|--|--------------|----------------------------|--|
| Part No. | Description. | Plate No. | No. pe Unit. | r Remarks. |
| | BODY MOUNTING (continued) | | * | |
| BD.3143 BD.3143 BD.3143 FB.105/23D FB.105/26D BD.542/2 | Felt (Black) (1"×12") Felt (Black) (1"×14") Felt (Black) (1"×56") Bolt, mounting Body at rear Bolt, mounting Body at rear Washer on Bolts | | 2 2 1 2 2 4 | |
| FW.105/T FN.105/L C.725 BD.3691 | Washer on Bolts Nut on Bolts Washer, Shakeproof, under Nuts Bolt, Coach, Assembly, for Body Mounting | | 4 4 8 | |
| FW.105/T FN.105/L FG.105/X BD.3313 BD.3754 FS.504/4H | Washer on Coach Bolts Nut on Coach Bolts Washer, Spring, under Nuts Packing for Body Mounting Packing for Body Mounting Screw, Set, securing Spare Wheel Tray to Body | | 8 8 2 2 5 | |
| FN.104/L C.724 | Angles Nut on Setscrews Washer, Shakeproof, under Nuts | | 5 5 | |
| BD.3289 | FACIA BOARD ASSEMBLY, L.H. | | 1} | RIGHT HAND DRIVE MODELS ONLY |
| BD.3290 | FACIA BOARD ASSEMBLY, R.H. | | 1 J | |
| BD.3292 BD.3293 | FACIA BOARD ASSEMBLY, L.H. FACIA BOARD ASSEMBLY, R.H. | | 1 } | LEFT HAND DRIVE MODELS ONLY |
| BD.3291 | INSTRUMENT PANEL ASSEMBLY (LESS INSTRUMENTS) | | 1 | |
| BD.3267 | BRACKET ASSEMBLY SUPPORTING L.H. FACIA BOARD | | 1 | |
| BD.3268 | BRACKET ASSEMBLY SUPPORTING R.H. FACIA BOARD | | 1 | |
| FS.104/5D FW.104/T FN.104/L C.724 | Screw, Set, securing Brackets Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts | | 8 8 8 | · · |
| BD.3284 | FIXING STUD ASSEMBLY FOR INSTRUMENT PANEL | • | 2 | |
| FW.104/T FN.104/L C.724 | Washer, Plain, on Fixing Studs Nut on Fixing Studs Washer, Shakeproof, under Nuts | | 2 2 2 | |
| | SCUTTLE CASINGS | | | |
| BD.3685 BD.3686 BD.3701 BD.3700 BD.3735 BD.3314 BD.3315 | Casing, Top Casing, Top Casing, Under-Scuttle Casing, Under-Scuttle Casing, Top, Rear Casing, Side, L.H. Casing, Side, R.H. | | 1 1 1 1 1 | LEFT HAND DRIVE ONLY RIGHT HAND DRIVE ONLY LEFT HAND DRIVE ONLY RIGHT HAND DRIVE ONLY |
| BD.539/1 BD.1499/2 BD.539/1 BD.1499/2 BD.531/1 | Screw, Self-Tapping, securing Side Casings Screw, Wood, securing Side Casings Screw, Self-Tapping, securing Under-Scuttle Casings Screw, Wood, securing Top Casings Washer, Cup, on Screws | | 6 8 4 8 26 | |
| | | | | |

| Part No. | Description. | Plate No. | No. pe Unit. | r Remarks. |
|---------------------------|---|--------------|-----------------|-----------------------|
| BD.2669 | | | 4. | |
| BD.2668 | MAIN FLOORBOARD ASSEMBLY, L.H. MAIN FLOORBOARD ASSEMBLY, R.H. | | 1 | LEFT HAND DRIVE ONLY |
| BD.3756 | MAIN FLOORBOARD ASSEMBLY, L.H. | | , | |
| BD.3757 | MAIN FLOORBOARD ASSEMBLY, R.H. | | 1 | RIGHT HAND DRIVE ONLY |
| BD.1493 | Screw, Set, securing Floorboards | ٠. | 14 | |
| BD.1711 C. 724 | Plate, Fixing, for Setscrews Washer, Shakeproof, on Setscrews | | 14 14 | |
| BD.3416 NS.525/8H | Plate, Tapping, for Seat Slides Screw, Set, securing Seat Slides | | 4 8 | |
| BD.3037 BD.3461 | Plate, Cover, for access to rear Jack Socket Plate, Seating, for Jack Cover Plates | | 2 | |
| M.106/3R | Screw, Wood, securing Seating Plates | | 2 24 | |
| BD.1256 | Nut "Tee" on Floorboards, for Gearbox Cover fixing | | 12 | |
| BD.3746 BD.3755 | Asbestos under R.H. Floorboard Plate, fixing Asbestos in position | | 1 1 | |
| BD.1503/6 | Screw, Wood, securing fixing Plate | | 13 | |
| BD.3162 | PROPELLOR SHAFT TUNNEL ASSEMBLY | | 1 | |
| FS.404/4D | Screw, Set, securing Propeller Shaft Tunnel to | | 4 | |
| BD.1493/2 | Frame Screw, Set, securing Propeller Shaft Tunnel to Battery Container | | 4 | |
| FW.104/T C.724 | Washer, Plain, on Setscrews | | 8 | |
| BD.3143 | Washer, Shakeproof, on Setscrews Felt (Black) between Propeller Shaft Tunnel and Battery Container (1"×15") | | 8 | |
| DD 0440 | | | | |
| BD.3168 | CLUTCH/GEARBOX COVER ASSEMBLY | | 1 | |
| BD.1493/1 BD.1493/2 | Screw, Set, securing Gearbox Cover Screw, Set, securing Gearbox Cover | | 4 14 | |
| BD.542/3 C. 724 | Washer, Oval, on Setscrews Washer, Shakeproof, on Setscrews | | 16 18 | |
| BD.3278 | DIPSTICK INSPECTION LID (IN GEARBOX COVER) | | 1 | |
| | CARPETS AND FELTS | | | |
| BD.3848 | Carpet for Main L.H. Floorboard | | 1 | |
| BD.3849 BD.3850 | Carpet for Main R.H. Floorboard Carpet, Front, L.H. | | 1 | |
| BD.3851 BD.3857 | Carpet, Front, R.H. Carpet for Toeboard (L.H. side) | | 1 1 } 1 } | RIGHT HAND DRIVE ONLY |
| BD.3858 BD.3859 | Carpet for Pedals (R.H. side) Carpet for Toeboard (R.H. side) | | 1 \ | LEFT HAND DRIVE ONLY |
| BD.3860 BD.3864 | Carpet for Pedals (L.H. side) Carpet for Gearbox Cover | | 1 } 1 | LEFT HAND DRIVE ONE! |
| BD.3853 | Felt for Dash Front, L.H. | | 1} | LEFT HAND DRIVE ONLY |
| BD.3854 BD.3855 | Felt for Dash Front, R.H. Felt for Dash Front, L.H. | | 11 | RIGHT HAND DRIVE ONLY |
| BD.3856 BD.3864/6 | Felt for Dash Front, R.H. Felt for Gearbox Cover | | 15 | |
| BD.3864/7 BD.3864/8 | Felt for Gearbox Cover Mutocel for Gearbox Cover | | 1 | |
| BD.3864/9 BD.3864/10 | Mutocel for Gearbox Cover Mutocel for Gearbox Cover | | 1 1 | |
| BD.3864/11 BD.3864/12 | Mutocel for Gearbox Cover Mutocel for Gearbox Cover | | 1 1 | |
| BD.1286 BD.1814/2 | Fastener, securing Carpets Rivet, Pop, securing Fasteners to inside face of | | 12 4 | |
| M.104/4R | Screw, Wood, securing Fasteners to Floorboards | | 8 | |
| BD.3834 | Fastener, securing Carpet | | 1 | |

| | | | | 670001 TO 670164 |
|--|---|--------------|---|---|
| Part No. | Description. | Plate No. | No. pe Unit. | |
| BD.3866 | GAUNTLET FOR CHANGE-SPEED LEVER | | 1 | |
| | | | | |
| BD.3867 | GAUNTLET FOR HANDBRAKE LEVER | | 1 | |
| BD.3861 | MOQUETTE AROUND DIPPER SWITCH | | 1 | |
| BD.3158 | BATTERY CONTAINER ASSEMBLY | | 1 | |
| BD.3365 BD.3230 BD.3143 BD.3143 BD.3165 FS.104/BD 1294 C.724 | BATTERY COVER ASSEMBLY Pad (Rubberised Felt) for Battery Mounting Felt (Black) for Battery Mounting Bracket (1"×21½") Felt (Black) for Battery Straps (1"×8½") Strap, holding Batteries Screw, Set, for Straps Nut on Setscrews Washer, Shakeproof, under Nuts | | 1 2 2 2 2 2 4 4 4 | |
| BD.3012 | WINDSCREEN ASSEMBLY, L.H. | | 1 | |
| BD.3013 | WINDSCREEN ASSEMBLY, R.H. | | 1 | |
| BD.3014 BD.3015 BD.3016 | Pillar Assembly, Centre Pillar, Side, L.H. Pillar, Side, R.H. | | 1 1 1} | Fitted from Chassis No. 660001 to 660018 |
| BD.3800 BD.3801 | Pillar, Side, L.H. Pillar, Side, R.H. | | 1} | 670001 to 670026 Fitted from Chassis No. 660019 to 660058 670027 to 670184 |
| BD.3017 BD.3018 BD.3019 BD.3237 BD.1317 BD.3026 BD.2159 BD.3239 | Frame Assembly, L.H. Frame Assembly, R.H. Glass only Glass only Everseal for Screen Glasses (1½"×13') Rubber, sealing Screen (72" long) Rubber (Sponge) sealing Screen (21" long) Bracket, locating Windscreen | | 1 1 1 1 1 2 1 | NOT REQUIRED FOR U.S.A. FOR EXPORT TO U.S.A. ONLY |
| C.2015/1 C.2015/5 C.2015/6 | Screw, Set, securing Locating Bracket Screw, Set, securing Locating Bracket Screw, Set, securing Locating Bracket | | 2 3 2 | |
| BD.3014 FN.108/L FW.108/T | WINDSCREEN CENTRE PILLAR ASSEMBLY Nut, securing Centre Pillar Washer, Plain, on Stud | | 1 | |
| FG.108/X | Washer, Spring, under Nut | | 1 | |

| Part No. | Description. | Plate No. per No. Unit. Remarks. |
|--|--|---|
| BD.3015 | WINDSCREEN SIDE PILLAR, L.H. | ¹ Fitted from Chassis No. |
| BD.3016 | WINDSCREEN SIDE PILLAR, R.H. | 1 660001 to 660018 670001 to 670026 |
| BD.3800 | WINDSCREEN SIDE PILLAR, L.H. | Fitted from Chassis No. |
| BD.3801 | WINDSCREEN SIDE PILLAR, R.H. | 660019 to 660058 670027 to 670184 |
| BD.3059 C.728 BD.3223 BD.3224 BD.3020 BD.3022 BD.3022 BD.3023 BD.3021 AS.503/2H C.2014/1 | Bolt, Special, securing Side Pillars Washer, Shakeproof, on Special Bolts Grommet (Rubber) under foot of L.H. Side Pillar Grommet (Rubber) under foot of R.H. Side Pillar Plate, Tapping, for Screen Corners Plate, Tapping, for Screen Corners Plate, Tapping, for Screen joints Plate, Tapping, for Windscreen Screw, Set, for Tapping Plates Screw, Set, for Tapping Plates | 4 4 1 1 2 2 2 2 2 2 2 2 2 2 4 |
| C 0007 | | |
| C.2887 C.2887/1 C.2887/2 | INTERIOR MIRROR ON SCUTTLE Bracket only for Interior Mirror Glass only | 1 |
| C.2015/6 AN.102/L C.723 BD.4673 | Screw, Set, securing Mirror to Scuttle Nut on Setscrew Washer, Shakeproof, under Nut Fastener ("Tenax") through Mirror Bracket (Tonneau Cover fixing) | 1 1 1 1 |
| BD.3208 | DOOR, LEFT HAND | 1 |
| BD.3209 | DOOR, RIGHT HAND | 1 |
| BD.3294 BD.3295 | Lock Assy. for L.H. Door (complete with Safety Catch Mechanism) Lock Assy. for R.H. Door (complete with Safety Catch Mechanism) | 1 Fitted from Chassis No. 670001 to 670010 |
| BD.3664 | Lock Assy. for L.H. Door (complete with Safety Catch Mechanism) | Fitted from Chassis No. |
| BD.3665 BD.2930 AS.302/6H AN.102/L C.723 | Lock Assy. for R.H. Door (complete with Safety Catch Mechanism) Striker for Door Locks Screw, Set, securing Strikers Nut on Setscrews Washer, Shakeproof, under Nuts | 1 660001 to 660058 670011 to 670184 2 4 4 |
| BD.3311 BD.3312 | Casing Assy. for L.H. Door Casing Assy. for R.H. Door | i |
| BD.3294 | DOOR LOCK ASSEMBLY, L.H. | 1 Fitted from Chassis No. |
| BD.3295 | DOOR LOCK ASSEMBLY, R.H. | 670001 to 670010 |
| BD.2929 | Lock only | 2 |
| M.108/6R | Screw, Wood, securing Door Locks | 12 |

| | | | 670001 TO 670184 | - |
|----------------------|--|---------------------|--|---|
| Part No. | Description. | Plate No. No. Un | | - |
| B D 2007 | Link haterian Dana Lash and Larra | | | |
| BD.3297 | Link, between Door Lock and Lever | 2 | | |
| R.303/7W AW.102/C | Rivet, securing Link to Door Lock | 2 2 | | |
| J.104/6S | Washer, between Lever and Tongue of Lock | 2 | | |
| | Pin, Clevis, securing Link to Lever | | | |
| FW.104/T | Washer on Clevis Pins | 2 | | |
| L.103/6U | Pin, Split, through Clevis Pins | 2 | | |
| BD.3298 | Lever, Operating | 2 | | |
| R.303/8W | Rivet, securing Operating Lever to Bracket and | 2 | 1 | |
| AW.102/C | Connecting Rod Washer on Rivets | 2 | | |
| AW.102/C | Washer on Rivets | 2 | | |
| BD.3316 | | 2 | ł. | |
| BD.3296 | Spring for Operating Lever | 2 | · | |
| BD.3299 | Bracket for Operating Lever | 2 | | |
| DD.0277 | Rod, connecting Operating Lever and Operating Link | 2 | | |
| BD.3300 | Rivet, securing Connecting Rod to Operating Link | 2 | | |
| AW.102/T | Washer on Rivets | 4 | Fitted from Chassis No. | |
| BD.3301 | Link, operating Door Lock | 2 | 670001 to 670010 | |
| R.304/7W | Rivet, securing Link to Bracket | Ž. | 870001 10 870010 | |
| FW.104/C | Washer on Rivets | 2 | | |
| FW.104/T | Washer on Rivets | 2 | | |
| BD.3302 | Knob on Operating Link | 2 | | |
| BD.3310 | Plate Cover for Door Keek | 2 | | |
| BD.1499/4 | Plate, Cover, for Door Knob | 8 | | |
| BD.3303 | Screw, Wood, securing Cover Plate | 7 | | |
| BD.3304 | Bracket Assy., mounting Operating Link L.H. | 1 | | |
| | Bracket Assy., mounting Operating Link R.H. | 1 | | |
| AS.502/4D | Screw, Set, securing Bracket to bottom flange of | 4 | | |
| A NI 409/I | Door Pocket | | · · | |
| AN.102/L | Nut on Setscrews | 4 | | |
| AW.102/T | Washer under Nuts | 4 | | |
| BD.3305 | Packing for Door Lock Guide | 2 | | |
| BD.3306 | Guide for Operating Link | 2 2 | | |
| BD.3307 | Packing for Operating Link Bracket | 2 | | |
| BD.1503/4 | Screw, Wood, securing Packing | 2 | | |
| | • | | the second of th | |
| | | | | |
| BD.2941 | DOOR DOVETAIL BUFFER | 2 | | |
| M.110/7R | Screw, Wood, securing Buffers | 4 | | |
| , | 2000, 1100, 200, 200, 200, 200, 200, 200 | · | | |
| BD.2942 | DOOR DOVETAIL STRIKER | 2 | | , |
| | DOOK DOVELAGE STRIKEN | - | | |
| M.110/8R | Screw, Wood, securing Strikers | 4 | | |
| | | .*. | | |
| BD.3664 | DOOR LOCK ASSEMBLY, L.H. | . 1 | | |
| DD 4445 | | | 660001 to 660058 | |
| BD.3665 | DOOR LOCK ASSEMBLY, R.H. | . 1 | 670011 to 670184 | |
| DD 4044 | | | | |
| BD.2929 | Lock only | 2 | | |
| | | | | |
| M 400// D | Commun. Word asserting Description | | | |
| M.108/6R | Screw, Wood, securing Door Locks | 12 | | |
| | | | | |
| | | | • | |
| | | | | |
| BD.3557 | Link, between Door Lock and Operating Lever | | | |
| AS.302/4H | | 2 | | |
| AW.102/C | Screw, Set, securing Link to Lock Washer, between Link and Tongue of Lock | 2 | | |
| AN.102/L | Nut on Setscrews | 2 2 2 2 | | |
| C.723 | | 2 | | |
| J.104/6S | Washer, Shakeproof, under Nuts Pin. Clavis, securing Link to Operating Lever | 2 | | |
| FW.104/T | Pin, Clevis, securing Link to Operating Lever Washer on Clevis Pins | 2 2 | | |
| L.103/6U | Pin, Split, through Clevis Pins | 2 | Fitted from Chassis No | |
| BD.3670 | Lever, Operating, Assembly, L.H. | 1 | Fitted from Chassis No. 660001 to 660058 | |
| BD.3671 | | 1 1 | | |
| BD.3643 | Lever, Operating, Assembly, R.H. | | 670011 to 670184 | |
| BD.3572 | Guide for R.H. Operating Lever | 1 | | |
| | Guide for R.H. Operating Lever | 1 | | |
| M.108/6R | Screw, Wood, securing Guides | 4 | | |
| BD.3316 | Spring, Return, for Operating Lever | 2 | • | |
| BD.3641 R.303/8W | Bracket for Operating Lever | 2 2 2 2 | | |
| AW.102/C | Rivet, securing Operating Lever to Bracket Washer on Rivets | 2 | | |
| | | 2 1 | | |
| AW.102/T | Washer on Rivets | 2] | | |
| | | | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|--|--------------|---|--|
| BD.3559 | | | 2 | |
| BD.3337 | STRAP, OPERATING DOOR LOCK (COMPLETE WITH SWIVEL) | | 2 | |
| BD.539/16 BD.3556 | Screw, Self-Tapping, securing Swivel to Door Bracket, Fixing, for Door Lock Strap | | 4 2 | |
| BD.1499/4 | Screw, Wood, securing Fixing Brackets | | 4 | |
| BD.2941 | DOOR DOVETAIL BUFFER | | 2 | |
| M.110/7R | Screw, Wood, securing Buffers | ٠. | 4 | |
| BD.2942 | DOOR DOVETAIL STRIKER | | 2 | |
| M.110/8R | Screw, Wood, securing Strikers | | 4 | |
| BD.3560 | COVER PLATE, ON DOOR CASINGS, FOR LOCKS | | 2 | |
| C.2025/1 AN.104/L AW.104/T | Screw, Set, securing Cover Plates Nut on Setscrews Washer under Nuts | | 8 8 8 | |
| BD.3311 | CASING ASSEMBLY FOR L.H. DOOR | | 1 | |
| BD.3312 | CASING ASSEMBLY FOR R.H. DOOR | | · : 1 | |
| BD.3049 BD.2844 BD.2845 | Piping Assy, for Door Casings Pocket for L.H. Door Pocket for R.H. Door | | 1 1 | Fitted from Chassis No. 660001 to 660028 670001 to 670071 |
| BD.3836 BD.3837 | Pocket for L.H. Door Pocket for R.H. Door | | 1} | Fitted to Chassis No. 660029 and subs. |
| BD.3822 | Fastener "Tenax" on Doors | | 2 | 670072 and subs. |
| BD.2789 | DOOR HINGE ARM | | 4 | |
| BD.2791 BD.2792 BD.2793 BD.2794 BD.2859 BD.2860 BD.2861 BD.2862 BD.3863 FB.204/10D BD.2928 BD.1503/3 BD.3764 | Plate, Pivot, for bottom L.H. Hinge Arm Plate, Pivot, for bottom R.H. Hinge Arm Plate, Pivot, for top L.H. Hinge Arm Plate, Pivot, for top R.H. Hinge Arm Plate, Face, for top L.H. Hinge Arm Plate, Face, for top R.H. Hinge Arm Plate, Face, for bottom L.H. Hinge Arm Plate, Face, for bottom R.H. Hinge Arm Plate, Face, for bottom R.H. Hinge Arm Screw, Set, securing Hinge Arms to Pivot Plates Bolt, securing Hinges to Doors Plate, Tapping, for Hinge Bolts Screw, Wood, securing Tapping Plates Packing for Door Hinges | | 1 1 1 1 1 1 1 4 16 4 8 As re | q'd. |
| | LUGGAGE COMPARTMENT | | | |
| C.3783 NS.125/4D | Floor Assembly, for Luggage Compartment Screw. Set. securing Floor | | 1 | |
| FW.104/T C.724 BD.3405 | Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews Plate, Cover, for Petrol Filler Neck | | 6 6 1 | Fitted from Chassis No. 660001 to 660017 |
| BD.3893 BD.3892 | Plate, Cover, for Petrol Filler Neck Moquette for Filler Neck Cover (16"×18") | | ! } | 670001 to 660032 Fitted to Chassis No. 660018 and subs. 670033 and subs. |
| BD.539/15 BD.1502/2 | Screw, Self-Tapping, securing Cover Plate Screw, Wood, securing Cover Plate | | 4 | 7.7000 Bild 3000. |
| BD.532/2 BD.3331 BD.3332 BD.1493/3 | Washer, Cup, on Woodscrews Floorboard Assy., L.H., for Luggage Compartment Floorboard Assy., R.H., for Luggage Compartment Screw, Set, securing Floorboards | | 4 1 1 8 | |

| | | | | 070001 10 070104 | |
|--|--|--------------|---|--|-----|
| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
| | LUGGAGE COMPARTMENT (continued) | | | | |
| BD.542/3 C.724 BD.2209/2 FW.104/T C.724 | Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews Screw, Self-Tapping, securing Floorboards Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews | | 8 8 6 6 | | |
| BD.3862 | CARPET FOR LUGGAGE COMPARTMENT FLOOR | | 1 | | |
| BD.3833 BD.1286 | Felt, under Carpet on Luggage Compartment Floor Fastener "Durable Dot" securing Carpet | | 1 12 | | |
| BD.3431 BD.3527 BD.3535 BD.1814/2 BD.3432 BD.2385 BD.3433 BD.1814/1 | Clip, securing Jack in Luggage Compartment Socket for Jack fixing Clip, fixing Jack Socket Rivet, Pop, securing Clips Clip, securing Ratchet in Luggage Compartment Clip, securing Wheel Brace in Luggage Compartment Clip, securing Starting Handle in Luggage Compartment Rivet, Pop, securing Clips | | 1 1 1 8 2 3 3 3 3 | Fitted from Chassis No. 660001 to 660028 670001 to 670068 and 670070 and 670075 | |
| BD.3434 BD.1814/2 BD.3438 BD.3437 | Clip, securing Pump in Luggage Compartment Rivet, Pop. securing Clips Clip, securing Budget Key in Luggage Compartment Strap (Leather) securing Tool Roll in Luggage Compartment | | 2 2 2 1 | and brooks and crooks | · . |
| BD.539/2 BD.532/2 | Screw, Self-Tapping, securing Strap Washer, Cup, on Self-Tapping Screw | | 1 | | |
| | A Company of the Comp | | | A STATE OF THE STA | |
| BD.3215 | GUTTER AROUND LUGGAGE COMPART- MENT LID APERTURE | | 1 | | |
| M.104/4R BD.3704/1 | Screw, Wood, securing Gutter Rubber, Sealing, around Gutter (112" long) | | 36 | | |
| BD.3219 | LUGGAGE COMPARTMENT LID ASSEMBLY (COMPLETE WITH CASING, LIGHT, LOCK AND HANDLE BUT LESS HINGES) | | . | | |
| BD.3628 BD.539/1 BD.532/1 BD.3395 NS.119/10D AW.102/T NN.119/L C.723 BD.3266 BD.3266/5 BD.3352 M.110/6R BD.3441 BD.3440 M.106/6R BD.3345 M.110/6R BD.3345 M.110/6R | Casing on Luggage Lld Screw, Self-Tapping, securing Casing Washer, Cup, on Self-Tapping Screws Lock for Luggage Lid Screw, Set, securing Lock Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Handle for Luggage Lid (complete with Washer) Screw, Set, through flanges of Handle Socket Assembly for Lock Screw, Wood, securing Sockets Socket Assembly for Lock (on Body) Socket for Lock (on Luggage Lid) Screw, Wood, securing Sockets Bracket, Guide, for Lock Rod Screw, Wood, securing Guide Brackets Light (Electric) on Luggage Lid | | -4 <i>}</i> | fitted from Chassis No. 670010 to 670010 fitted to Chassis No. 660001 and subs. 670011 and subs. | |
| BD.3738 M.106/8R BD.3283 BD.1502/4 | Buffer (Rubber) at each side of Luggage Lid Screw, Wood, securing Buffers Buffer (Rubber) at bottom of Luggage Lid Screw, Wood, securing Buffers | | 4 8 2 2 | | |

| 670001 | 670001 TO 670184 | | | | |
|------------------------|--|--------------|--|--|--|
| Part No. | Description. | Plate No. | No. per Unit. Remarks. | | |
| BD.3391 | PROP HOLDING LUGGAGE LID IN "OPEN" POSITION | | 1 | | |
| BD.1708/1 | Washer, Spring (Double Coil) on Prop | | 1 | | |
| FW.105/T | Washer, Plain, behind Spring Washer | | 1 | | |
| L.103/7U | Pin, Split, securing Prop in Bracket | | 1 | | |
| BD.2244 BD.3394 | Clip, Spring, housing Prop when not in use Socket for Prop | | 1 1 | | |
| M.106/6R | Screw, Wood, securing Socket | | 4 | | |
| BD.2796 | HINGE ARM FOR LUGGAGE LID, L.H. | | 1 | | |
| BD.2797 | HINGE ARM FOR LUGGAGE LID, R.H. | | 1 . | | |
| BD.2798 | Plate, Pivot, for L.H. Hinge Arm | | 1 | | |
| BD.2799 | Plate, Pivot, for R.H. Hinge Arm | | 1 | | |
| FB.104/14D FN.204/L | Bolt, securing Hinge Arms to Pivot Plates Nut on Bolts | | 2 4 | | |
| AS.502/12H | Screw, Set, Securing Hinges | | 10 | | |
| AN.102/L | Nut, on Setscrews | | 10 | | |
| C.723 | Washer, Shakeproof, under Nuts | | 10 | | |
| BD.3171 | PETROL FILLER BOX ASSEMBLY | | 1 | | |
| BD.4223 | Tube, Drain (Rubber) on Petrol Filler Box | | 1 | | |
| BD.3192 C.824 | Hose, Petrol Pipe Clip, securing Petrol Pipe Hose | | 1 2 | | |
| BD.3220 | BREATHER PIPE EXTENSION | | 1 | | |
| BD.3221 BD.3210 | Tube (Rubber) for Breather Pipe Grommet on Breather Pipe | | 1 1 | | |
| BD.3182 | DOOR FOR PETROL FILLER BOX | | 1 | | |
| BD.3211 | Seal (Rubber) around Door Aperture | | 1 | | |
| BD.3185 | Plate, Tapping, for Door Fixing | | 2 | | |
| NS.316/3H | Screw, Set, securing Door | | 4 4 | | |
| C.722 C.3377 | Washer, Shakeproof, on Setscrews Washer, Packing | | As reg'd. | | |
| BD.3186 | Spring for Door | | 1 | | |
| BD.3187 | Retainer for Spring | | 1 ' | | |
| NB.616/5H | Bolt, adjacent to Spring Retainer | | 1 | | |
| AW.102/T NN.116/L | Washer, Plain, on Bolt Nut on Bolt | | 1 | | |
| C.722 | Washer, Shakeproof, under Nut | | 1 | | |
| BD.3640 | LOCK ASSEMBLY FOR PETROL FILLER DOOR | | 1 | | |
| BD.2130 | STRIKER ASSEMBLY FOR PETROL FILLER LOCK | | 1 | | |
| BD.3178 | Plate, Tapping, for fixing Striker | | 2 | | |
| NB.313/3H | Bolt, securing Striker | | 4 | | |
| C.721 | Washer, Shakeproof, on Bolts | | 4 | | |
| BD.3188 | PETROL FILLER CAP | | 1 Fitted from Chassis No. | | |
| | TETROE HEALT OF | | 660001 to 660017 670001 to 670032 | | |
| BD.3699 | PETROL FILLER CAP | | 1 Fitted to Chassis No. 660018 and subs. | | |
| BD 3100 | Seal (Cork) inside Filler Can | | 670033 and subs. | | |
| BD.3189 C.3321 | Seal (Cork) inside Filler Cap Spring, between Filler Cap and Hinge Plate | | 1 | | |
| L.102/4U | Pin, Split, securing Filler Cap to Joint Pin in Hinge | | i | | |
| | Plate Mochan Blain under Salte Bin | | 4 | | |
| C.2501/3 | Washer, Plain, under Split Pin | | 1 | | |

| | | | | 670001 TO 670184 | | |
|---|--|--------------|----------------------------|------------------|---|--|
| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | | |
| BD.2780 | FRONT END ASSEMBLY (COMPRISING L.H. AND R.H. FRONT WINGS AND CONNECTING PANEL) | | 1 | | | |
| BD.3551 BD.3552 BD.3553 BD.2561 BD.2563/1 FW.105/T AW.104/T | Steady for L.H. Front Wing Steady for R.H. Front Wing Bracket, Attachment, for Wing Steady Motif for Head Lamp Containers Screw, Set (Special) securing Motifs Washer for Motifs Washer on Setscrews | | 1 1 2 2 4 8 | | | |
| A44.104/1 | wasner on Setscrews | | 7 | | | |
| BD.3382 | STONEGUARD ASSEMBLY FOR L.H. FRONT WING | | 1 | | | |
| BD.3383 | STONEGUARD ASSEMBLY FOR R.H. FRONT WING | | 1 | | | |
| BD.3335 BD.3336 FS.104/5D FW.104/T FN.104/L C.724 | Support for L.H. Stoneguard Support for R.H. Stoneguard Screw, Set, securing Supports Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts | | 1 1 6 6 6 | | | |
| BD.3217 | REAR WING, L.H. | | 1 | | | |
| BD.3218 | REAR WING, R.H. | | 1 | | | |
| BD.2401/2 BD.542/2 C.725 | Screw, Set, securing Rear Wings Washer, Special on Setscrews Washer, Shakeproof, on Setscrews | | 14 14 14 | | | |
| BD.3346 | FRONT SUPPORT FOR R.H. REAR WING | | 1 | | | |
| BD.3347 | FRONT SUPPORT FOR L.H. REAR WING | | 1 | | • | |
| BD.3348 | REAR SUPPORT FOR R.H. REAR WING | | 1 | | | |
| BD.3349 | REAR SUPPORT FOR L.H. REAR WING | | 1 | | | |
| FS.104/6D FS.105/10D FN.104/L C.724 | Screw, Set, securing Rear Wing Supports Screw, Set, securing Rear Wing Supports Nut on Setscrews Washer, Shakeproof, under Nuts | | 4 4 8 8 | | | |
| BD.3226 | COVER FOR L.H. REAR WING | | 1 | | | |
| BD.3227 | COVER FOR R.H. REAR WING | | 1 | | | |
| BD.2122 | LOCK FOR L.H. REAR WING COVER | | 1 | | | |
| BD.2121 | LOCK FOR R.H. REAR WING COVER | | 1 | | | |
| AS.502/4H AN.102/L C.723 BD.3355 | Screw, Set, securing Locks Nut on Setscrews Washer, Shakeproof, under Nuts Plate, Striker, for Wing Cover Locks | | 4 4 4 2 | | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---|--|--------------|------------------|----------|
| 2312 | ESCUTCHEON FOR LOCKS ON WING COVERS | | 2 | |
| BD.540/9 | Screw, Self-Tapping, securing Escutcheons | | 4 | |
| BD.3384 | STONEGUARD ASSEMBLY FOR L.H. REAR WING | | 1 | |
| BD.3385 | STONEGUARD ASSEMBLY FOR R.H. REAR WING | | 1 | |
| FS.104/6D FN.104/L C. 724 | Screw, Set, securing Stoneguards Nut on Setscrews Washer, Shakeproof, under Nuts | | 4 4 4 | |
| BD.3225 | BONNET ASSEMBLY | | 1 | |
| FS.104/40 FW.104/1 C.724 | Screw, Set, securing Bonnet to Hinges Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews | ×. | 8 8 8 | |
| BD.2948 | BONNET HINGE ASSEMBLY, L.H. | | 1 | |
| BD.2949 | BONNET HINGE ASSEMBLY, R.H. | | 1 | |
| BD.3250 BD.2848 | Bracket Assembly, mounting Bonnet Hinges Plate, Tapping, for Bonnet Hinges | | 2 2 | |
| BD.3270 | PROP ASSEMBLY, HOLDING BONNET IN "OPEN" POSITION | | 1 | |
| BD.3272 BD.1708/1 FW.105/T L.102/6U BD.3798 | Pin, hingeing Bonnet Prop Washer, Spring, on Hinge Pin Washer, Plain, on Hinge Pin Pin, Split, through Hinge Pin Bracket and Clip Assy., fixing Prop in "closed" | | 1 1 1 1 | |
| AS.402/3H AN.102/L C.723 | position Screw, Set, securing Clip Assembly Nut on Setscrews Washer, Shakeproof, under Nut | | 2 2 2 | |
| BD.3273 | ANCHOR BRACKET FOR BONNET PROP | | 1 | |
| FS.104/3D FS.104/4D C.724 BD.3333 | Screw, Set, securing Anchor Bracket Screw, Set, securing Anchor Bracket Washer, Shakeproof, on Setscrews Plate, Tapping, for Bonnet Prop | | 1 2 3 1 | |
| BD.3271 | SOCKET ASSEMBLY FOR BONNET PROP | | 1 | |
| FS.104/4D FN.104/L C.724 | Screw, Set, securing Socket to Front Wing Valance Nut on Setscrews Washer, Shakeproof, under Nuts | | 2 2 2 | |
| BD.2950 | BONNET CATCH ASSEMBLY | | 1 | |
| BD.2952 NS.125/4D C.724 | Plate, Guide, for Bonnet Catch Screw, Set, securing Bonnet Catch Washer, Shakeproof, on Setscrews | | 1 3 3 | |

| | | | | 670001 TO 670184 |
|--|--|--------------|--------------------|---|
| Part No. | Description. | Plate No. | No. pe Unit. | |
| BD.2951 | HOOK AND STRIKER ASSEMBLY FOR BONNET CATCH | | , 1 | |
| BD.3386 FS.104/4D FW.104/T FN.104/L | Bracket, mounting Hook and Striker Screw, Set, securing Hook and Striker Washer, Plain, on Setscrews Nut on Setscrews | | 1 10 2 10 | |
| C.724 | Washer, Shakeproof, under Nuts | | 10 | |
| BD.2954 | CONTROL WIRE, RELEASING BONNET CATCH (COMPLETE WITH KNOB AND FITTINGS) | | 1 | |
| C.2711 NS.131/5D | Clip, securing Control Wire Screw, Set, securing Clip | | 1 | |
| C.3116/2 C.725 | Nut on Setscrew Washer, Shakeproof, under Nut | | 1 | |
| C.2735 | Clip, securing Control Wire | | ż | |
| BD.4321 | RUBBER BUFFER FOR BONNET REST | | 4 | |
| BD.2877 | RADIATOR GRILLE ASSEMBLY (IN BONNET) | | 1 | |
| BD.2877/1-2 BD.2877/3 | Frame, Outer only Vane, Centre | | 1 | |
| BD.2877/4 BD.2877/5 | Vane, No. 1, L.H. Vane, No. 1, R.H. | | 1 | |
| BD.2877/6 | Vane, No. 2, L.H. | | 1 | |
| BD.2877/7 BD.2877/8 | Vane, No. 2, R.H. Vane, No. 3, L.H. | | 1 | |
| BD.2877/9 BD.2877/10 | Vane, No. 3, R.H. Vane, No. 4, L.H. | | 1 | |
| BD.2877/11 BD.2877/12 | Vane, No. 4, R.H. Vane, No. 5, L.H. | | 1 | |
| BD.2877/13 | Vane, No. 5, R.H. | | 1 | |
| BD.2877/14 BD.2877/15 | Vane, No. 6, L.H. Vane, No. 6, R.H. | | 1 | |
| BD.3285 AW.102/T | Stud, Special, on Radiator Grille Washer, Plain, on Special Studs | | 10 10 | |
| AN.102/L | Nut on Special Studs | | 10 | |
| C.723 | Washer, Shakeproof, under Nuts | | 10 | |
| BD.3286 | BADGE ON BONNET | | 1 | |
| AW.102/T AN.102/L | Washer, Plain, on Badge Stud Nut on Stud | | 1 | |
| C.723 | Washer, Shakeproof, under Nut | | , 1 | |
| BD.2855 | FRONT BUMPER BAR | | 2 | |
| C.4202/3 C.3088 | Nut, securing Bumper Bars to Spring Bars Washer for Bumper fixing | | 6 2 | Fitted to Chassis No. 660001 and subs. 670011 and subs. |
| | | | | |
| C.3695 | SPRING - BAR, MOUNTING BUMPER BARS | | 2 | |
| NB.150/32D C.728 | Bolt, securing Spring Bars to Brackets Washer, Shakeproof, on Bolts | | 8 | Fitted from Chassis No. |
| NB.150/24D FW.208/T | Bolt, securing Spring Bars to Supports Washer, Plain, on Bolts | | 2 6 | 670001 to 670010 |
| NB.150/20D | Bolt, securing Spring Bars to Brackets | | 2 8 | Fitted to Chassis No. |
| C.728 NB.150/10D | Washer, Shakeproof, on Bolts Bolt, securing Spring Bars to Supports | | 2 | 660001 and subs. |
| FW.208/T C.3837 | Washer, Plain, on Bolts Nut, Dome, securing Spring Bars to Extensions | | 6 J | 670011 and subs. |
| C.741 | Washer, Shakeproof, under Dome Nuts | | 4 | |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|-----------------------------|---|--------------|-----------------|---|
| C.3943 | SCREWED EXTENSION FOR SPRING-BAR FIXING | | 4 | Fitted to Chassis No. 660001 and subs. 670011 and subs. |
| C.3945 | Washer, Spacing, on Screwed Extensions | | 4 | Fitted to Chassis No. 660001 and subs. |
| C.3849 C.793 C 3848 | Washer (Rubber) at Wing mounting holes Washer, Spacing Tube, Spacing | | 8 6 41 | 670011 and subs. Fitted from Chassis No. |
| C.3225/1 C.3225 | Washer, Wing Clamping Washer, Wing Clamping | | 4} | 670001 to 670010 Fitted to Chassis No. 660001 and subs. |
| C.3830 | Piece, Distance | | 2 | 670011 and subs. |
| C.3831 | BUMPER SUPPORT MEMBER | | 1 | |
| C.3833 | BUMPER SUPPORT STRUT, L.H. | | 1 | |
| C.3832 | BUMPER SUPPORT STRUT, R.H. | | 1 | |
| NB.137/7D C.741 | Bolt, securing Support Struts to Chassis Frame Washer, Shakeproof, on Bolts | | 2 2 | |
| C.3205 | STEADY BRACKET FOR STARTING HANDLE | | 1 | Fitted from Chassis No. 660001 to 660028 670001 to 670068 670070 and 670075 |
| BD.2856/1 | REAR OVER-RIDER, R.H. | | 1 | |
| BD.2856/2 | REAR OVER-RIDER, L.H. | | 1 | |
| C.3279 FW.106/T C.726 | Nut, Dome, securing Over-Riders to Spring Bars Washer, Plain, on Over-Rider Studs Washer, Shakeproof, under Dome Nuts | | 4 2 4 | |
| C.3784 | SPRING-BAR, MOUNTING OVER-RIDERS | | 2 | |
| C.3778 | Piece, Distance, between Spring Bars and Support Brackets | | 2 | |
| C.2869 NB.137/7D | Grommet (Rubber) on Distance Pieces Bolt, securing Spring Bars to Chassis Frame | | 2 | |
| NB.137/25D NN.137/L | Bolt, securing Spring Bars to Chassis Frame Nut on Bolts | | 4 | |
| C.726 | Washer, Shakeproof, under Nuts | | 6 | |
| C.3779 | TIE BRACKET FOR R.H. OVER-RIDER | | 1 | |
| C.3780 | TIE BRACKET FOR L.H. OVER-RIDER | | 1 | |
| C.3781 | SUPPORT BRACKET FOR R.H. OVER-RIDER | | 1 | |
| C.3782 | SUPPORT BRACKET FOR L.H. OVER-RIDER | | 1 | |
| NB.150/41D | Bolt, through Support Bracket, securing Spring Bar | | 2 | Fitted from Chassis No. 660001 to 660023 660060 and subs. 670001 to 670052 |
| NB.150/44D | Bolt, through Support Bracket, securing Spring Bar | | 2 | 670173 and subs. Fitted from Chassis No. 660024 to 660059 670053 to 670172 |
| C.3837 C.728 | Nut, Dome, on Bolts Washer, Shakeproof, under Dome Nuts | | 2 2 | C. COOK LO VIVILE |

| | | | | 6/0001 10 6/0184 | |
|---|--|----------------|--|--|-----|
| Part No. | Description. | Plate 1 No. | No. per Unit. | Remarks. | |
| C.3236 | FRONT NUMBER PLATE ASSEMBLY | | 1 | NOT REQUIRED FOR U.S.A | |
| C.3229 | FRONT LICENCE PLATE ASSEMBLY | | 1 | FOR EXPORT TO U.S.A. | |
| C.2946 | REAR NUMBER PLATE PANEL ASSEMBLY | , | 1 | NOT REQUIRED FOR U.S.A. CANADA | AND |
| C.2941 | REAR NUMBER PLATE PANEL ASSEMBLY | | 1 | FOR EXPORT TO U.S.A. AN CANADA | D |
| C.2945 | REAR NUMBER PLATE | | 1 : | SUPPLIED TO SPECIAL ORD ONLY. NOT REQUIRED F U.S.A. AND CANADA | |
| C.2944 NS.125/4D FS.504/20H FW.104/T FN.104/L C.724 | Seal (Rubber) around Number Plate Panel (5' long) Screw, Set, securing Number Plate Panel Screw, Set, securing Number Plate Panel Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts | | 1 4 4 8 4 | C.S.A. AND CANADA | |
| C.2840 | COMMISSION NUMBER PLATE | | 1 | | |
| BD.4004 | RECORD-BREAKING REPLICA PLATE | | 1 | | |
| BD.4005/1 | Screw, Wood, securing Replica Plate | | 4 | | |
| C.1107 | LICENCE HOLDER | | 1 | | |
| BD.3442 | GRAB RAIL | | 1 | | |
| BD.1506/2 | Screw, Wood, securing Grab Rail | | 4 | | |
| | INTERIOR TRIMMING | | | | |
| BD.3654 BD.3655 BD.3656 BD.3657 BD.3631 BD.633 BD.3693 BD.3694 BD.540/2 BD.3660 BD.3661 | Strip, Tacking, for Waist Piping around Scuttle Strip, Tacking, for Waist Piping around Tonneau Strip, Tacking, for Waist Piping at Corners Strip, Tacking, for Waist Piping on Doors Piping, Waist (13' 6" long) Piping, Draught, around Doors (12' long) Retainer, L.H., for Piping Retainer, R.H., for Piping Screw, Self-Tapping, securing Retainers Hide for Piping on L.H. Door (8"×29") Hide for Piping on R.H. Door (8"×29") | | 1 1 2 2 1 1 1 1 4 1 | | |
| BD.3662 BD.3663 BD.3630 BD.3049 BD.813 BD.3780 BD.3781 BD.3782 BD.3783 BD.3784 BD.3785 BD.3785 BD.3786 BD.3786 BD.3786 BD.3786 BD.3787 BD.3813 | Hide for Piping around Scuttle (9"×51") Hide for Piping around Tonneau (3"×66") Plug, for ends of Piping Piping Assembly for Door Casings (16' 3" long) Piping Assembly for Rear Wings (6' long) Moquette for Wheel-Arch Moquette for Side Curtain Tray Moquette for Battery Container Moquette for front of Locker Floor Moquette for L.H. side of Locker Floor Moquette for R.H. side of Locker Floor Gasket "Rubo" for Shut Pillar (4' 6" long) Gasket "Rubo" L.H. Rear Quarter | | 1 1 1 8 1 2 1 1 1 1 1 1 1 1 1 1 | | |
| BD.3814 BD.539/1 BD.532/1 | Casing Assy., for R.H. Rear Quarter Screw, Self-Tapping, securing Rear Quarter Casings Washer, Cup, on Self-Tapping Screws | | 1 7 7 | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---|---|--------------|---|---|
| BD.3871 | COVER ASSEMBLY FOR PROPELLER SHAFT TUNNEL | | 1 | |
| BD.3045 | Piping, Assembly, for Prop Shaft Tunnel Cover (3' long) | | 1 | |
| BD.3868 | SEAT, L.H., ASSEMBLY | | 1 | |
| BD.3869 | SEAT, R.H., ASSEMBLY | | 1 | |
| | NOTE.—The above is for the supply of fully Trimmed Seats, complete with Base Frame, Runners, Adjusting Lever and Hinges, BUT LESS CUSHION. | | | |
| BD.4006 | SEAT SQUAB FRAME ASSEMBLY, L.H. | | 1 | |
| BD.4007 | SEAT SQUAB FRAME ASSEMBLY, R.H. | | 1 | |
| | NOTE.—The above is fully Trimmed and complete with Hinges. | | | |
| BD.3252 | SEAT BASE FRAME ASSEMBLY, L.H. | | 1 | |
| BD.3253 | SEAT BASE FRAME ASSEMBLY, R.H. | | 1 | |
| | NOTE.—The above is complete with Runners, Adjusting Lever and Tension Spring. | | | |
| BD.3870 | SEAT CUSHION ASSEMBLY | | 2 | |
| BD.3287 BD.3288 BD.3675 BD.3676 BD.3769 BD.3769 BD.541/10 C.2441/2 FG.105/X BD.3308/9 | Hinge for L.H. Seat Hinge for R.H. Seat Hinge, Inner, for L.H. Seat Hinge, Inner, for R.H. Seat Hinge, Outer, for R.H. Seat Hinge, Outer, for R.H. Seat Pivot for Hinges Washer, Plain, on Pivots Nut on Pivots Washer, Spring, under Nuts Runner on Seats (comprising one Plain and one | | 2 \ 6 1 Fitt 1 6 | ted from Chassis No. 70001 to 670010 led to Chassis No. 60001 and subs. 70011 and subs. |
| NS.525/6H FS.504/4H FN.104/L C.724 BD.3258 BD.3259 FS.104/4D FW.104/T FN.104/L C.724 C.3317 | Slotted Runner per set) Screw, Set, securing Runners to Floor Screw, Set, securing Runners to Seats Nut, fixing Setscrews to Seats Washer, Shakeproof, under Nuts Lever, Adjusting, on L.H. Seat Lever, Adjusting, on R.H. Seat Screw, Set, securing Adjusting Levers Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Spring, Tension, for Adjusting Levers | | 8 8 8 1 1 2 2 2 2 2 2 | |
| BD.3317 | HOODSTICKS ASSEMBLY | | 1 | |
| BD.4374 | Rubber, Sealing, in channel of Canopy Rail (44" long) | | 1 | |

| | | 670001 TO 670184 |
|--------------------------|---|-------------------------------------|
| Part No. | Description. | Plate No. per No. Unit. Remarks. |
| BD.3260 | TOGGLE CLAMP AT CENTRE AND EACH SIDE OF HOODSTICKS | 3 |
| BD.2010/3 | Screw, Set, securing Toggle Clamps | 6 |
| BD.3241 | RETAINER, ON BODY, FOR HOODSTICKS | 2 |
| AS.102/12D AS.102/16D | Screw, Set, securing Retainers Screw, Set, securing Retainers | 2 2 |
| AW.102/T | Washer, Plain, on Setscrews | 4 |
| BD.4525 | WEBBING STRIP ON HOODSTICKS (4" x 50") | 1 |
| C.2015/1 BD.532/4 | Screw, Set, securing Webbing to Rear Stick Washer, Cup, on Setscrews | 2 2 |
| BD.531/2 | Nut, Dome, on Setscrews | 2 |
| BD.3824 | HOOD CLOTH ASSEMBLY (COMPLETE WITH BACKLIGHT) | 1 |
| BD.3833 | Fastener "Durable Dot" for Hood | 4 |
| C.2015/3 BD.532/4 | Screw, Set, securing Hood Cloth to Floating Stick Washer, Cup, on Setscrews | 2 2 |
| BD.531/2 | Nut, Dome, on Setscrews | 2 |
| BD.1369 | BACKLIGHT ASSEMBLY | 1 |
| 2162 | Glass only, for Backlight | 1 |
| BD.3838 | PIN BEAD ALONG CANOPY RAIL | 1 |
| BD.3825 | TONNEAU COVER ASSEMBLY | 1 FOR L.H. DRIVE MODELS ONLY |
| BD.4646 | TONNEAU COVER ASSEMBLY | 1 FOR R.H. DRIVE MODELS ONLY |
| BD.3565 | Fastener "Zip" on Tonneau Cover | 1 |
| BD.3822 | Fastener "Tenax" securing Tonneau Cover to sides of Scuttle | 2 |
| BD.4673 | Fastener "Tenax" securing Tonneau Cover at side of Mirror | 1 |
| BD.3833 | Fastener "Durable Dot" securing Tonneau Cover at rear end | 4 |
| BD.3372 | SIDE CURTAIN ASSEMBLY, L.H. | 1 |
| BD.3373 | SIDE CURTAIN ASSEMBLY, R.H. | 1 |
| BD.3374 | FRAME ASSEMBLY FOR L.H. SIDE CURTAIN | 1 1 |
| BD.3375 | FRAME ASSEMBLY FOR R.H. SIDE CURTAIN | 1 |
| BD.3376 | GLASS FRAME ASSEMBLY FOR L.H. SIDE CURTAIN | 1 |
| BD.3377 | GLASS FRAME ASSEMBLY FOR R.H. SIDE CURTAIN | 1 |
| BD.3376/4 | WINDOW ("PERSPEX") FOR SIDE CURTAINS | 2 |
| C.2025/3 C.2025/4 | Screw, Set, around Glass Frame Screw, Set, around Glass Frame | 16 |
| BD.532/2 | Washer, Cup, on Setscrews | 10 2 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---------------------|--|--------------|------------------|----------|
| BD.3378 | FIXING ROD ASSEMBLY, L.H. | | 1 | |
| BD.3379 | FIXING ROD ASSEMBLY, R.H. | | 1 | |
| BD.3425 | Plate, Fixing, Assembly, Rear, behind Door Casings, for Side Curtain Fixing Knobs | | 2 | |
| BD.3426 | Plate, Fixing, Assembly, Front L.H., behind Door Casings, for Side Curtain Fixing Knobs | | 1 | |
| BD.3427 | Plate, Fixing, Assembly, Front R.H., behind Door Casings, for Side Curtain Flxing Knobs | | 1 | |
| M.110/8R | Screw, Wood, securing Fixing Plates | | 16 | |
| BD.3429 | KNOB, FIXING SIDE CURTAINS TO DOORS | | 4 | |
| | • | | | |
| BD.3428 C.2027/1 | Escutcheon under Fixing Knobs Screw, Set, securing Escutcheons | | 4 8 | |

| | | 6/0185 AND SUBS. | | | |
|--|--|------------------|--|---|--|
| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
| BD.4099 | BODY SHELL (COMPLETE WITH DOORS AND BOOT LID BUT LESS TRIMMINGS) (R.H. DRIVE ONLY) | U.1 | 1 | Fitted to Chassis No. 660059 and subs. | |
| BD.4100 | BODY SHELL (COMPLETE WITH DOORS AND BOOT LID BUT LESS TRIMMINGS) (L.H. DRIVE ONLY) | | 1 | 670185 and subs. | |
| BD.4101 BD.4102 BD.4258 BD.45546 BD.4114 BD.4115 BD.4159 BD.4085 BD.3163 BD.4179 BD.2476 BD.4179 BD.2476 BD.4194 BD.4195 BD.4265 BD.4265 BD.4363 BD.4363 BD.4363 BD.4357 BD.4357 BD.4357 BD.4312 BD.4357 BD.4312 BD.4357 | Sill Assembly, L.H. Sill Assembly, R.H. Bracket, mounting Sill Assemblies Angle, fixing Sill to Dash Side Face-Panel Assembly for L.H. Shut Pillar Face-Panel Assembly for R.H. Shut Pillar Wheel-Arch Assembly, L.H. Wheel-Arch Assembly, R.H. Container, Battery, Assembly Bracket Assembly, Mounting Battery Support for L.H. Rear Bumper Support for R.H. Rear Bumper Panel, Tonneau Door Assembly, L.H. Door Assembly, R.H. Lid Assy. for Luggage Compartment Frame Assy. for Luggage Compartment Frame Assy. for Petrol Filler Door, Access, for Petrol Filler Bonnet Assembly Rear End Assembly | | 1 1 4 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | SHELL ONLY | |
| SD.1005 | BODY MOUNTING DETAILS | | 1 set | | |
| BD.6635 BD.3743 BD.3743 BD.3748 BD.3143 BD.4700 BD.4373 FS.106/10D FS.106/14D FW.106/T FN.106/L FG.106/X FS.105/80 C.985 FN.105/L FG.105/X BD.4548/1 BD.4548/2 NS.237/6D C.725 C.726 BD.541/2 BD.541/14 | Pad, Mounting Pad (Felt) 12"×22" Pad (Felt) Felt (Black) 3"×45" Felt (Black) 1"×18" Felt (Black) 2"×36" Packing (Alum) for Body Mounting Screw, Set Screw, Set Washer on Setscrews Nut on Setscrews Washer, Spring, under Nuts Screw, Set Washer, Special Nut on Bolts Washer, Spring, under Nuts Packing (Alum) Packing (Alum) Screw, Set Washer, Shakeproof Washer, Shakeproof Washer, Special Washer, Special Washer, Special | | 2 2 2 2 2 1 1 1 1 1 2 2 4 4 4 4 2 2 2 2 | | |
| BD.4079 | SCUTTLE ASSEMBLY | | | RIGHT HAND DRIVE ONLY For Chassis No. 660059 to 660910 | |
| BD.4080 | SCUTTLE ASSEMBLY | | | LEFT HAND DRIVE ONLY For Chassis No. 670185 to 671492 | |
| BD.4776 | SCUTTLE ASSEMBLY (COMPLETE WITH HEATER BOX) | | | RIGHT HAND DRIVE ONLY For Chassis No. 660911 and subs. | |
| BD. 4 791 | SCUTTLE ASSEMBLY (COMPLETE WITH HEATER BOX) | | | LEFT HAND DRIVE ONLY For Chassis No. 671493 and subs. | |
| BD.4120 BD.4121 BD.4097 BD.4122 BD.4124 BD.4661 BD.4662 | Panel Assy., L.H. Panel Assy., R.H. Panel Assy., Main Outer Panel Assy., Main Outer Panel Assy., Cross Beam Bracket, Support, Inner, for Grab Rail Bracket, Support, Outer, for Grab Rail | | | RIGHT HAND DRIVE ONLY LEFT HAND DRIVE ONLY | |

| Part No. | Description. | Plate No. | No. per Unit. Remarks. |
|----------------------------------|---|--------------|--|
| | SCUTTLE ASSEMBLY (continued) | | |
| FS.104/4D | Screw, Set, securing Support Brackets | | 2 |
| FW.104/T FN.104/L | Washer on Setscrews Nut on Setscrews | | 2 2 |
| C.724 | Washer, Shakeproof, under Nuts | | 2 |
| BD.2477 | Panel, Shroud | | 1 |
| C.3766 | Grommet for Steering Column | | 1 |
| BD.3145 FS.104/5D | Plate, Cover, for Grommet Screw, Set, securing Cover Plate | | 1 2 |
| FW.104/T | Washer on Setscrews | | 2 |
| FN.104/L | Nut on Setscrews | | 2 |
| C.724 BD. 4 634 | Washer, Shakeproof, under Nuts Facia-Panel | | 2 1 RIGHT HAND DRIVE ONLY |
| BD.4606 | Facia-Panel | | 1 LEFT HAND DRIVE ONLY |
| BD.4638 | Hide for Facia-Panel, L.H. | | , 1 |
| BD.4639 | Hide for Facia-Panel, R.H. | | 1 |
| BD.4052 C.2015/2 | Piping, around Faica Panel (4' 6" long) Screw, Set, securing Facia Panel | | 4 |
| AN.102/L | Nut on Setscrews | | 4 |
| C.723 | Washer, Shakeproof, under Nuts | | 4 |
| BD.3631/2 | Roll, Trimming, around top of Scuttle (43½" long) | | 1 |
| BD.3662 | Hide, covering Trimming Roll on Scuttle $(51^{\circ} \times 9^{\circ})$ | | i |
| BD.4467 | INSTRUMENT PANEL ASSEMBLY (LESS ALL INSTRUMENTS) | U.2 | 1 Fitted from Chassis No. 660059 to 661025 670185 to 672942 Also to 672944, 672945, 672949 |
| BD.7791 | INSTRUMENT PANEL ASSEMBLY (LESS | | 1 Fitted from Chassis No. 661026 to 661036 672950 to 673008 |
| DD 0402 | INSTRUMENTS) | | Also to 672943, 672946, 672947, 672948 |
| BD.8103 | INSTRUMENT PANEL ASSEMBLY (LESS INSTRUMENTS) | | 1 Fitted to Chassis No. 673009 and subs. |
| BD.4490 | Plate, fixing Instrument Panel | | 2 |
| M.108/6R | Screw, Wood, securing Fixing Plate | | 6 |
| FN.104/L C.724 | Nut, on Setscrews, securing Fixing Plate Washer, Shakeproof, under Nuts | | 4 |
| FW.104/T | Washer, Plain, on Setscrews | | 4 |
| | SCUTTLE CASINGS | | |
| BD.4684 | Casing, Top | U.3 | 1 NOT REQUIRED WHEN RADIO FITTED |
| BD.4873 | Casing, Top | | 1 FOR USE WHEN RADIO IS FITT |
| BD.539/1 BD.532/1 | Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws | | 6 6 |
| C.2015/6 | Screw, Set, securing Casing at back | | 2 |
| BD.532/3 | Washer, Cup, on Setscrews | | 2 |
| AN.102/L | Nut on Setscrews | | 2 |
| C.723 BD.4685 | Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument | U.4 | 2 1 Fitted from Chassis No. |
| DD . 1000 | Panel | 0 | 660059 to 661025 670185 to 672942 |
| BD 0004 | Control Transcriptors Loss (1 or 1 or 1) | | Also to 672944, 672945, 672949 |
| BD.8094 | Casing, Top, enclosing bottom of Instrument Panel | | 1 Fitted to Chassis No. 661026 and subs. 672950 and subs. |
| BD.539/1 | Screw, Self-Tapping, securing Casing | | Also to 672943, 672946, 672947, 672948 |
| BD.532/1 | Washer, Cup, on Self-Tapping Screws | | 4 |
| BD.4690 | Casing, Top, Rear | U.5 | .1 |
| BD.539/4 BD.532/1 | Screw, Self-Tapping, securing Rear Casing Washer, Cup, on Self-Tapping Screws | * | 11 11 |
| BD.4688 | Casing, Side, L.H. | U.6 | 'i |
| BD.4689 | Casing, Side, R.H. | U.7 | 1 |
| BD.539/4 | Screw, Self-Tapping, securing Side Casings | | 10 10 |
| BD.532/1 BD. 4 804 | Washer, Cup, on Self-Tapping Screws Casing, Side | | 1 FOR USE ONLY WHEN RAD |
| | | | RECEIVER TYPE 4050 IS FITTED |
| BD.9939 | Side Casing, L.H. | | 1) FOR CARS NOT FITTED WITH |
| BD.9940 | Side Casing, R.H. | | 1) WING VENTILATORS |

| | | | | 670183 AIAD 30B3. |
|---|---|--------------|-----------------------|---|
| Part No. | Description. | Plate No. | No. pe Unit. | |
| C.4387 | CAR HEATER ASSEMBLY | | 1 | CAR HEATER MAY BE FITTED FROM CHASSIS 660059 TO 660910, 670185 TO 671492 FROM CHASSIS No. 660911 AND SUBS., 671493 AND SUBS. CAR HEATER IS FITTED AS STAN- |
| FN.104/L | Nut, securing Heater | | 3 | DARD EQUIPMENT |
| FW.104/T FG.104/X | Washer, Plain, on Heater Studs Washer, Spring, under Nuts | | 3 | |
| C.4391 | SEALING RUBBERS ON HEATER UNIT PIPES | | 2 | |
| C.4392 | VALVE, CONTROLLING WATER SUPPLY TO HEATER | | 1 | |
| C.4393 C.4394 C.4395 BD.1492/1 FW.104/T FG.104/X | Knob for Valve Screw, securing Knob to Valve Spindle Bracket, mounting Valve Screw, Set, securing Bracket Washer, Plain, on Stud Washer, Spring, on Setscrew | | 1 1 1 1 1 | |
| C.4396 | HEATER HOSE, FROM MANIFOLD TO VALVE | | 1 | |
| C.4397 | HEATER HOSE, FROM VALVE TO HEATER | | 1 | |
| C.4398 | HEATER HOSE, FROM HEATER TO INTER- MEDIATE RETURN PIPE | | 1 | |
| C.3994 | HEATER HOSE, FROM INTERMEDIATE PIPE TO FRONT RETURN PIPE | | 1 | FITTED ONLY TO THE FOLLOWING SPORTS MODELS: R.H. AND L.H. DRIVE FIXED HEAD COUPE MODELS, L.H. DRIVE |
| C.4399 | HEATER HOSE, FROM FRONT RETURN PIPE TO BANJO ON WATER PUMP | | 1 | |
| C.290 C.1505 C.4403 C.2296/1 C.821 | Adapter, in Manifold, for Heater Hose connection Banjo, for Hose connection (on Water Pump) Bolt, securing Banjo Washer (Copper) at each side of Banjo Clip, securing Heater Hoses to Banjo, Adapter and | | 1 2 1 4 3 | FOR OPEN 2-SEATER AND L.H. DRIVE FIXED HEAD MODELS ONLY |
| C.2905/1 | Valve Clip, securing Heater Hoses to Front Return Pipe, Intermediate Pipe, Heater and Valve | | 7 | |
| BD.215/1 | HEATER HOSE, FROM FRONT RETURN PIPE TO BANJO ON WATER PUMP | | 1 | |
| C.290 C.1505 C.1506 C.2296/1 C.821 | Adapter, in Manifold, for Heater Hose connections Banjo for Hose connection (on Water Pump) Bolt, securing Banjo Washer (Copper) at each side of Banjo Clip, securing Heater Hose to Banjo, Adapter and Valve | | 2 1 1 2 3 | FOR R.H. DRIVE FIXED HEAD MODELS ONLY |
| C.2905/1 | Clip, securing Heater Hoses to Front Return Pipe, Intermediate Pipe, Heater and Valve | | 7 | |
| BD.233 | HOSE, FROM FRONT RETURN PIPE TO REAR PIPE | | 1 | FOR R.H. DRIVE FIXED HEAD MODELS ONLY |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|---|---|--------------|-----------------------|---|
| C.4400 | INTERMEDIATE RETURN PIPE | | 1 | |
| C.4401 | FRONT RETURN PIPE | | 1] | |
| C.4402 AS.302/4H AN.102/L AG.102/X | Clip, securing Front Return Pipe Screw, Set, securing Clips Nut on Setscrews Washer, Spring, under Nuts | | 2 2 2 2 2 | FOR OPEN 2-SEATER AND L.H. DRIVE FIXED HEAD MODELS ONLY |
| C.4836 | FRONT RETURN PIPE | | 1) | |
| C.4837 C.4954 AS.302/4H AN.102/L AG.102/X | Clip, securing Front Return Pipe Clip, securing Front Return Pipe Screw, Set, securing Clips Nut on Setscrews Washer, Spring, under Nuts | | 1 1 2 2 2 | FOR R.H. DRIVE FIXED HEAD MODELS ONLY |
| C.4543 | RHEOSTAT SWITCH FOR HEATER (LUCAS 78262/B) | | 1 | |
| C.4525 C.4526 C.1042 C.2706 C.1071/2 | Cable, Connector, for Rheostat (Lucas 860138) Cable, Connector, for Rheostat (Lucas 860139) Grommet, for Heater Lead Grommet, for Rheostat Cable Clip (Bowden) securing Heater Cables | | 1 1 1 1 | FITTED TO R.H. DRIVE CARS ONLY FITTED TO L.H. DRIVE CARS ONLY |
| BD.4753 | HEATER BOX AT FRONT OF SCUTTLE | | 1 | |
| BD.4754 | HEATER BOX AT REAR OF SCUTTLE | | , 1 , | |
| BD.4136/1 | TIE PLATE FOR BEAM PANEL | | 1 | |
| C.4485 | WARNING PLATE | | 1 | |
| BD.538/4 | Screw, Self-Tapping, securing Warning Plate | | 2 | |
| | DETAILS OF DEMISTER | | | Fitted to Chassis No. 661026 and subs. 672963 and subs. |
| BD.6521 | DEMISTER OUTLET ASSEMBLY FOR HEATER MOTOR | | 1 | |
| BD.711/1 | Screw, Self-Tapping, securing Outlet Assy. to Heater Motor | | 2 | |
| BD.6523 | AIR DUCT ASSEMBLY AT BACK OF INSTRU- MENT PANEL | | . 2 | |
| BD.5281/3 | HOSE, CONNECTING OUTLET ASSEMBLY TO R.H. AIR DUCT (20" LONG) | | 1 | |
| BD.5281/4 | HOSE, CONNECTING OUTLET ASSEMBLY TO L.H. AIR DUCT (23" LONG) | | 1 | |
| BD.6666 | BRACKET, SUPPORTING AIR DUCT AT BACK OF PANEL | | 2 | |

| Part No. | Description. | Plate No. per No. Unit. Remarks. |
|-------------------------------------|---|--|
| BD.6667 | CHANNEL FOR FIXING OF AIR DUCT SUPPORT BRACKET | 1.44. 2 |
| | | and the second of the second o |
| BD.6528 | BRACKET, ON R.H. SIDE OF CROSS BEAM, SUPPORTING CHANNEL | en e |
| BD.6529 | BRACKET, ON L.H. SIDE OF CROSS BEAM, | 1 |
| | SUPPORTING CHANNEL | |
| AS.102/4D AN.102/L AW.102/T | Screw, Set, securing Support Brackets and Channel Nut on Setscrews Washer, Plain, under Nuts | 10 10 ,4 |
| BD.6601 | ESCUTCHEON ON SCREEN FACIA | |
| | • | |
| C.5472 | WINDSCREEN WASHER ASSEMBLY (TRICO 800010—JAW. 12—3) | 1 Fitted to Chassis No. 661037 and subs. |
| | NOTE.—C.5472 covers the supply of a complete Windscreen Washing Unit complete with Mounting Bracket and fixings. | 673009 and subs. Also to 661026, 661028 and 661029 |
| C.5473/1 | JAR, PUMP AND BRACKET ASSY. (800008) | 1 |
| C.5473/2 C.5473/3 | Jar only (Glass) (X.78369) Pump and Cover Assembly (X.82540) | 1 |
| C.5473/8 C.5498 | Bracket and Strap Assembly (X.78364-1E) Strainer-Tube Assembly (X.76431-1M) | i 1 |
| | HOSE CONNECTIONS | |
| C.5472/9 | Hose, from connection under Pump to "T" Junction (81846, 16" long) | 1 |
| C.5472/12 | Hose, from "T" Junction to L.H. Jet (R.H. DRIVE CARS ONLY) and to R.H. Jet (L.H. DRIVE | 1 |
| C.5472/13 | CARS ONLY) (F.15—19" long) Hose, from "T" Junction to R.H. Jet (R.H. DRIVE CARS ONLY) and to L.H. Jet (L.H. DRIVE CARS ONLY) (F.15—43" long) | 1 |
| C.5472/10 C.5472/14 C.5472/11 | Hose, from top of Pump to Control (81846—41" long) Hose, from top of Pump to Control (81846—55" long) Hose, from Control to Manifold (81846—23" long) | 1 FOR L.H. DRIVE CARS ONLY 1 FOR R.H. DRIVE CARS ONLY |
| C.5473/6 | TEE CONNECTION FOR HOSES (X.77689-1) | 1 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---|--|--------------|-----------------------|----------|
| C.5473/4 | JET ASSEMBLY COMPLETE (X.78778—C.) | | 2 | |
| C.5495 C.5499 C.5496 C.5497 | Jet only (81600-C) Button (Knurled) for Jet cleaning (81153-1C) Washer (Plastic) on Button (81635) Washer (Rubber) between Jet Assy, and Scuttle (75172) | | 2 2 2 | |
| C.5472/7 | CONTROL ASSEMBLY ON INSTRUMENT PANEL (900106) | | 1 | |
| C.5473/5 | TUBE ASSEMBLY IN MANIFOLD (770750) | | 1 | |
| BD.8106 | BRACKET, ON SCUTTLE, MOUNTING JAR BRACKET | | 1 | |
| NS.119/4D NS.119/10D BD.8107 NN.119/L C.723/A | Screw, Set, securing Bracket Screw, Set, securing Jar Bracket Piece, Distance, on Setscrew Nut on Setscrews Washer, shakeproof, under Nuts | | 4 1 1 5 5 | |

| Part No. | Description. | Plate No. | No. per Unit. Remarks | |
|--|--|--------------|--|---|
| BD.4266 | MAIN FLOORBOARD ASSEMBLY, L.H. | | 1 | |
| BD.4267 | MAIN FLOORBOARD ASSEMBLY, R.H. | | 1 LEFT HAND | DRIVE ONLY |
| BD.4268 | MAIN FLOORBOARD ASSEMBLY, L.H. | U.8 | 1] | |
| BD.4269 | MAIN FLOORBOARD ASSEMBLY, R.H. | U.9 | 1 RIGHT HAN | D DRIVE ONLY |
| BD.1493/4 BD.1711 C.274 BD.3416 NS.525/5H BD.3037 BD.3461 M.106/3R BD.1256 BD.3746 BD.3755 BD.1503/6 BD.4702 BD.4703 | Screw, Set, securing Floorboards Plate, Fixing, for Floorboards Washer, Shakeproof, on Setscrews Plate, Tapping, for Seat Slides Screw, Set, securing Tapping Plates Plate, Cover, for access to rear Jack socket Plate, Seating, for Jack Cover Plates Screw, Wood, securing Seating Plates Nut, "Tee" on Floorboards, for Gearbox Cover fixing Asbestos under R.H. Floorboard Plate, fixing Asbestos in position Screw, Wood, securing fixing Plate Felt (Black) under Floorboards (Sill) 1"×48" Felt (Black) under Floorboards (Dash) 1"×18" | | 22 18 22 4 8 2 2 2 20 12 1 1 1 1 1 3 2 2 2 | |
| | CARPETS AND FELTS | | | |
| BD.4583 BD.4584 BD.4585 BD.4595 BD.4592 BD.4592 BD.4593 BD.4596 BD.4587 BD.4588 BD.4589 BD.4590 BD.4596/6 BD.4596/7 BD.3862 BD.1286 BD.1286 BD.1814/2 M.104/4R | Carpet for Main L.H. Floorboard Carpet for Main R.H. Floorboard Carpet, Front, L.H. Carpet, Front, R.H. Carpet for Toeboard (L.H. side) Carpet for Pedals (R.H. side) Carpet for Pedals (L.H. side) Carpet for Gearbox Cover Felt for Dash Front, L.H. Felt for Dash Front, R.H. Felt for Dash Front, R.H. Felt for Gearbox Cover Seal (Rubber) for Gearbox Cover Mutocel for Gearbox Cover Carpet for Luggage Compartment Floor Fastener, securing Carpets Rivet, Pop, securing Fasteners to inside face of Scuttle Screw, Wood, securing Fasteners to Main Floor- | | LEFT HAND | D DRIVE MODELS ONLY DRIVE MODELS ONLY DRIVE MODELS ONLY D DRIVE MODELS ONLY |
| BD.4741 | boards Retainer for Main Floorboard Carpet Piping under Retainers (28° long) | | 2 2 | |
| BD.633 BD.540/3 | Screw, Self-Tapping, securing Retainers | | 10 | |
| BD.3866 | GAUNTLET FOR CHANGE-SPEED LEVER | | 1 | |
| BD.3867 | GAUNTLET FOR HANDBRAKE LEVER | | 1 | |
| BD.4876 | Retainer for Handbrake Lever Gauntlet | | 1 6 | |
| BD.542/8 BD.1502/2 | Rivet, Bifurcated, securing Retainer to Gauntlet Screw, Wood, securing Retainer to Floorboards | | 4 | |
| BD.3861 | MOQUETTE AROUND DIPPER SWITCH | | 1 | |

| | 070103 AIAD 3003. | Plate | No. per | | |
|---|---|-------|---------------------|----------|--|
| Part No. | Description. | No. | Unit. | Remarks. | |
| BD.3162 | PROPELLER SHAFT TUNNEL ASSEMBLY | U.10 | 1 | | |
| FS.404/3D BD.1493/2 | Screw, Set, securing Prop. Shaft Tunnel to Frame Screw, Set, securing Prop. Shaft Tunnel to Battery | | 4 4 | | |
| FW.104/T BD.542/3 | Container Washer, Plain, for Setscrews Washer, Oval, for Setscrews | | 4 4 | | |
| C.724 BD.3143 | Washer, Shakeproof, on Setscrews Felt (Black) between Prop. Shaft Tunnel and Battery | | 8 1 | | |
| BD.4704 | Container $(1'' \times 15'')$ Felt (Black) between Prop. Shaft Tunnel and Floor-boards $(1'' \times 30'')$ | | 2 | | |
| | | | | | |
| BD.4085 | BATTERY CONTAINER ASSEMBLY | | 1 | | |
| BD.3365 | BATTERY COVER ASSEMBLY | | 1 | | |
| BD.4705 | Felt (Black) for Battery Container (1"×21") | | 2 | | |
| | | | | | |
| | | | | | |
| BD.4078 | CLUTCH/GEARBOX COVER ASSEMBLY | | 1 | | |
| BD.1493/1 BD.1493/2 BD.542/3 C.724 | Screw, Set, securing Gearbox Cover Screw, Set, securing Gearbox Cover Washer, Oval, on Setscrews Washer, Shakeproof, on Setscrews | | 4 14 16 18 | | |
| | | | | | |
| BD.3777 | DIPSTICK INSPECTION LID (IN GEARBOX COVER) | | 1 . | | |
| | | ٠ | | | |
| BD.3012 | WINDSCREEN ASSEMBLY, L.H. | U.11 | 1 | | |
| BD.3013 | WINDSCREEN ASSEMBLY, R.H. | U.12 | 1 | | |
| BD.3017 BD.3018 | Frame Assy., L.H. Frame Assy., R.H. | | 1 | | |
| BD.3237 BD.3071 | Glass only Everseal for Screen Glasses $(1\frac{1}{2}"\times13")$ | | 2 1 | | |
| BD.6205 BD.2159/3 C.2015/9 C.2015/10 | Rubber, sealing Screen (65" long) Rubber (Sponge) sealing Screen (21" long) Screw, Set, securing Windscreen to Side Pillars Screw, Set, securing Windscreen to Side Pillars | | 1 2 2 2 | | |
| | | | | | |
| BD.3014 | WINDSCREEN CENTRE PILLAR ASSEMBLY | U.13 | 1 | | |
| BD.3239 C.2015/5 | Hook at top of Centre Pillar, for Hood Clamp Screw, Set, through Hook | U.14 | 1 3 | | |
| BD.4696 | Nut (Special) securing Centre Pillar | U.15 | 1 | | |

| | | 670185 AND SUBS. | | | | |
|--|---|----------------------|--------------------------------------|--|--|--|
| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | | |
| BD.3765 | WINDSCREEN SIDE PILLAR, L.H. | U.16 | 1 | | | |
| BD. 3766 | WINDSCREEN SIDE PILLAR, R.H. | U.17 | 1 | | | |
| BD.4672 FB.108/14D FW.108/T C.728 BD.3887 BD.3545 BD.3539/1 BD.3822 | Plate, Tapping, for Side Pillar fixing Bolt, securing Side Pillars Washer, Plain, on Bolts Washer, Shakeproof, on Bolts Grommet (Rubber) under feet of Side Pillars Hook at top of Side Pillars for Hood Clamps Screw, Set, securing Hooks Fastener ("Tenax") at bottom of Side Pillars | U.18 U.19 U.20 | 2 4 4 4 2 2 4 2 | | | |
| DD.3022 | RACING WINDSCREEN ASSEMBLY | U.21 | 2 | FOR DETAILS, SEE PAGE 95B | | |
| C.2887 | INTERIOR MIRROR ON SCUTTLE | U.22 | 1 | Fitted from Chassis No. 660059 to 660207 | | |
| C.2887/1 C.2887/2 | Bracket only Glass only | | 1 | 670185 to 670608 | | |
| C.4097 | INTERIOR MIRROR ON SCUTTLE | | 1 | Fitted from Chassis No. 660208 to 661051 670609 to 673586 | | |
| C.4097/1 C.2887/2 | Bracket only Glass only | | | | | |
| C.5500 | INTERIOR MIRROR ON SCUTTLE | | 1 | Fitted to Chassis No. 661052 and subs. | | |
| C.5500/1 C.5500/2 | Bracket only Glass only | | 1 | 673587 and subs. | | |
| C.2015/6 AN.102/L C.723 BD.4673 | Screw, Set, securing Mirror to Scuttle Nut on Setscrews Washer, Shakeproof, under Nut Fastener ("Tenax") through Mirror Bracket (Tonneau Cover fixing) | | 1 | 2 required for Chassis No. 660880 and subs. 671466 and subs. Fitted from Chassis No. 660059 to 660879 670185 to 671465 | | |
| BD.6229 | COWL FOR MIRROR C.2887 | | 1] | FOR R.H. DRIVE CARS ONLY WHEN | | |
| BD.6230 | COWL FOR MIRROR C.4097 | | 1] | RACING SCREENS ARE FITTED | | |
| BD.6 231 | COWL FOR MIRROR C.2887 | | 1] | FOR L.H. DRIVE CARS ONLY WHEN | | |
| BD.6232 | COWL FOR MIRROR C.4097 | | 1 | RACING SCREENS ARE FITTED | | |
| BD.539/4 | Screw, Self-Tapping, securing Mirror Cowl | | 6 | | | |
| BD.6233 | COWL OVER L.H. SCREEN PILLAR APERTURE | | 1 | FOR USE WHEN RACING SCREENS | | |
| BD.6234 | COWL OVER R.H. SCREEN PILLAR APERTURE | | 1 | ARE FITTED | | |
| BD.539/4 | Screw, Self-Tapping, securing Cowl for Screen Pillar Aperture | | 8 | | | |

| Part No. | Description. | Plate No. | No. p Unit | |
|------------------------|--|--------------|---------------|------------|
| BD.4194 | DOOR, LEFT HAND | U.23 | 1 | SHELL ONLY |
| BD.4195 | DOOR, RIGHT HAND | | 1 | SHELL ONLY |
| BD.4349 | Lock for L.H. Door (complete with Safety Catch | | 1 | |
| BD.4350 | mechanism) Lock for R.H. Door (complete with Safety Catch mechanism) | | 1 | |
| BD.4347 | Plate, covering L.H. Door Lock | | 1 | |
| BD.4348 BD.4240 | Plate, covering R.H. Door Lock Handle for Safety Catch, L.H. (W.B.1/3298) | | 1 | |
| BD.4241 | Handle for Safety Catch, R.H. (W.B.1/3299) | | 1 | |
| BD.4242 | Screw, securing Handles | | 2 | |
| BD.4243 BD.3556 | Washer, Shakeproof, on Screws Bracket, fixing Door Lock Straps | | 2 | |
| BD.3559 | Strap (Leather) operating Door Locks (complete with Swivel BD.3540) | | 2 | |
| BD.539/16 | Screw, Self-Tapping, securing Straps | | 4 | |
| BD.4438 BD.4439 | Casing Assembly for L.H. Door Casing Assembly for R.H. Door | | 1 | |
| BD.539/16 | Screw, Self-Tapping, securing Casings | | 10 | |
| BD.532/1 BD.3660 | Washer, Cup, on Self-Tapping Screws Hide, covering Trimming Roll on L.H. Door | | 10 1 | |
| BD.3661 | (29"×8") Hide, covering Trimming Roll on R.H. Door | | 1 | |
| BD.3631/1 | $(29^{\prime\prime}\times8^{\prime\prime})$ Roll at top of Doors $(27\frac{1}{2}^{\prime\prime} \text{ long})$ | | 2 | |
| BD.3630 | Plug in ends of Piping | | 8 | |
| BD.4649 | Strip, Tacking, for Door Waist | | 2 | |
| BD.4650 BD.4651 | Strip, Tacking, for Door Waist Roll Strip, Tacking, for Quarter Waist Roll | | 2 | |
| BD.4652 | Strip, Tacking, for Scuttle Waist Roll | | 1 | |
| BD.2045/4 | Rubber, Sealing, for Hinge Pillar and Door Sills (30" long) | | 4 | |
| BD.2899/4 BD.633 | Piping (Draught Excluder) for Hinge Pillar (25" long) Piping (Draught Excluder) for Door Sills (28" long) | | 2 2 | |
| | | | | |
| BD.4349 | DOOR LOCK ASSEMBLY, L.H. | | 1. | |
| | | | | |
| BD.4350 | DOOR LOCK ASSEMBLY, R.H. | | 1 | |
| BD.4371 | Lock only | U.24 | 2 | |
| AS.502/3H | Screw, Set, securing Lock to Cover Plate | | 8 | |
| AN.102/L BD.3557 | Nut on Setscrews Link, between Door Lock and Lever | U.25 | 8 2 | |
| AS.302/4H | Screw, Set, securing Link to Door Lock | 0.23 | 2 | |
| AW.102/C | Washer, Plain, on Setscrews | | 2 | |
| AN.102/L C.723 | Nut on Setscrews Washer, Shakeproof, under Nuts | | 2 | |
| J.104/6S | Pin, Clevis, securing Link to Operating Lever | | 2 | |
| FW.104/T L.103/6U | Washer on Clevis Pins Pin, Split, through Clevis Pins | | 2 2 | |
| BD.3670 | Lever, Operating, Assy., for L.H. Door Lock | U.26 | 1 | |
| BD.3671 | Lever, Operating, Assy., for R.H. Door Lock | | 1 | |
| R.303/8W AW.102/C | Rivet, securing Lever to Bracket Washer, between Bracket and Operating Lever | | 2 2 | |
| AW.102/T | Washer, under head of Rivet | | 2 | |
| BD.4338 | Bracket for Operating Lever | U.27 | 2 | |
| AS.502/3H AS.502/4H | Screw, Set, securing Bracket to Cover Plate Screw, Set, securing Bracket to Cover Plate | | 2 | |
| AN.102/L | Nut on Setscrews | | 4 | |
| BD.4341 AS.502/3H | Guide for Operating Lever Screw, Set, securing Guide to Cover Plate | U.28 | 2 4 | |
| AN.102/L | Nut on Setscrews | | 4 | |
| BD.3316 | Spring, between Lever and Bracket | U.28A | 2 | |
| | | | | |

| | | 6/0185 AND SUBS. | | | |
|---|---|------------------|-----------------------|----------|---|
| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
| BD.4347 | COVER PLATE FOR L.H. DOOR LOCK | U.29 | 1 | | |
| BD.4348 | COVER PLATE FOR R.H. DOOR LOCK | | 1 | | |
| AS.502/3H AN.102/L BD.4340 AS.502/2H AN.102/L | Screw, Set, securing Cover Plate to Door Nut on Setscrews Pivot Screw, Set, securing Pivot to Cover Plates Nut on Setscrews | U.30 | 8 8 2 4 4 | | |
| BD.4344 | TENSION LEVER ASSEMBLY FOR L.H. DOOR LOCK | U.31 | 1 | | |
| BD.4343 | TENSION LEVER ASSEMBLY FOR R.H. DOOR LOCK | | 1 | | |
| BD.4376 | ANCHOR BRACKET ASSEMBLY | U. 32 | 2 | | |
| AS.502/3H C.723 AN.102/L C.724 BD.4466 | Screw, Set, securing Anchor Bracket Washer, Shakeproof, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Spring, between Anchor Bracket and Pivot Pin | U. 33 | 2 2 2 2 2 | | |
| BD.4346 | LINK BETWEEN TENSION LEVER AND SAFETY CATCH | U.34 | 1 | | |
| L.102/4U AW.102/C | Pin, Split, securing Link to Tension Lever and Safety Catch Washer, Plain, behind Split Pins | | 4 | | |
| BD.4431 | SAFETY CATCH ASSEMBLY | U.35 | 2 | | • |
| AS.502/2H C.724 | Screw, Set, securing Safety Catch to Door Washer, Shakeproof, on Setscrews | | 4 4 | | |
| BD.4240 | HANDLE FOR SAFETY CATCH, L.H. | U.36 | 1 | | |
| BD.4241 | HANDLE FOR SAFETY CATCH, R.H. | | 1 | | |
| BD.4242 BD.4243 | Screw, securing Handles Washer, Shakeproof, on Screws | | 2 2 | | |
| BD.2930 | STRIKER FOR DOOR LOCKS | U.37 | 2 | | |
| AS.302/4H BD.530/2 C.723 | Screw, Set, securing Strikers Nut, Clinch, on Setscrews Washer, Shakeproof, under Nuts | | 4 4 | | |

| | 6/0185 AND 5085. | | | |
|---|---|-------------------|---|----------------------------------|
| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
| BD.2941 | DOOR DOVETAIL BUFFER | U.38 | 2 | |
| AS.502/4H C.723 AN.102/L | Screw, Set, securing Buffers Washer, Shakeproof, on Setscrews Nut on Setscrews | | 8 8 8 | |
| BD.2942 | DOOR DOVETAIL STRIKER | U.39 | 2 | |
| AS.502/4H AN.102/L C.723 | Screw, Set, securing Strikers Nut on Setscrews Washer, Shakeproof, under Nuts | | 8 8 8 | |
| BD.3560 | COVER PLATE, ON DOOR CASINGS, FOR | U.40 | 2 | |
| BD.524/4 | Rivet, Bifurcated, for Cover Plates | | 8 | |
| BD.4438 | CASING ASSEMBLY FOR L.H. DOOR | U. 4 1 | 1 | |
| BD.4439 | CASING ASSEMBLY FOR R.H. DOOR | | 1 | |
| BD.4052 BD.3049 BD.4447 BD.4448 BD.3822 | Piping Assembly at top of Doors Piping Assembly around Door Casings Pocket for L.H. Door Pocket for R.H. Door Fastener "Tenax" on Doors | | 2 2 1 1 2 | |
| BD.4691 | CASING ASSEMBLY AT BOTTOM OF L.H. | . U.42 | 1 | |
| BD.4692 | CASING ASSEMBLY AT BOTTOM OF R.H. | • | 1 | |
| BD.539/4 BD.532/1 | Screw, Self-Tapping, securing Casings Washer, Cup, on Self-Tapping Screws | | 16 16 | |
| BD.4157 | DOOR HINGE | U.43 | 4 | |
| BD.4701/1 BD.4701/2 FS.104/5D FN.104/L C.724 BD.4155 | Shim, between Hinge and Door (-036" thick) Shim, between Hinge and Door (-064" thick) Screw, Set, securing Hinges to Doors Nut on Setscrews Washer, Shakeproof, under Nuts Plate, mounting Hinges | | As req'd As req'd } C As req'd C As req'd | hoose Shims of desired thickness |
| BD.4156 | PIVOT PIN THROUGH HINGE BOSS | U.45 | 4 | |
| FW.104/T FN.104/L C.724 | Washer on Pivot Pins Nut on Pivot Pins Washer, Shakeproof, under Nuts | | 4 4 4 | |
| BD.4675 | STOP PLATE FOR BOTTOM HINGE (ON HINGE PILLAR) | U.46 | 2 | |

| | | 070103 AND 3003. | | | |
|----------------------------------|---|------------------|---------------|--|--|
| Part No. | Description. | Plate No. | No. p Unit | | |
| | LUGGAGE COMPARTMENT | | | | |
| BD.4173 | Floor Assembly for Luggage Compartment | U.47 | 1 | NOT REQUIRED WHEN WIRE ROAD WHEELS ARE FITTED | |
| BD.7760 | Floor Assembly for Luggage Compartment | | 1 | REQUIRED WHEN WIRE ROAD | |
| BD.4184 BD.1502/2 BD.532/2 | Plate, Cover, for Petrol Tank Filler Neck Screw, Wood, securing Cover Plate Washer, Cup, on Woodscrews | U.48 | 1 3 3 | WHEELS ARE FITTED | |
| 3D.538/5 3D.4506 | Screw, Self-Tapping, securing Cover Plate Floorboard, L.H. for Luggage Compartment | U.49 | 3 1 | | |
| 3D.4507 3D.4663 | Floorboard Assy., R.H., for Luggage Compartment Felt (Black) 1" × 39" under forward edge of Floor- | U.50 | 1 | | |
| 3D.4664 | boards Felt (Black) 1"×36" under rear edge of Floor- boards | | 1 | | |
| 3D.4665 | Felt (Rubberised) 3½"×24" under side edges of Floorboards | | 2 | | |
| 3D.4666 3D.1493/3 | Felt (Rubberised) 2"×12" for top of Petrol Tank Screw, Set, securing Floorboards | | 2 12 | | |
| S.404/6H SD.1711 | Screw, Set, securing Floorboards Plate, Fixing, for Setscrews | | 4 16 | | |
| C.724 | Washer, Shakeproof, on Setscrews | | 16 | | |
| 3D.3143 3D.2045/2 | Felt (Black) 1" × 38" around Petrol Tank Filler Neck Seal (Sponge Rubber) at front of Luggage Compart- ment Aperture (33" long) | | 1 | | |
| BD.4694 BD.1814/1 | Retainer for Sponge Rubber Seal Rivet, Pop, securing Retainer | | 1 6 | | |
| 3D.4190 | GUTTER ASSEMBLY AROUND LUGGAGE | | 1 | | |
| | COMPARTMENT LID APERTURE | | | | |
| 3D.4875/1 3D.4875/2 | Rubber, Sealing, around Gutter (104' long) Rubber, Sealing, around Gutter (104' long) | | 1} | Fitted from Chassis No. 660001 to 661164 670001 to 674940 | |
| 3D.9345/1 | SEALING RUBBER ON FLANGE OF LUGGAGE LID (104" LONG) | | 1 | Fitted to Chassis No. 661165 and subs. 674941 and subs. | |
| 3D. 42 65 | LUGGAGE COMPARTMENT LID ASSEMBLY (COMPLETE WITH CASING, LIGHT, LOCK AND HANDLE BUT LESS HINGES) | | 1 | | |
| 3D.8256 | Lid only (comprising Panel, Wood Frame and Lock- | U.51 | 1 | | |
| 3D.4436 | ing Bar) Casing on Luggage Lid | U.52 | 1 | | |
| 3D.539/1 3D.532/1 | Screw, Self-Tapping, securing Casing Washer, Cup, on Screws | | 23 23 | | |
| SD. 432 2 AS.502/5H | Lock for Luggage Lid | U.53 | 1 2 | | |
| N.102/L | Screw, Set, securing Lock Nut on Setscrews | | 2 | | |
| C.2501/3 3D.3266 | Washer, Plain, under Nuts Handle for Luggage Lid (complete with Sealing | U.54 | 2 1 | | |
| 3D. 779 8 | Washer) Locking-Barrel for Luggage Lid Handle (WB.1/3325) | | 1 | | |
| 3D.3265/9 | Screw, Set, through flanges of Handle | U.55 | 2 | | |
| 3D.4323 1.108/7R | Socket Assy. for Lock Screw, Wood, securing Sockets | 0.33 | 6 | | |
| SD.82 [°] AS.502/4H | Escutcheon for Lock Rod Screw, Set, securing Escutcheon | | 2 | | |
| AS.502/4H AN.102/L | Nut on Setscrews | | 4 | | |
| C.723 [*] BD,826 | Washer, Shakeproof, under Nuts | U.56 | 4 | | |
| 5D.040 | Light on Luggage Lid | 0.30 | • | | |

| | 670185 AND SUBS. | | |
|--|---|--------------|--|
| Part No. | Description. | Plate No. | No. per Unit. Remarks. |
| | FIXINGS FOR MISCELLANEOUS ITEMS IN LUGGAGE COMPARTMENT | | |
| BD.3431 BD.6811 BD.3527 | Clip, fixing Jack Clip Bracket Assy., fixing Jack Socket holding Jack | | 1 ALTERNATIVE TO BD.6811 1 ALTERNATIVE TO BD.3431 |
| BD.3535 BD.3432 BD.2385 | Clip, securing Jack Socket Clip, fixing Jack Ratchet Clip, fixing Wheel Brace | | 1 2 3 |
| BD.3434 BD.3438 | Clip, fixing Tyre Pump Clip, fixing Budget Key for Rear Wheel Covers | | 2 2 |
| BD.3430 | Clip, fixing Grease Gun | | 2 Fitted from Chassis No. 660059 to 660881 670185 to 671600 |
| BD.5211 | Clip, fixing Grease Gun | | 2 Fitted to Chassis No. 660882 and subs. 671601 and subs. |
| BD.3437 | Strap, securing Tool Roll | | 1 |
| BD.4327 | PROP FOR LUGGAGE LID IN "OPEN" POSITION | U.57 | 1 |
| BD.1708/1 | Washer, Spring (Double Coil) on Prop | | 1 |
| FW.105/T L.103/7U BD.2244 | Washer, Plain, behind Spring Washer Pin, Split, securing Prop in Bracket Clip, Spring, housing Prop when not in use | | 1 1 1 Fitted from Chassis No. 660059 to 660104 670185 to 670338 |
| BD.3839 | Clip, Spring, housing Prop when not in use | | 1 Fitted to Chassis No. |
| BD.539/1 | Screw, Self-Tapping, securing Clip | | 660105 and subs. 670339 and subs. |
| BD.4287 | HINGE FOR LUGGAGE COMPARTMENT LID | U.58 | 2 |
| FS.104/5D BD.541/9 | Screw, Set, securing Hinges to Lid Washer on Setscrews | | 6 |
| C.724 BD.4311 | Washer, Shakeproof, on Setscrews | | 6 2 |
| FN.204/L C.724 | Pin, Pivot, through Boss of Hinges Nut on Pivot Pins Washer, Shakeproof, under Nuts | | 2 2 |
| BD.4172 | SPARE WHEEL TRAY ASSEMBLY | U.59 | 1 |
| BD.4515 | CLAMP SECURING SPARE WHEEL IN TRAY | U.60 | 1] |
| C.3864 BD.2244 BD.1814/2 BD.4520 | Nut for Clamp Clip, Spring Rivet, Pop, securing Spring Clip Hinge Pin for Spare Wheel Clamp | U.61 | 1 NOT REQUIRED WHEN WIRE ROA 1 WHEELS ARE FITTED 1 1 |
| BD.7766 | CLAMP SECURING SPARE WHEEL IN TRAY | | 1] |
| BD.7782 BD.2244 BD.1814/2 BD.7779 | Nut for Clamp Clip, Spring Rivet, Pop, securing Spring Clip Hinge Pin for Spare Wheel Clamp | | 1 FOR USE WHEN WIRE ROAD 1 WHEELS ARE FITTED 1 |
| BD.4363 | PETROL FILLER BOX ASSEMBLY | U.62 | 1 |
| BD.4369 BD.4368 | Tube, Drain (Rubber) on Petrol Filler Box Hose, Petrol Pipe | | 1 |

| | | 670185 AND SUBS. | | | | |
|--|---|------------------|-------------------------|---|--|--|
| Part No. | Description. | Plate No. | No. per Unit. | r Remarks. | | |
| BD.3220 | VENT PIPE EXTENSION | U.63 | 1 | | | |
| BD.3221 BD.3210 | Tube (Rubber) for Vent Pipe Extension Grommet on Vent Pipe Extension | U.64 U.65 | 1 | | | |
| BD.4357/1 | DOOR FOR PETROL FILLER BOX | | 1 | Fitted from Chassis No. 660059 to 660074 670185 to 670266 | | |
| BD.4357 | DOOR FOR PETROL FILLER BOX | U.66 | 1 | Fitted to Chassis No. 660075 and subs. 670267 and subs. | | |
| BD.4354 AN.102/L C.738 FW.105/T | Seal (Rubber) around Door aperture Nut, securing Door to Hinge Plate Washer, Shakeproof, under Nuts Washer, Packing, between Door and Hinge Plate | U.67 | 1 4 4 As req'd | | | |
| BD.4358/1 | HINGE ASSY. FOR PETROL FILLER DOOR | 1 | As req o | Fitted from Chassis No. 660059 to 660074 | | |
| BD.4358 | HINGE ASSY. FOR PETROL FILLER DOOR | U.68 | 1 | 670185 to 670266 Fitted to Chassis No. 660075 and subs. 670267 and subs. | | |
| AS.302/3H C.738 | Screw, Set, securing Hinge Washer, Shakeproof, on Setscrews | | 2 2 | 07 V207 and 3003. | | |
| BD.4360 | LOCK ASSY. FOR PETROL FILLER DOOR | U.69 | 1 | | | |
| BD.8071 | Clip, Spring, securing Lock to Door (WB.7/4098) | | 1 | | | |
| BD.4353 | STRIKER ASSY. FOR PETROL FILLER LOCK | U.70 | 1 | | | |
| AS.302/3H C.738 | Screw, Set, securing Striker Washer, Shakeproof, on Setscrews | | 2 2 | | | |
| BD.3699 | PETROL FILLER CAP | U.71 | 1 | | | |
| BD.3189 BD.4394 L.102/4U | Seal (Cork) inside Filler Cap Spring, between Filler Cap and Hinge Plate Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate | U.72 U.73 | 1 1 1 | | | |
| C.2501/3 | Washer, Plain, under Split Pin | | 1 | | | |
| BD.8735 | FRONT WING, R.H. | | 1) | Fitted from Chassis No. | | |
| BD.8736 | FRONT WING, L.H. | U.74 | 1 } | 660059 to 660674 670185 to 671096 | | |
| BD.8737 | FRONT WING, R.H. | | 1] | Fitted to Chassis No. | | |
| BD.8738 | FRONT WING, L.H. | | 1] | 660675 to 661024 671097 to 672926 | | |
| BD.8739 | FRONT WING, R.H. | | 1) | Fitted to Chassis No. | | |
| BD.8740 | FRONT WING, L.H. | | 1 | 661025 and subs. 672927 and subs. | | |
| BD.4144 | VALANCE ALONG BACK OF L.H. FRONT WING | | 1 | | | |
| BD.4145 | VALANCE ALONG BACK OF R.H. FRONT WING | | 1 | | | |
| BD.4551 | VALANCE AT FORWARD END OF L.H. FRONT WING | U.75 | i 1 | | | |
| BD.4552 | VALANCE AT FORWARD END OF R.H. FRONT WING | | 1 | | | |

| | 6/0185 AND SUBS. | | | | |
|---|---|--------------|--------------------------------|---|----|
| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
| BD. 422 0 | EXTENSION AT REAR OF L.H. FRONT WING | | 1 | | |
| BD.4221 | EXTENSION AT REAR OF R.H. FRONT WING | | 1 | | |
| FS.104/4D FS.104/6D FN.104/L | Screw, Set, securing Wing Valance Extensions Screw, Set, securing Wing Valance Extensions Nut on Setscrews | | 18 2 20 | | |
| C.724 C.4170 NS.125/4D | Washer, Shakeproof, under Nuts Bracket, on Chassis Frame, for Wing Valance Screw, Set, securing Brackets | | 20 2 3 | | |
| BD.5183 | VENTILATOR BOX ASSY. IN L.H. FRONT WING | | 1 | | |
| BD.5184 | VENTILATOR BOX ASSY. IN R.H. FRONT WING | | 1 | Fitted to Chassis No. 660675 and subs. 671097 and subs. | |
| NS.513/4H NN.131/L C.721 | Screw, Set, securing Ventilator Boxes Nut on Setscrews Washer, Shakeproof, under Nuts | | 12 12 12 | | |
| BD.5188 | DOOR ASSEMBLY FOR VENTILATORS | | 2 | Fired to Charie No. | |
| AN.102/L AW.102/T C.723 | Nut, securing Doors to Ventilator Boxes Washer, Plain, under Nuts Washer, Shakeproof, under Nuts | | 6 6 6 | Fitted to Chassis No. 660675 and subs. 671097 and subs. | |
| | | | | | |
| BD.5190 | SEAL (RUBBER) FOR VENTILATOR DOORS | | 2 | Fitted to Chassis No. 660675 and subs. 671097 and subs. | |
| BD.5189 | GAUZE FOR VENTILATORS | | 2] | Fitted to Chassis No. | |
| BD.711/6 | Screw, Self-Tapping, securing Gauze | | 4 | 660675 and subs. 671097 and subs. | |
| BD.5127 | HINGE ASSEMBLY FOR L.H. VENTILATOR | | 1) | | |
| BD.5128 | HINGE ASSEMBLY FOR R.H. VENTILATOR | | 1 | | |
| BD.5123 BD.650 C.3350 R.303/5W BD.5176 BD.5125 C.3571 | Plunger, for Springs Rivet, Fulcrum, for Plungers Washer (Brass) at each side of Plungers Rivet, securing Plungers Spring Sleeve, holding Spring Slug, in Sleeve, adjusting tension on Spring | Δe | 2 4 2 2 2 req'd | Fitted to Chassis No. 660675 and subs. 671097 and subs. | \$ |
| L.114/10U | Pin, Split, securing Sleeve | 7.3 | 2 | | |
| BD.3712/1 | Plate, Adjusting, between Hinge and Door (-064" thick) | As | req'd | | |
| BD.3712/2 | Plate, Adjusting, between Hinge and Door (.048" thick) | As | req'd | | |
| BD.3712/3 | Plate, Adjusting, between Hinge and Door (.036" thick) | | req'd | Fitted to Chassis No. 660675 and subs. | |
| BD.3712/4 | Plate, Adjusting, between Hinge and Door (.022" thick) | As | req'd | 671097 and subs. | |
| AS.502/3H AN.102/L AG.102/T | Screw, Set, securirng Hinges to Vent Boxes Nut on Setscrews Washer, Spring, under Nuts | | 6 6 | | |

| | | | 070105 AND 3083. |
|---|--|--------------|---|
| Part No. | Description. | Plate No. | No. per Unit. Remarks. |
| BD.4050 | HEADLAMP CONTAINER ON L.H. FRONT WING | U.76 | 1 . |
| BD.4051 | HEADLAMP CONTAINER ON R.H. FRONT WING | U.77 | 1 |
| BD.2561 BD.2563/1 FW.105/T AW.104/T | Motif on Headlamp Containers Screw, Set (Special) securing Motifs Washer for Motifs Washer on Setscrews | U.78 | 2 4 Fitted from Chassis No. 8 660001 to 661156 4 670001 to 674717 |
| BD.9266/1 FW.105/T AN.104/L AW.104/T | Stud for fixing of Motif to Headlamp Washer on Studs Nut on Studs Washer under Nuts | | Fitted to Chassis No. 661157 and subs. 674718 and subs. |
| BD.3551 | STEADY FOR L.H. FRONT WING | | 1 |
| BD.3552 | STEADY FOR R.H. FRONT WING | | 1 |
| FS.104/5D FW.104/T FN.104/L C.724 BD.3553 AS.102/4D AW.102/T AN.102/L C.723 | Screw, Set, securing Wing Steady Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Bracket, Attachment, for Front Wing Steady Screw, Set, securing Attachment Brackets Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts | | 4 8 4 4 2 6 6 6 6 |
| BD.4469 | TIE ROD BETWEEN FRONT WINGS (201/ LONG) | | 1 |
| BD.4312 | REAR WING ASSEMBLY, LH. | U.79 | 1 NOT REQUIRED WHEN WIRE ROAD |
| BD.4313 | REAR WING ASSEMBLY, R.H. | | 1 WHEELS ARE FITTED |
| BD.9458 | REAR WING ASSEMBLY, L.H. | | 1 FOR USE WHEN WIRE ROAD |
| BD.9459 | REAR WING ASSEMBLY, R.H. | | 1 WHEELS ARE FITTED |
| BD.2401/1 BD.2401/2 BD.542/2 C.725 | Screw, Set, securing Rear Wings Screw, Set, securing Rear Wings Washer, Special, on Setscrews Washer, Shakeproof, on Setscrews | | 4 4 14 14 |
| BD.813 | PIPING BETWEEN REAR WINGS AND BODY (6 FT. LONG) | | 2 SUPERSEDED BY BD.8598 |
| BD.8598 | PIPING BETWEEN REAR WINGS AND BODY (6 FT. LONG) | | 2 SUPERSEDES BD.813 |
| BD.4512 | STEADY FOR L.H. REAR WING | | 1 |
| BD.4513 | STEADY FOR R.H. REAR WING | | 1 |
| BD.4514 BD.4709 FS.104/4D FW.104/T FN.104/L C.724 | Bracket, Attachment, for Rear Wing Steady Plate, Steady, for Rear Wings Screw, Set, securing Steady Plate Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, on Setscrews | | 2 2 2 2 2 2 2 |

| | 6/0185 AND 5085. | | | |
|---|---|--------------|--------------------------|--|
| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
| BD.4449 | COVER FOR L.H. REAR WING | U.80 | 1 NOT | REQUIRED WHEN WIRE SPOKE |
| BD.4450 | COVER FOR R.H. REAR WING | | | AD WHEELS ARE FITTED |
| BD.2122 | LOCK FOR L.H. REAR WING COVER | U.81 | 1] | |
| BD.2121 AS.502/4H AN.102/L C.723 | LOCK FOR R.H. REAR WING COVER Screw, Set, securing Locks Nut on Setscrews Washer, Shakeproof, under Nuts | | | REQUIRED WHEN WIRE SPOKE AD WHEELS ARE FITTED |
| 2312 | ESCUTCHEON FOR LOCKS ON WING COVERS | U.82 | Î RO | REQUIRED WHEN WIRE SPOKE AD WHEELS ARE FITTED |
| BD.540/9 | Screw, Self-Tapping, securing Escutcheons | | 4] | |
| BD.4764/1 | SEALING RUBBER FOR WING COVERS (56" LONG) | | | REQUIRED WHEN WIRE SPOKE AD WHEELS ARE FITTED |
| BD.7769 | MOULDING (BRASS) AROUND L.H. REAR WING | | 1 | |
| BD.7770 | MOULDING (BRASS) AROUND R.H. REAR WING | | 1 SP | UIRED ONLY WHEN WIRE OKE ROAD WHEELS ARE TED |
| BD.1229/1 | Screw, Self-Tapping, securing Mouldings | | 16 | |
| BD.4412 | BONNET ASSEMBLY | U.83 | 1 | |
| FS.104/4D FW.104/T C.724 | Screw, Set, securing Bonnet to Hinges Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews | | 8 8 8 | |
| BD.4379 | BONNET HINGE ASSEMBLY | U.84 | 2 | |
| BD.4440 PS.104/4D FW.104/T C.724 | Plate, Tapping, for Bonnet Hinge Screw, Set, securing Hinges to Dash Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews | | 4 8 8 8 | |
| BD.3270 | PROP ASSEMBLY, HOLDING BONNET IN "OPEN" POSITION | U.85 | 1 | |
| BD.3272 FW.105/T L.102/6U BD.1708/1 BD.4699 | Pin, hingeing Bonnet Prop Washer, Plain, on Hinge Pin Pin, Split, through Hinge Pin Washer, Spring, on Hinge Pin Bracket and Clip Assy., fixing Prop in "closed" position | | 6600 | from Chassis No. 259 to 660115 |
| BD.4834 | Bracket and Clip Assy., fixing Prop in "closed" position | | 1 Fitted 6601 | 185 to 670377 to Chassis No. 16 and subs. |
| AS.402/4H AN.102/L C.723 | Screw, Set, securing Clip Assy. Nut on Setscrews Washer, Shakeproof, under Nuts | | 6700 2 2 2 2 | 378 and subs. |
| BD. 44 18 | STAY ASSEMBLY FOR BONNET PROP | | 1 | |
| FS.104/4D FS.104/3D C.724 | Screw, Set, securing Stay Screw, Set, securing Stay Washer, Shakeproof, on Setscrews | | 2 1 3 | |
| | | | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|---|--------------|---|---|
| BD.3271 | SOCKET ASSEMBLY FOR BONNET PROP | U.86 | 1 | |
| FS.104/4D FN.104/L C.724 | Screw, Set, securing Socket to Front Wing Valance Nut on Setscrews Washer, Shakeproof, under Nuts | | 2 2 2 | |
| BD.2950 | CATCH ASSEMBLY FOR BONNET | U.87 | 1 | |
| BD.2952 NS.125/4D C.724 | Plate, Guide, for Bonnet Catch Screw, Set, securing Bonnet Catch Washer, Shakeproof, on Setscrews | U.88 | 1 3 3 | |
| BD.2951 | HOOK AND STRIKER ASSY. FOR BONNET CATCH | U.89 | 1 | |
| BD.5106 FS.104/4D FW.104/T FN.104/L C.724 | Bracket, mounting Hook and Striker Screw, Set, securing Hook and Striker Washer on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts | U.90 | 1 9 4 9 | |
| BD.2954 | CONTROL WIRE, RELEASING BONNET CATCH (COMPLETE WITH KNOB AND FITTINGS) | U.91 | 1 . | |
| C.2711 NS.131/5D NN.131/L C.725 C.2735 | Clip, securing Control Wire Screw, Set, securing Clip Nut on Setscrew Washer, Shakeproof, under Nut Clip, securing Control Wire | | 1 1 1 2 | ONE ONLY REQUIRED FOR L.H DRIVE CARS |
| C.4443 | ADJUSTER FOR BONNET CONTROL WIRE | | 1 | |
| C.3880 FW.104/T NN.125/L C.724 | Post for Control Wire Adjuster Washer, Plain, for Post Nut for Adjuster Washer, Shakeproof, under Nuts | | 1 4 5 5 | |
| BD.4616 | RUBBER BUFFER FOR BONNET REST | U.92 | 6 | |
| BD.2877 | RADIATOR GRILLE ASSEMBLY (IN BONNET) | U.93 | | |
| BD.2877/1-2 BD.2877/3 BD.2877/4 BD.2877/5 BD.2877/6 BD.2877/7 BD.2877/8 BD.2877/9 BD.2877/10 BD.2877/11 BD.2877/12 BD.2877/13 BD.2877/14 BD.2877/14 | Frame, Outer, only Vane, Centre Vane, No. 1, L.H. Vane, No. 1, R.H. Vane, No. 2, L.H. Vane, No. 3, L.H. Vane, No. 3, L.H. Vane, No. 4, L.H. Vane, No. 4, L.H. Vane, No. 4, L.H. Vane, No. 5, L.H. Vane, No. 5, L.H. Vane, No. 5, L.H. Vane, No. 5, L.H. Vane, No. 6, R.H. Vane, No. 6, R.H. | | 1 | |
| BD.4755 AW.102/T AN.102/L C.723 | Stud, Special, on Radiator Grille Washer, Plain, on Studs Nut on Studs Washer, Shakeproof, under Nuts | | 8 8 8 | |

| Part No. | Description. | Plate No. | No. per Unit. | r Remarks. | |
|---|---|---------------|-----------------------|--|---|
| BD.3286 | BADGE ON BONNET | U.94 | , . 1 | est ^{er} t | |
| AW.102/T AN.102/L C.723 | Washer, Plain, on Badge Stud Nut on Stud Washer, Shakeproof, under Nut | | 1 1 1 | | |
| | | | | | |
| BD.2855 | FRONT BUMPER BAR | U.95 | 2 | | |
| C.4202/3 C.3088 | Nut, securing Bumper Bars to Spring Bars Washer for Bumper fixing | | 6 2 | | |
| C.3695 | SPRING-BAR, MOUNTING BUMPER BARS | U.96 | 2 | | |
| NB.150/20D C.728 NB.150/10D | Bolt, securing Spring Bars to Brackets Washer, Shakeproof, on Bolts Bolt, securing Spring Bars to Supports | | 2 8 2 | | |
| FW.208/T C.3837 | Washer, Plain, on Bolts Nut, Dome, securing Spring Bars to Extensions | U.97 | 4 | Fitted from Chassis No. 660059 to 660934 | , |
| C.5819 | Nut, Dome, securing Spring Bars to Extensions | | 4 | 670185 to 671796 Fitted to Chassis No. 660935 and subs. 671797 and subs. | |
| C.741 | Washer, Shakeproof, under Dome Nuts | | 4 | 071777 Bild 3003. | , |
| C.3943 | SCREWED EXTENSION FOR SPRING-BAR FIXING | U.98 | 4 | | |
| C.3945 C.3849 C.793 C.3225 C.3830 | Washer, Spacing, on Screwed Extensions Washer (Rubber) at Wing mounting holes Washer, Spacing Washer, Wing Clamping Piece, Distance | U.99 U.100 | 4 8 6 4 2 | | |
| C.3831 | BUMPER SUPPORT MEMBER | Ú.101 | 1 | | |
| C.3833 | BUMPER SUPPORT STRUT, L.H. | U.102 | 1 | | |
| C.3832 | BUMPER SUPPORT STRUT, R.H. | U.103 | 1 | | |
| NB.137/7D C. 74 1 | Bolt, securing Support Struts to Chassis Frame Washer, Shakeproof, on Bolts | | 2 | | |
| 3D. 2 856/1 | REAR OVER-RIDER, R.H. | U.104 | 1 | | |
| 3D.2856/2 | REAR OVER-RIDER, L.H. | | 1 | | |
| C.3279 | Nut, Dome, securing Over-Riders to Spring Bars | U.105 | 4 | Fitted from Chassis No. 660059 to 660934 | |
| C.5829 | Nut, Dome, securing Over-Riders to Spring Bars | | 4 | 670185 to 671796 Fitted to Chassis No. 660935 and subs. | |
| W.106/T C. 726 | Washer, Plain, on Over-Rider Studs Washer, Shakeproof, under Dome Nuts | | 4 | 671797 and subs. | |
| C.3784 | SPRING - BAR, MOUNTING OVER - RIDERS | U.106 | 2 | | |
| C.3778 | Piece, Distance, between Spring Bars and Support | U.107 | 2 | | |
| C.2869 NB.137/7D | Brackets Grommet (Rubber) on Distance Pleces Bolt, securing Spring Bars to Chassis Frame (at centre) | U.108 | 2 2 | | |

| NB.137/23D NN.137/L C.726 Bolt, secure each end) Nut on Bo Washer, State of the secure of the secu | | Plate No. | No. pe Unit. | |
|--|---|--------------|------------------|--|
| NN.137/L C.726 each end) Nut on Bo Washer, Si BD.4178 SUPPORT | bracket for R.H. OVER-RIDER | U.109 | 6 | |
| C.726 Washer, S BD.4178 SUPPORT | BRACKET FOR R.H. OVER-RIDER | U.109 | 6 | |
| 3011011 | | U.109 | | |
| DD 4470 | BRACKET FOR L.H. OVER-RIDER | | 1 | NOT REQUIRED WHEN WIRE ROAD |
| BD.4179 SUPPORT | | U.110 | 1 } | WHEELS ARE FITTED |
| BD.7763 SUPPORT | BRACKET FOR L.H. OVER-RIDER | | 1 | FOR USE WHEN WIRE ROAD |
| BD.7764 SUPPORT | BRACKET FOR R.H. OVER-RIDER | | 1 ∫ | WHEELS ARE FITTED |
| C.8265 Bolt, throug C.3837 Nut, Dome | gh Support Bracket, securing Spring Bar , on Bolts | | 2 2 | Fitted from Chassis No. |
| C.5819 Nut, Dome | , on Bolts | | 2 | 660059 to 660934 670185 to 671796 Fitted from Chassis No. |
| C.728 Washer, Sh | akeproof, under Dome Nuts | | 2 | 660935 and subs. 671797 and subs. |
| | • | | | |
| C.3236 FRONT N | UMBER PLATE ASSEMBLY | | 1 | NOT REQUIRED FOR U.S.A. |
| C.3229 FRONT LI | CENCE PLATE ASSEMBLY | | .1 | FOR EXPORT TO U.S.A. From Chassis No. 660001 to 660074 670001 to 670265 |
| C.4182 FRONT LI | CENCE PLATE ASSEMBLY | | 1 | FOR EXPORT TO U.S.A. From Chassis No. 660075 and subs. 670266 and subs. |
| C.2945 REAR NU | JMBER PLATE | | 1 | SUPPLIED TO SPECIAL ORDER ONLY. NOT REQUIRED FOR U.S.A. AND CANADA |
| BD.4257 REAR NU | MBER PLATE PANEL ASSEMBLY | | 1 | NOT REQUIRED FOR U.S.A. AND CANADA ALTERNATIVE TO BD.5644 |
| BD.5644 REAR NUI | MBER PLATE PANEL ASSEMBLY | | 1 | NOT REQUIRED FOR U.S.A. AND CANADA ALTERNATIVE TO BD.4257 |
| BD.4256 REAR NU | MBER PLATE PANEL ASSEMBLY | | 1 | FOR EXPORT TO U.S.A. AND CANADA ALTERNATIVE TO BD.5645 |
| BD.5645 REAR NUI | MBER PLATE PANEL ASSEMBLY | | 1 | FOR EXPORT TO U.S.A. AND CANADA ALTERNATIVE TO BD. 4256 |
| NS.125/4D Screw, Set, FW.104/T Washer, Pl | er) around Number Plate Panel (5' long) , securing Number Plate Panel lain, on Setscrews hakeproof, on Setscrews | | 1 8 8 8 | |
| C.2840 COMMISSI | ON NUMBER PLATE | | 1 | SUPERSEDED BY C.7704 |
| C.7704 COMMISSI | ON NUMBER PLATE | | 1 | SUPERSEDES C.2840 |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|--|--|--------------|---|---|
| BD.8294 | RECORD - BREAKING REPLICA PLATE | | 1 | |
| C.1107 | LICENCE HOLDER | | 1 | |
| BD.4660 | GRAB RAIL | U.111 | 1 | |
| BD.4659 NN.137/L C.726 | Escutcheon for Grab Rail Nut, securing Grab Rail Washer, Shakeproof, under Nuts | | 2 2 2 | |
| | INTERIOR TRIMMING | | | |
| BD.4653 BD.4654 BD.4655 BD.4656 BD.4676 BD.4677 BD.4686 BD.4687 BD.539/1 | Fillet, Tacking, Windscreen (\$\frac{1}{16}" \times 2\frac{3}{2}" \times \frac{1}{16}")\$ Fillet, Tacking, Windscreen (\$\frac{1}{16}" \times 5\frac{2}{2}" \times 1\frac{3}{2}")\$ Fillet, Tacking, Rear (\$\frac{1}{16}" \times 33" \times 2\frac{1}{2}")\$ Fillet, Tacking, Assembly, L.H. Rear Quarter Fillet, Tacking, Assembly, R.H. Rear Quarter Casing Assembly for L.H. Rear Quarter Casing Assembly for R.H. Rear Quarter Screw, Self-Tapping, securing Rear Quarter | | 1 2 2 1 1 1 1 1 1 | |
| BD.532/1 BD.4710 BD.4711 BD.4712 BD.4713 BD.4721 | Casings Washer, Cup, on Self-Tapping Screws Rexine for Side Curtain Tray Rexine for L.H. Wheel Arch Rexine for R.H. Wheel Arch Rexine for Battery Container Moquette for Shut Pillar (3"×21") | | 14 1 1 1 1 2 | |
| BD.3631 | ROLL, TRIMMING TOP OF DOORS, TONNEAU, AND SCUTTLE (13' 7" LONG) | | 1 | |
| BD.3631/1 BD.3631/2 BD.3631/3 BD.3660 BD.3661 BD.3662 BD.3663 | Roll, Trimming top of Doors (27½" long) Roll, Trimming top of Scuttle (43½" long) Roll, Trimming top of Tonneau (64½" long) Hide, covering Trimming Roll on L.H. Door (29"×8") Hide, covering Trimming Roll on Scuttle (51"×9") Hide, covering Trimming Roll on Tonneau (66"×3") | | 2 1 1 1 1 1 1 1 | |
| BD.3871 | COVER ASSEMBLY FOR PROPELLER SHAFT TUNNEL | U.111A | . 1 | |
| BD.3045 | Piping Assembly for Prop Shaft Tunnel Cover (3' long) | | 1 | |
| BD.3868 | SEAT, L.H. ASSEMBLY | | 1] | Fitted from Chassis No. 660001 to 661151 670001 to 674390 |
| BD.3869 | SEAT, R.H. ASSEMBLY | | 1 ∫ | 674392 to 674408 674410 to 674433 |
| BD.9250 | SEAT, L.H. ASSEMBLY | | 1 } | Fitted to Chassis No. 674434 and subs. |
| BD.9251 | SEAT, R.H. ASSEMBLY | | 1 [| Also to 674391 and 674409 |
| | NOTE.—The above is for the supply of fully Trimmed Seats, complete with Base Frame, Runners, Adjusting Lever and Hinges, BUT LESS CUSHION. | | | |

| | | 6/0185 AND 5085. |
|---|---|--|
| Part No. | Description. | Plate No. per No. Unit. Remarks. |
| BD.4006 | SEAT SQUAB FRAME ASSEMBLY, L.H. | U.112 1 ALTERNATIVE TO BD.4792 |
| BD.4007 | SEAT SQUAB FRAME ASSEMBLY, R.H. | 1 ALTERNATIVE TO BD.4793 |
| BD.4792 | SEAT SQUAB FRAME ASSEMBLY, L.H. | 1 ALTERNATIVE TO BD.4006 OR BD.4007 RESPECTIVELY for Chassis No. |
| BD.4793 | SEAT SQUAB FRAME ASSEMBLY, R.H. | 660001 to 661151 670001 to 674390 674392 to 674408 674410 to 674433 |
| BD.9222 | SEAT SQUAB FRAME ASSEMBLY, L.H. | 1 Fitted to Chassis No. 674434 and subs. |
| BD.9223 | SEAT SQUAB FRAME ASSEMBLY, R.H. | Also to 674391 and 674409 |
| | NOTE.—The above is fully Trimmed and complete with Hinges. | |
| BD.3252 | SEAT BASE FRAME ASSEMBLY, L.H. | U.113 1 |
| BD.3253 | SEAT BASE FRAME ASSEMBLY, R.H. | 1 |
| | NOTE.—The above is supplied less Runners, Adjusting Lever and Tension Spring. | |
| BD.3870 | SEAT CUSHION ASSEMBLY | U.114 2 |
| BD.3675 BD.3676 BD.3768 BD.3769 BD.4794 BD.4795 BD.4796 BD.4797 BD.3255 BD.541/10 C.4202/2 FG.105/X BD.3308/9 | Hinge, Inner, for L.H. Seat Hinge, Inner, for R.H. Seat Hinge, Outer, for L.H. Seat Hinge, Outer, for R.H. Seat Hinge, Inner, for L.H. Seat Hinge, Inner, for R.H. Seat Hinge, Inner, for R.H. Seat Hinge-and-Pocket, Outer, for L.H. Seat Hinge-and-Pocket, Outer, for R.H. Seat Pivot for Hinges Washer, Plain, on Pivots Nut on Pivots Nut on Pivots Washer, Spring, under Nuts Runner on Seats (comprising 1 Plain and 1 Slotted | Fitted from Chassis No. 660059 to 660227 670185 to 670725 Fitted to Chassis No. 660228 and subs. 670726 and subs. |
| NS.525/8H FS.504/4H FN.104/L C.724 NS.525/12H BD.4750/1 BD.4750/2 BD.3258 BD.3259 FS.104/4D FW.104/T FN.104/L C.724 C.3317 | Runner per set) Screw, Set, securing Outer Runners to Floor Screw, Set, securing Runners to Seats Nut, fixing Setscrews to Seats Washer, Shakeproof, under Nuts Screw, Set, securing Inner Runners Packing under Inner Runners Packing under Inner Runners Lever, Adjusting, on L.H. Seat Lever, Adjusting, on R.H. Seat Screw, Set, securing Adjusting Levers Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Spring, Tension, for Adjusting Lever | 4 8 8 8 4 As req'd As req'd 1 1 2 2 2 2 |
| BD.3317 | HOODSTICKS ASSEMBLY | U.115 1 Fitted from Chassis No. 660059 to 660227 670185 to 670725 |
| BD.4727 | HOODSTICKS ASSEMBLY | 1 Fitted from Chassis No. 660228 to 660725 660727 to 660728 670775 to 671097 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|---|--------------|-----------------------|---|
| BD.5848 | HOODSTICKS ASSEMBLY | | 1 | Fitted to Chassis No. 660726 only 660729 and subs. 671098 and subs. |
| BD.6228 BD.4374 BD.3342 BD.541/10 BD.3529 BD.4730 BD.541/12 BD.4731 | Seal at centre of Canopy Rail (7" long) Rubber, Sealing, in channel of Canopy Rail (44" long) Screw, Pivot, securing Hoodsticks Washer on Pivot Screws Piece, Distance, behind Hoodsticks Screw, Pivot, securing Hoodsticks Washer on Pivot Screws Piece, Distance, behind Hoodsticks | | 2 } | Fitted from Chassis No. 660059 to 660227 670185 to 670725 Fitted to Chassis No. 660228 and subs. 670726 and subs. |
| BD.3541 | TOGGLE CLAMP ASSEMBLY AT EACH SIDE OF HOODSTICKS | | 2 | |
| BD.3542 | TOGGLE CLAMP ASSEMBLY IN CENTRE OF HOODSTICKS | | 1 | |
| BD.3241 | RETAINER, ON BODY, FOR HOODSTICKS | | 2 | |
| BD.536/1 AN.102/L C.723 | Stud, in Retainers Nut, on Studs, securing Retainers to Body Washer, Shakeproof, under Nuts | | 4 4 4 | |
| BD.3823 | WEBBING STRIP ON HOODSTICKS (2" x 60") | | 2 | |
| C.2015/6 BD.532/4 BD.531/2 | Screw, Set, securing Webbing to Rear Stick Washer, Cup, on Setscrews Nut, Dome, on Setscrews | | 2 2 2 | |
| BD.3824 | HOOD CLOTH ASSEMBLY (COMPLETE WITH BACKLIGHT) | | 1 1 | Fitted from Chassis No. 660059 to 660725 660727 to 660728 670185 to 671097 |
| BD.5866 | HOOD CLOTH ASSEMBLY (COMPLETE WITH BACK CURTAIN AND ZIP FASTENER) | | 1 | Fitted from Chassis No. 660726 only 660729 to 661045 671098 to 673395 |
| BD.3833 BD.5549 | Fastener "Durable Dot" for Hood Fastener "Zip" for Back Curtain (43" long) | | 1 | PLEASE STATE COLOUR WHEN ORDERING |
| BD.8267 | HOOD CLOTH ASSEMBLY (COMPLETE WITH BACK CURTAIN AND ZIP FASTENERS) | | 1 | Fitted to Chassis No. |
| BD.3833 BD.8240 BD.8241 BD.568/1 BD.568/2 | Fastener "Durable Dot" for Hood Fastener, Zip (30" long) at bottom of Back Curtain Fastener, Zip (14" long) at sides of Back Curtain Socket "Lift the Dot" on flap of Back Curtain Clinch-Plate, securing Socket to flap of Back Curtain | | 4 1 2 2 2 2 | 661046 and subs. 673396 and subs. |
| BD.8266 C.2015/3 BD.532/4 BD.531/2 | Stud, in Hoodstick, for "Lift the Dot" Fasteners Screw, Set, securing Hood Cloth to Floating Stick Washer, Cup, on Setscrews Nut, Dome, on Setscrews | | 2 2 2 2 | |

| | | 6/0185 AND 5085. | | | |
|----------|--|------------------|-----------------|--|--|
| Part No. | Description. | Plate No. | No. pe Unit. | | |
| BD.4405 | BACKLIGHT ASSEMBLY | U.116 | 1 | | |
| BD,8070 | Glass only, for Backlight | | 1 | | |
| 2179 | Buffer (Rubber), on Back Light Frame | | 4 | | |
| BD.3838 | PIN BEAD ALONG CANOPY RAIL | | 1 | | |
| BD.3825 | TONNEAU COVER ASSEMBLY | | 1 | FOR LEFT HAND DRIVE CARS ONLY From Chassis No. 670185 to 671465 | |
| BD.4646 | TONNEAU COVER ASSEMBLY | | 1 | FOR RIGHT HAND DRIVE CARS | |
| BD.3565 | Fastener "Zip" on Tonneau Cover (34' long) | | 1 | From Chassis No. 660059 to 660879 | |
| BD.6453 | TONNEAU COVER ASSEMBLY | | 1 | FOR LEFT HAND DRIVE CARS ONLY For Chassis No. 671466 and subs. | |
| BD.6454 | TONNEAU COVER ASSEMBLY | | 1 | FOR RIGHT HAND DRIVE CARS | |
| BD.3565 | Fastener "Zip" on Tonneau Cover (34" long) | | 1 | For Chassis No. 660880 and subs. | |
| BD.3822 | Fastener "Tenax" securing Tonneau Cover to | | 2] | Fitted from Chassis No. | |
| BD.4673 | sides of Scuttle Fastener "Tenax" securing Tonneau Cover at side | | 1 | 660059 to 660879 670185 to 671465 | |
| BD.3833 | of Mirror Fastener "Durable Dot" securing Tonneau Cover | | 4 | | |
| BD.1749 | at rear end Fastener "Lift the Dot" for Tonneau Cover | | 3 | Fitted to Chassis No. 660880 and subs. 671466 and subs. | |
| BD.4492 | SIDE CURTAIN ASSEMBLY, L.H. | U.117 | 1 } | Fitted from Chassis No. | |
| BD.4493 | SIDE CURTAIN ASSEMBLY, R.H. | | 1 | 660059 to 660810 670185 to 671195 | |
| BD.5853 | SIDE CURTAIN ASSEMBLY, L.H. | | 1) | Fitted to Chassis No. | |
| BD.5854 | SIDE CURTAIN ASSEMBLY, R.H. | | 1 } | 660811 and subs. 671196 and subs. | |
| BD.4494 | FRAME ASSEMBLY FOR L.H. SIDE CURTAIN | | 1] | Fitted from Chassis No. | |
| BD.4495 | FRAME ASSEMBLY FOR R.H. SIDE CURTAIN | | 1 } | 660059 to 660810 670185 to 671195 | |
| BD.5855 | FRAME ASSEMBLY FOR L.H. SIDE CURTAIN | | 1] | Fitted to Chassis No. | |
| BD.5856 | FRAME ASSEMBLY FOR R.H. SIDE CURTAIN | | 1 } | 660811 and subs. 671196 and subs. | |
| BD.4496 | GLASS FRAME ASSEMBLY FOR L.H. SIDE CURTAIN | | 1 | Fitted from Chassis No. 660059 to 660810 | |
| BD.4497 | GLASS FRAME ASSEMBLY FOR R.H. SIDE CURTAIN | | 1 | 670185 to 671195 | |

| | 6/0185 AND SUBS. | | | | |
|--|---|--------------|-------------------|--|---|
| Part No. | Description. | Plate No. | No. per Unit. | | _ |
| BD.5857 | GLASS FRAME ASSEMBLY FOR L.H. SIDE CURTAINS | | 1] | Fitted to Chassis No. | |
| BD.5858 | GLASS FRAME ASSEMBLY FOR R.H. SIDE CURTAINS | | 1 | 660811 and subs. 671196 and subs. | |
| BD.4389 | WINDOW ("PERSPEX") FOR SIDE CURTAINS | | 2 | Fitted from Chassis No. | |
| C.2025/1 C.4549/2 C.2025/4 BD.532/2 | Screw, Set, around Glass Frame Screw, Set, around Glass Frame Screw, Set, around Glass Frame Washer, Cup, on Setscrews | | 2 16 8 2 | 660059 to 660810 670185 to 671195 | |
| BD.5851 | WINDOW ("PERSPEX") FOR SIDE CURTAINS | | 2 | Fitted to Chassis No. | |
| C.2025/1 C.4549/3 C.2025/4 BD.532/2 | Screw, Set, around Glass Frame Screw, Set, around Glass Frame Screw, Set, around Glass Frame Washer, Cup, on Setscrews | | 2 16 8 2 | 660811 and subs. 671196 and subs. | |
| | | | | | |
| BD.4498 | FIXING ROD ASSEMBLY, L.H. | | 1] | | |
| BD.4499 | FIXING ROD ASSEMBLY, R.H. | | 1 | Fitted from Chassis No. 660059 to 660810 | |
| BD.4667 AS.502/3H | Plate, Fixing, Assembly, behind Door Casings, for Side Curtain Fixing Knobs Screw, Set, securing Fixing Plates | | 16 | 670185 to 671195 | |
| BD.5859 | FIXING ROD ASSEMBLY, L.H. | | 1) | | |
| BD.5860 | FIXING ROD ASSEMBLY, R.H. | | 1 | Fitted to Chassis No. | |
| BD.4667 | Plate, Fixing, Assembly, behind Door Casings, for | | 4 | 660811 and subs. 671196 and subs. | |
| AS.502/3H | Side Curtain Fixing Knobs Screw, Set, securing Fixing Plates | | 16 | | |
| | • | | | | |
| | | | | | |
| BD.3429 | KNOB, FIXING SIDE CURTAINS TO DOORS | | 4 | | |
| BD.3428 C.2027/1 | Escutcheon under Fixing Knobs Screw, Set, securing Escutcheons | | 4 8 | | |
| J. 2027 / 1 | octom, see, securing Escatolicons | | 9 | V V | |

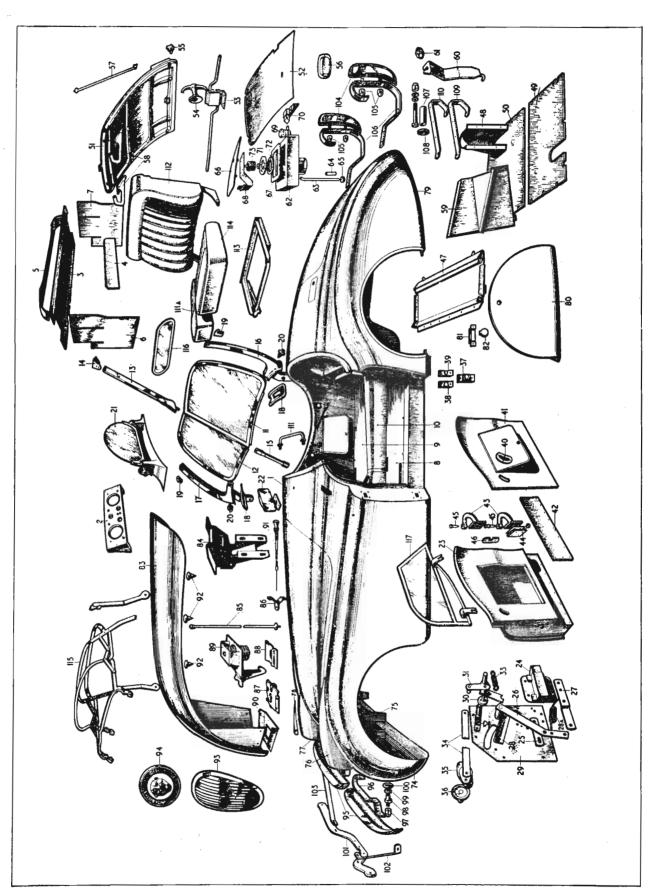


PLATE U.

| Part No. | Description. | Plate No. | No. pe Unit. | |
|--|---|--------------|---|--|
| C.2527/1 | DYNAMO (LUCAS 22429/E C.45-PV/S. TYPE G.86) | V.1 | 1 | Fitted from Eng. No. W.1001 to W.5275 |
| 2791 2784 2779 2756 2775 2757 2789 2749 | Armature (238806) Brush (supplied in set of 3) (238240) Spring for Brush tension (supplied in set of 3) (238062) Bearing, Commutator end (189307) Bracket, Driving end (238796) Bearing, Driving end (189308) Field-Coil (238820) Nut, Shaft (180620) | | 1 set 1 set 1 set 1 1 1 | |
| C.5453 | DYNAMO (LUCAS 22462/B—C.45/PVS/S) | | 1 | Fitted to Eng. No. W.5276 and subs. |
| 5921 5919 5918 | Bracket, Commutator end (239083) Bracket, Driving end (239086) Bolt, Fixing (238521) | | 1 1 2 | |
| | All other Spares as for C.2527/I. | | | • |
| C.2579 C.5376 C.5377 | Pulley for Dynamo Bolt for Dynamo Adjustment Washer, Plain, on Bolt | | 1 1 1 | |
| C.2746 | STARTER (LUCAS 26042/E — M.45G/GC.47) | V.2 | 1 | Fitted from Engine No. W.1001 to W.1022 Also to W.1024 to 1308, 1310 to 1338, 1340 to 1344, 1346 to 1348, 1350 to 1353, 1355, |
| 2817 2804 2811 2822 2821 2815 2814 2801 5923 2812 2823 7007 | Armature (270532) Brush, (supplied in set of 2) (255659) Spring for Brush tension (supplied in set of 2) (270004) Pinion and Sleeve Assembly (291101) Spring, Pinion retaining (291081) Field Coil (270214) Bracket, Commutator end (270149) Bush for Commutator end Bracket (255491) Bracket, Driving end (271458) Bush for Driving end Bracket (270038) Drive Assembly (291105) Cover Band (270294) | | 1 set 1 set 1 set 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | 1357, 1359 to 1363, 1366, 1369 to 1374, 1376, 1378 to 1383, 1385 to 1388, 1391 to 1395, 1397 to 1395, 1401 to 1414, 1416, 1418 to 1433, 1435 to 1449, 1451, 1454 to 1484, 1486 to 1491, 1493 to 1495, 1497 to 1537, 1539 to 1542, 1544 to 1547, 1549 to 1561, 1563, 1564, 1567 to 1569, 1572, 1573, 1575 to 1578, 1581, 1583, 1587, 1591, 1593 to 1598, 1600 to 1603, 1606 to 1617, 1619 to 1631, 1633 to 1647, 1649, 1651, 1653 to 1663, 1665 to 1692, 1694 to 1697, 1699 to 1712, 1714, 1716, 1717, 1719 to 1737, 1739 to 1751, 1753 to 1759, 1761 to 1774, 1776 to 1783, 1785, 1787 to 1790, 1793, 1794, 1799, 1800, 1802, 1804, 1806 to 1838, 1840 to 1850, 1852 to 1892, 1894 to 1903, 1905, 1909, 1910, 1912, 1913, 1914, 1916, 1918 to 1923, 1925, 1928 to 1930, 1933 to 1935, 1937, 1939 to 1941, 1943 to 1946, 1949 to 1951, 1953, 1955, 1960, 1962, 1964, 1965, 1967, 1969, 1972, 1973, 1979, 1988, 1991, 1992, 1995, 1996, 1997 |
| C.2746/1 | STARTER (LUCAS 26062/A — M.45G/GC.47) | V.2 | 1 | Fitted to the following Engines:— W. 1023, 1309, 1339, 1345, 1349, 1354, |
| 2825 2820 2824 | Spring, Pinion retaining (291035) Spring, Main (291043) Drive Assembly (291380) All other Spares as for Starter C.2746. | | 1 2 1 | 1356, 1358, 1364, 1365, 1367, 1368, 1375, 1377, 1384, 1389, 1390, 1396, 1400, 1415, 1417, 1434, 1450, 1452, 1453, 1485, 1492, 1496, 1538, 1543, 1548, 1562, 1565, 1566, 1570, 1571, 1574, 1579, 1580, 1582, 1584, 1585, 1586, 1588, 1589, 1592, 1599, 1604, 1605, 1618, 1632, 1648, 1650, 1652, 1664, 1693, 1698, 1713, 1715, 1718, 1738, 1752, 1760, 1775, 1784, 1786, 1791, 1792, 1795, 1796, 1797, 1798, 1801, 1803, 1805, 1839, 1851, 1881, 1893, 1904, 1906, 1907, 1908, 1911, 1915, 1917, 1924, 1926, 1927, 1931, 1932, 1936, 1938, 1942, 1947, 1948, 1952, 1954, 1956, 1957, 1958, 1959, 1961, 1963, 1966, 1968, 1970, 1971, 1974, 1975, 1976, 1977, 1978, 1980, 1981, 1982, 1983, 1984, 1985, 1986, 1987, 1989, 1990, 1993, 1994, 1998, and subs. |

| Part No. | Description. | Plate No. | No. per Unit. Remarks. |
|--|---|--------------|--|
| C.2692 | STARTER SOLENOID SWITCH (LUCAS 76411/D — ST.950) | V.3 | 1 |
| AS.102/5D AN.102/L C.723 C.4650 | Screw, Set, securing Starter Solenoid Switch Nut on Setscrews Washer, Shakeproof, under Nuts Boot (Rubber) over Solenoid Terminals | | 2 2 2 2 Fitted to Chassis No. 660432 and subs. 671097 and subs. 669001 and subs. 679001 and subs. |
| C.2528 | IGNITION COIL (LUCAS 45012/A B.12/L) | V.4 | 1 |
| NS.125/3D FW.104/T C.724 | Screw, Set, securing Ignition Coil Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews | | 2 } Fitted from Eng. No. W.1001 to W.4059 |
| C.5259 | BRACKET ASSEMBLY MOUNTING IGNITION COIL | | 1] |
| NN.125/L FW.104/T C.724 | Nut, securing Coil to Bracket Washer, Plain, under Nuts Washer, Shakeproof, under Nuts | | Fitted to Eng. No. W.4060 and subs. 2 2 2 2 |
| C.2747 | DISTRIBUTOR (LUCAS 40198/A — DVXH.6A/GC.47) | V.5 | 1 SUITABLE FOR 7:1 COMPRESSIO RATIO. ENGINES W.1001 TO W.65 |
| 2946 2948 2916 2926 2929 2928 2938 2922 2949 2545 2755 2941 2955 | Plate Assembly (414909) Cover (Horizontal Outlet) (415708) Brush and Spring Assembly (in Cover) (404434) Rotor Arm (407030) Contacts Set (407050) Condenser (407044) Cam Assembly (408999) Spring, Automatic Advance (406136/S) Weight, Automatic Advance (415729) Shaft and Action Plate (410620) Bearing at top of Shaft (189272) Bearing at bottom of Shaft (410590) Vacuum Unit (400850) Bush (Bridge-Piece) insulating Terminal (408945) | | 1 1 1 1 1 1 1 2 2 1 1 1 1 1 |
| C.2748 | DISTRIBUTOR (LUCAS 40199/A — DVXH.6A/GC.48) | | 1 SUITABLE FOR 8:1 COMPRESSIO RATIO, ENGINES W.1001 TO W.5 |
| 2952 2944 2956 | Spring, Automatic Advance (416076/S) Shaft and Action Plate (410767) Vacuum Unit (400904) All other Spares as for Distributor C.2747. | | 2 1 1 |
| C.5442 | DISTRIBUTOR (LUCAS 40198/D— DVXH.6A/GC47) | | 1 FITTED TO 7: I COMPRESSION RATIO. ENGINES W.6539 TO W.66 |
| C.5443 | DISTRIBUTOR (LUCAS 40199/D—DVXH.6A/GC47) All Spares as for C.2747 and C.2748 respectively. | | 1 FITTED TO 8:1 COMPRESSION RATIO. ENGINES W.5509 TO W.66 |
| C.5468 | DISTRIBUTOR (LUCAS 40249/B— DVX.6A/GC.47) | | 1 FITTED TO 7:1 COMPRESSION RATIO, ENGINES W.6697 AND SUE |
| C.5469 | DISTRIBUTOR (LUCAS 40199/E— DVX.6A/GC.47) | | 1 FITTED TO 8: I COMPRESSION RATIO. ENGINES W.6697 AND SUE |
| 2927 | Cover (Vertical Outlet) (407043) | | , 1 |
| | All other Spares as for C.2747 and C.2748 respect- | | |

| Part No. | Description. | Plate No. | No. pe Unit. | r Remarks. |
|---|---|--------------|------------------|---|
| C.2430 C.2581 | Ring, Sealing, for Distributor Shaft Pipe, Suction, from Vacuum Unit to Front Car- buretter | V.6 | 1 | |
| C.2823 | PETROL PUMP (S.U.PP.31/LCS) | V.7 | 1 | |
| C.2839 C.800 C.2539/1 BD.541/5 | Cover for Petrol Pump Stud, mounting Petrol Pump Nut on Studs Washer under Nuts | | 1 2 2 2 | |
| C.2530 | CONTROL BOX (LUCAS 37076/D — RF.95/2 — L.4) | V.8 | 1 | |
| 2896 2895 2897 270 | Cover (334956) Clip, securing Cover (334906) Resistance (334977) Fuse, 35 amps. (188218) | V.9 V.10 | 1 1 1 2 | |
| AS.302/9H C.723 | Screw, Set, securing Control Box Washer, Shakeproof, on Setscrews | | 2 2 | |
| C.2829 | FUSE BOX (COMPLETE WITH COVER) (LUCAS 37110/A SF.4/L.23) | V.11 | 1 | |
| 270 | Fuse, 35 amps. (188218) | | 4 | |
| AS.303/4H | Screw, Set, securing Fuse Box | | 2 | |
| C.2743 | INSTRUMENT PANEL (LUCAS 30123/A — GC.549) | V.12 | 1 | Fitted from Chassis No. 660001 to 661025 670001 to 672942 |
| C.2753 | Ammeter (Lucas 36071/A—BM.4/L.54) | V.13 | 1 | Also to 672944, 672945, 672949 |
| C.2754 BD.2411 | Switch, Ignition (Lucas 31287/A—S.45/L) Barrel for Ignition Switch (complete with 2 Keys) (WB.1/2646) | V.14 V.15 | 1 | |
| C.2755 | Light, Warning, for Ignition Switch (Lucas 38020/A —WL.4/L.11) | V.16 | 1 | |
| C.2642 C.2760 | Bezel for Ignition Warning Light (Lucas 304853) Eyelet for Ignition Switch (Lucas 304801) | V.17 | 1 | |
| C.2758 | Switch, Starter (Lucas 317082/A-SS.5/L.12) | V.18 | 1 | |
| C.2757 C.2762 | Switch, Road Lights (Lucas 31056/A—S.37/L.17) Escutcheon for Road Lights Switch (Lucas 304802) | V.19 | 1. 1 | |
| C.2763 C.2744 | Eyelet for Road Lights Switch (Lucas 304803) Switch, Panel Lights (Lucas 31228/A—PS.7/L.16) | V.20 | 1 1 | |
| C.2744 | Switch, Windscreen Wiper (Lucas 31228/A- | V.21 | i | |
| 2836 | PS.7/L.16) Knob for Panel Light and Screen Wiper Switches | | 2 | |
| C.2759 | (314437) Switch, Petrol and Oil Level (Lucas 31229/A— | V.22 | 1 | |
| C.2769 C.1431 | PS.5/L.37) Eyelet for Oil Level Switch (Lucas 305132) Gauge, Oil Pressure and Thermometer (Smith | V.23 | 1 | |
| C.2776 | X.42638/6) Gauge, Petrol and Oil Level complete with Warning Light (Smith X.49422/157) | V.24 | 1 | |
| C.1430 C.1430/1 C.1430/2 | Lighter, Cigar, complete (Smith SK.40503/2) Body only, for Cigar Lighter Element only, for Cigar Lighter | V.25 | 1 1 1 | Fitted from Chassis No. 660001 to 660847 672806 to 672826 670001 to 671413 679001 to 679010 679998 to 680020 |
| C.2523 C.2523/1 C.2524/2 | Lighter, Cigar (Thermostatic) complete (Smith) Body only, for Cigar Lighter Element only, for Cigar Lighter | | 1 1 1 | Fitted to Chassis No. 660848 and subs. 669001 and subs. 671414 to 672805 679011 to 679997 672827 and subs. 680021 and subs. |
| C.2771 | Speedometer, complete with Warning Light (Calibrated in Miles) (Smith 51691/21) | V.26 | 1 ' | SUITABLE FOR 3.64 : I AXLE RATIO |
| C.2771/1 | (Calibrated in Miles) (Smith 51691/21) Speedometer, complete with Warning Light (Calibrated in Miles) (Smith 51691/25) | V.26 | 1 | SUITABLE FOR 3.27 : 1 AXLE RATIO |
| C.2773 | Speedometer, complete with Warning Light (Calibrated in Kilos) (Smith 51691/23) | | 1 | SUITABLE FOR 3.64 : I AXLE RATIO |
| C.2773/1 | Speedometer, complete with Warning Light | | 1 | SUITABLE FOR 3.27 : I AXLE RATIO |
| | (Calibrated in Kilos) (Smith 51691/26) | | | |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|--|--|--------------|----------------------------|---|
| C.5229 | INSTRUMENT PANEL (LUCAS 30186/D—GC.851) | | 1 | Fitted from Chassis No. 669001 to 669002 679001 to 680109 |
| C.2744 C.4543 C.4617 | Switch, Interior Lights (Lucas 31228/A) Switch, Rheostat, for Heater (Lucas 78262/B) Light, Warning, for Ignition and Trafficators (Lucas | | 1 1 2 | Also to 680111, 680112, 680115 |
| C.4625 C.4626 | 38048/A) Bezel for Ignition Warning Light (Lucas 305414) Bezel for Trafficator Warning Light (Lucas 305411) | | 1 . | |
| | All other items as for Panel C.2743 | | | |
| | | | | |
| C,7290 | INSTRUMENT PANEL (LUCAS 30191/A) | | 1 | Fitted from Chassis No. 661026 to 661166 672950 to 675207 669003 to 669138 680116 to 681419 |
| | | | | Also 672943, 672946, 672947, 672948, 680110, 680113, 680114 |
| | | | | |
| C.8395 | INSTRUMENT PANEL (LUCAS 30205/A) | | 1 | Fitted to Chassis No. 661167 and subs. 669139 and subs. 675208 and subs. 681420 and subs. |
| C.2753 C.5459 BD.2411 C.2755 | Ammeter (Lucas 36071/B-BM.4/L.54) Switch, Ignition (Lucas 31287-S.45) Barrel for Ignition Switch (WB.1/2646) Light, Warning, for Ignition Switch (Lucas 38020/A- | | 1 1 1 | |
| C.4625 | WL.4/L.11) Bezel for Ignition Warning Light (IGN) (Lucas 305414) | | 1 | |
| C.5465 C.5462 C.5480 C.5480 C.5481 C.2762 C.2763 C.5460 | Eyelet for Ignition Warning Light (Lucas 312169) Switch, Starter (Lucas 31253/A-SF.9) Knob for Starter Switch (Lucas 317370) Switch, Road Lights (Lucas 31387/A-PRS.5) Switch, Road Lights (Lucas PRS.7) Knob for Road Lights Switch (Lucas 317603) Escutcheon for Road Lights Switch (Lucas 304802) Eyelet for Road Lights Switch (Lucas 304803) Switch, Rheostat, for Panel Lights (Lucas 78253/D-CLD.6) | | 1 1 1 1 1 1 | FOR USE ONLY WITH PANEL C.7290 FOR USE ONLY WITH PANEL C.8395 |
| C.5482 C.5463 C.5483 C.4522 C.5484 C.2769 C.4543 | CHR.1) Knob for Panel Lights Switch (Lucas 768913) Switch for Interior Lights (Lucas 31389-PS.7/2) Knob for Interior Lights Switch (317515) Switch, Windscreen Wiper (Lucas 31364/A-PRS.5) Knob for Screen Wiper Switch (Lucas 317602) Eyelet for Screen Wiper Switch (Lucas 305132) Switch, Rheostat, for Heater Motor (Lucas 78262/B-CHR.1) | | 1 1 1 1 1 | FITTED TO FIXED HEAD COUPE MODELS ONLY |
| C.5485 C.4617 987 C.4626 C.4630 | CHR.1) Knob for Heater Motor Switch (Lucas 768473) Light, Warning, for Flasher Lights (Lucas 38048/A) Bulb for Warning Light (2.2 watt) Bezel for Flasher Warning Light (TRF) (Lucas 305411) Eyelet for Switches operating Starter, Heater Motor and Panel Lights | | 1 1 1 1 3 | FITTED TO EXPORT MODELS ONLY |
| C.1431 | Gauge, Oil Pressure and Thermometer (Smith X.42638/6) | | 1 | |
| C.7131 C.2523 C.2523/1 C.2524/2 | Gauge, Petrol (Smith X.49422/202) Lighter, Cigar (Thermostatic) complete Body only for Cigar Lighter Element only for Cigar Lighter | | 1 1 1 | |
| BD.1503/2 C.2832 | Screw, Wood, securing Instrument Panel Connector for Instrument Panel (Lucas 998484) | | 14 1 | |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|------------------------|--|--------------|-----------------|---|
| C.5381 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN MILES) (SMITH X.51691/41) | | . 1 | SUITABLE FOR 3.77: I SALISBURY AXLE For Chassis No. 660935 to 660944 660945 and subs. 671797 to 671927 (except 671856 and 671857) 671928 and subs. 669001 and subs. 679222 to 679425 (except 679307 to 679309) 679426 and subs. |
| C.5382 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN KILOS) (SMITH X.51691/42) | | 1 | SUITABLE FOR 3.77: I SALISBURY AXLE For Chassis No. 660935 to 660944 660945 and subs. 671797 to 671927 (except 671856 and 671857) 671928 and subs. 669001 and subs. 679222 to 679425 (except 679307 to 679309) 679426 and subs. |
| C.5383 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN MILES) (SMITH X.51691/37) | | 1 | SUITABLE FOR 3.31:1 SALISBURY AXLE For Chassis No. 660935 to 660944 660945 and subs. 671797 to 671927 (except 671856 and 671857) 671928 and subs. 669001 and subs. 679222 to 679425 (except 679307 to 679309) 679426 and subs. |
| C.5384 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN KILOS) (SMITH X.51691/38) | | 1 | SUITABLE FOR 3.31:1 SALISBURY AXLE For Chassis No. 660935 to 660944 660945 and subs. 671797 to 671927 (except 671856 and 671857) 671928 and subs. 669001 and subs. 679222 to 679425 (except 679307 to 679309) 679426 and subs. |
| C.5389 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN MILES) (SMITH X.51691/35) | | 1 | SUITABLE FOR 3.54:1 SALISBURY AXLE For Chassis No. 660935 and subs. 671797 and subs. 679222 and subs. |
| C.5390 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN KILOS) (SMITH X.51691/36) NOTE.—From Chassis No. 660945, 671928, 669001, 679426 onwards, either E.N.V. or SALIBURY REAR AXLES MAY BE FITTED. Great care should therefore be exercised when fitting replacement speedometers to first ascertain the make of Rear Axle. | | 1 | SUITABLE FOR 3.54: I SALISBURY AXLE For Chassis No. 660935 and subs. 671797 and subs. 679222 and subs. |
| C.5404 2625 2629 | Cable, Flexible, complete (60" long) (Smith SK.52091/3) (SUPERSEDED BY C.5590) Cable, Inner only (SK.52108/60) Cable, Outer only (SK.52128) | | 1 } | Fitted from Chassis No. 660935 to 661077 671797 to 674005 669003 to 669020 679222 to 681202 |
| C.5590 5266 5265 | Cable, Flexible, complete (60° long) (Smith SK. 52091/42) (SUPERSEDES C.5404) Cable, inner only (SK.80741/60) Cable, Outer only (SK.80740) | | 1 1 1 | Fitted to Chassis No. 661078 and subs. 669021 and subs. 681203 and subs. |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|--------------------------|---|--------------|-----------------|---|
| C.2771 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN MILES) (SMITH 51691/21) | V.26 | 1 | SUITABLE FOR 3.64: I E.N.V. AXLE For Chassis No. 660001 to 660380 670001 to 671009 |
| C.2771/1 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN MILES) (SMITH 51691/25) | V.26 | 1 | SUITABLE FOR 3.27: I E.N.Y. AXLE For Chassis No. 660001 to 660511 670001 to 671009 |
| C.2773 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN KILOS) (SMITH 51691/23) | | 1 | SUITABLE FOR 3.64: I E.N.V. AXLE For Chassis No. 660001 to 660592 670001 to 671009 |
| C.2773/1 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN KILOS) (SMITH 51691/26) | | 1 | SUITABLE FOR 3.27: I E.N.V. AXLE For Chassis No. 660001 to 660380 670001 to 671009 |
| C.1434 2626 2629 | Cable, Flexible, complete (65" long) (Smith SK.52091/3) Cable, Inner, only (SK.52108/65) Cable, Outer, only (SK.52128) | | 1 1 | Fitted from Chassis No. 660217 to 660380 670001 to 671008 |
| C.2835 2627 2630 | Cable, Flexible, complete (71" long) (Smith SK.52091/3) Cable, Inner, only (SK.52108/71) Cable, Outer, only (SK.52128) | P+ 1 | 1 | Fitted from Chassis No. 660001 to 660216 |
| C.4574 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN MILES) (SMITH X.51691/28) | | . 1 | SUITABLE FOR 3.64: I E.N.V. AXLE For Chassis No. 660381 to 660934 660945 and subs. 671010 to 671796 67928 and subs. 679001 to 679221 679426 and subs. |
| C.4575 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN KILOS) SMITH X.51691/29) | | . 1 | SUITABLE FOR 3.64: E.N.V. AXLE For Chassis No. 660593 to 660934 660945 and subs. 671928 and subs. 679001 to 679221 679426 and subs. |
| C.4576 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN MILES) (SMITH X.51691/30) | | 1 | SUITABLE FOR 3.27: I E.N.V. AXLE For Chassis No. 660512 to 660934 660945 and subs. 671928 and subs. 669001 and subs. 679001 to 679221 679426 and subs. |
| C.4577 | SPEEDOMETER, COMPLETE WITH WARNING LIGHT (CALIBRATED IN KILOS) SMITH X.51691/31) | | 1 | SUITABLE FOR 3.27: I E.N.V. AXLE For Chassis No. 660381 to 660934 660945 and subs. 671928 and subs. 679001 to 679221 679426 and subs. |
| C.1434 2626 C.5404 | Cable, Flexible, complete (65" long) (Smith SK.52091/3) Cable, Inner only (SK.52108/65) Cable, Flexible, complete (60" long) (Smith | | 1 } | Fitted from Chassis No. 660381 to 660934 671009 to 671796 669001 and subs. 679001 to 679214 Fitted from Chassis No. |
| C.5404 2625 2629 | Cable, Flexible, complete (60° long) (Smith SK.52091/3) Cable, Inner only (SK.52108/60) Cable, Outer only (SK.52128) | | 1 | 679215 to 679221 Also to 671856, 671857, 679307 to 679309 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|--|--|-----------------------------|--|
| C.2775 | REV. COUNTER AND ELECTRIC CLOCK (SMITH X.49035/5) | V.27 | . 1 | |
| 1963 | Winder for Electric Clock (HO.16456) | | 1 | |
| C.2777 | Cable, Flexible, complete (22" long) (Smith SK. 52091) | | 1 | Fitted from Chassis No. |
| 2621 2618 C.4509 | Cable, Inner, only (SK.52108/22) Cable, Outer, only (SK.52094) Cable, Flexible, complete (19" long) (Smith SK. | | 1 | 660001 to 660213 670001 to 670662 Fitted from Chassis No. |
| C.5477 | 52091) (SUPERSEDED BY C.5477) Cable, Flexible, complete (19" long) (Smith SK.52091) | | 1] | 660214 to 661038 670663 to 673192 Fitted from Chassis No. |
| 2620 | (SUPERSEDED BY C.5594) Cable, Inner, only (SK.52108/19) | | 1 | 661039 to 661074 673193 to 673994 |
| 2617 | Cable, Outer, only (SK.52094) | | 1 1 | 6/31/3 (0 6/3//4 |
| C.5594 | Cable, Flexible, complete (19" long) (Smith X.80710/1) (SUPERSEDES C.5477) | | 1 | Fitted from Chassis No. |
| 5272 | Cable, Inner, only (SK.80747/19) | | 1 | 661075 to 661164 673995 to 674928 |
| 5270 | Cable, Outer, only (SK.80746) | | 1 J | 0/3//3 to 0/4/20 |
| C.8274 2620 | Cable, Flexible, complete (18½″ long) (Smith X.80710/2) Cable, Inner, only (SK.52108/18⋅5) | | 1 | Fitted to Chassis No. 661165 and subs. 674929 and subs. |
| 5274 C.7492 | Cable, Outer, only (SK.80750) Cable, Flexible, complete (16" long) (Smith SK.52091) (SUPERSEDED BY C.5478) | | 1 J 1 | Fitted from Chassis No. 669001 to 669002 679001 to 680366 |
| C.5478 2619 | Cable, Flexible, complete (16" long) (Smith X.80710) (SUPERSEDED BY C.5593) Cable, Inner, only (SK.52108/16) | | 1 | Fitted from Chassis No. 669003 to 669020 |
| 2617 | Cable, Outer, only (SK.52094) | | i | 680367 to 681199 |
| C.5593 | Cable, Flexible, complete (16" long) (Smith X.80710/1) | | 1 | Fitted from Chassis No. |
| 5271 | (SUPERSEDES C.5478) Cable, Inner, only (SK.80747/16) | | 1 | 669021 to 669157 |
| 2617 | Cable, Outer, only (SK.80746) | | 1] | 681200 to 681465 |
| C.8272 2619 | Cable, Flexible, complete (16" long) (Smith X.80710/2) | | 1 | Fitted to Chassis No. 669158 and subs. |
| 2617 | Cable, inner, only (\$K.52108/16) Cable, Outer, only (\$K.80750) | | i | 681466 and subs. |
| BD.826 | BOOT LIGHT COMPLETE (LUCAS 56015/A — FML.2) | | 1 | |
| 3413 | Rim Assembly (532948) | V.28 | 1 | |
| 3414 | Window (532949) | V.29 | 1 | • |
| 256 | Bulb, Festoon | V.30 | 1 | |
| C.2873 C.2872 C.2870 C.2871 C.4073 | Switch for Boot Light (Lucas 31185—94L) Earth-Lead for Boot Light Switch (Lucas 859400/A) Bracket, mounting Boot Light Switch Plate, Striking, for Boot Light Switch Plate, Striking, for Boot Light Switch | V.31 | 1 1 1 1 1 | Fitted from Chassis No. 660001 to 660058 670001 to 670184. Fitted to Chassis No. |
| C.4074 BD.2391 | Plate, Packing, for Boot Light Switch Plate, Tapped, for Boot Light Switch | | 2 } 1 | 660059 and subs. |
| M.204/3R BD.1499/1 | Screw, Wood, for Boot Light fixing Screw, Wood, for Boot Light fixing | | 2 2 | 670185 and subs. |
| | Screw, Wood, for Boot Light fixing Screw, Wood, for Boot Light fixing HEADLAMP, L.H. (LUCAS 50838 PF.770) | V.32 | 2 | |
| BD.1499/1 C.2749 | Screw, Wood, for Boot Light fixing | V.32 | 2 2 | FITTED TO HOME MODELS ONLY from Chassis No. 660001 to 660058 670001 to 670184 |
| BD.1499/1 C.2749 C.2749/1 | Screw, Wood, for Boot Light fixing HEADLAMP, L.H. (LUCAS 50838 PF.770) | V.32 | 1 | FITTED TO HOME MODELS ONLY from Chassis No. 660001 to 660058 670001 to 670184 FITTED TO HOME MODELS ONLY |
| BD.1499/1 | Screw, Wood, for Boot Light fixing HEADLAMP, L.H. (LUCAS 50838 PF.770) HEADLAMP, R.H. (LUCAS 50839 PF.770) | V.32 | 1 1 | FITTED TO HOME MODELS ONLY from Chassis No. |
| BD.1499/1 C.2749 C.2749/1 C.2625 C.2625/1 3453 3435 3430 3433 3432 3431 3449 3581 | HEADLAMP, L.H. (LUCAS 50838 — PF.770) HEADLAMP, R.H. (LUCAS 50839 — PF.770) HEADLAMP, L.H. (LUCAS 50778/A — PF.770) HEADLAMP, R.H. (LUCAS 50778/A — PF.770) Rim Assembly, Outer (553620) Screw, securing Outer Rim (552796) Rim, Inner (552686) Ring, fixing Rims (552704) Ring, Sealing (Rubber) behind Fixing Ring (552688) Wire, securing Reflector (552687) Reflector (complete with Glass) (553600) Adapter, Double Pole, for L.H. Headlamp (858543) Adapter, Single Pole, for R.H. Headlamp (858540) | V.33 V.34 V.35 V.36 V.37 V.38 V.39 V.40 | 2 2 1 1 1 2 2 2 2 2 2 1 1 1 | FITTED TO HOME MODELS ONLY from Chassis No. 660001 to 660058 670001 to 670184 FITTED TO HOME MODELS ONLY for Chassis No. |
| BD.1499/1 C.2749 C.2749/1 C.2625 C.2625/1 3453 3435 3430 3433 3432 3431 3449 3581 | HEADLAMP, L.H. (LUCAS 50838 — PF.770) HEADLAMP, R.H. (LUCAS 50839 — PF.770) HEADLAMP, L.H. (LUCAS 50778/A — PF.770) HEADLAMP, R.H. (LUCAS 50778/A — PF.770) Rim Assembly, Outer (553620) Screw, securing Outer Rim (552796) Rim, Inner (552686) Ring, fixing Rims (552704) Ring, Sealing (Rubber) behind Fixing Ring (552688) Wire, securing Reflector (552687) Reflector (complete with Glass) (553600) Adapter, Double Pole, for L.H. Headlamp (858543) | V.33 V.34 V.35 V.36 V.37 V.38 V.39 | 2 2 1 1 1 2 2 2 2 2 2 2 1 1 | FITTED TO HOME MODELS ONLY from Chassis No. 660001 to 660058 670001 to 670184 FITTED TO HOME MODELS ONLY for Chassis No. 670185 and subs. |

| Part No. | Description. Plat | | Remarks. |
|--|---|------------------|---|
| C.2749 | HEADLAMP (LUCAS 50838 — PF.770) | 2 | FITTED TO R.H. DRIVE MODELS FOR EXPORT ONLY from Chassis No. 660001 to 660058 670001 to 670184 |
| C.2625 | HEADLAMP (LUCAS 50778/A — PF.770) | 2 | FITTED TO R.H. DRIVE MODELS FOR EXPORT ONLY for Chassis No. 660059 and subs. 670185 and subs. |
| 3581 C.4644 | Adapter (Double Pole) (858543) Bulb (12 volt, 48/48 watt) (302) All other Spares as for Headlamps C.2749 and C.2625 on Page 83 | 2 2 | |
| C.2749/2 | HEADLAMP (LUCAS 056244 — PF.770) | 2 | FITTED TO L.H. DRIVE MODELS FOR EXPORT ONLY from Chassis No. 660001 to 660058 670001 to 670184 |
| C.2625/2 | HEADLAMP (LUCAS 50778/A PF.770) | 2 | FITTED TO L.H. DRIVE MODELS FOR EXPORT ONLY for Chassis No. 660059 and subs. 670185 and subs. |
| C.5430 | Bulb (12 volt 45/35 watt) ("Duplo" Prefocus) | 2 | FOR EXPORT TO SWITZERLAND |
| C.4643 3581 | Buib (12 volt, 48/48 watt) (303) Adapter, Double Pole (85843) All other Spares as Headlamps C.2749 and C.2625 | 2 2 | ONLY |
| C.2749/3 | HEADLAMP (LUCAS 50841/A — PF.770) | 2 | FOR EXPORT TO CANADA AND U.S.A. ONLY from Chassis No. 660001 to 660058 670001 to 670184 |
| C. 2625/3 | HEADLAMP (LUCAS 50781/B — PF.770) | 2 | FOR EXPORT TO CANADA AND U.S.A. ONLY for Chassis No. 660059 and subs. 670185 and subs. |
| 3450 3451 | Ring, fixing Rims (553614) Ring, Sealing (Rubber) behind Fixing Ring (553615) | 2 2 | |
| 3454 | Adapter (553724) All other Spares as Headlamps C.2749 and C.2625 except that Reflector is not supplied. | 2 | |
| C.2750 | HEADLAMP (LUCAS 50840/A — PF.770EF) | 2 | FOR EXPORT TO FRANCE ONLY from Chassis No. 660001 to 660058 670001 to 670184 |
| C.2626 | HEADLAMP (LUCAS 50780/A — PF.770EF) | 2 | FOR EXPORT TO FRANCE ONLY for Chassis No. 660059 and subs. |
| 3470 5291 | Adapter for Bulb (3-pin) (562303) Backshell Assembly (552942) All other Spares as Headlamps C.2749 and C.2625. | 2 2 | 670185 and subs. |
| BD.3523 BD.3524 BD.2563/1 C.721 | Plate, Tapping, L.H., for Headlamp Rim Fixing Plate, Tapping, R.H., for Headlamp Rim Fixing Screw, Set, securing Tapping Plates Washer, Shakeproof, on Setscrews Switch Displace Headlames (1993, 2018) | 1 1 4 4 | |
| C.2639 C.2659 | Switch, Dipping Headlamps (Lucas 31284/A— V.44 FS.22/1) Cap (Rubber) over Dipper Switch (Lucas 360026) V.45 | 1 | |
| C.2837 | Bracket, mounting Dipper Switch | i | |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|--|---|--------------------------------------|----------------------------|---|
| | SIDELAMP | | | |
| C.2881 C.2891 C.7284 | Casing Assembly (Shell) Seal (Rubber) between Casing and Front Wing Casing (Shell) | V.46 | 2 2 2 | Fitted from Chassis No. 660001 to 661024 670001 to 672926 Fitted to Chassis No. 661025 and subs. 669001 and subs. |
| C.2751 C.4517 | Interior Assembly (Lucas 52150/A-490) (comprising Bulb Holder, Rim and Glass) Interior Assembly (HOME MODELS ONLY) | V.47 | 2 2] | 672927 and subs. 679001 and subs. Fitted from Chassis No. 660001 to 661024 670001 to 672926 Fitted to Chassis No. |
| C.4554/1 C.4549/2 989 BD.1063 C.2525 | Interior Assembly (EXPORT MODELS ONLY) Screw, securing Interior to Casing Bulb (12 volt, 6 watt) Bulb (12 volt, 6 watt) (207) Bulb (12 volt, 6/18 watt) (361) | V.48 V.49 | 2 } 2 2 2 2 2 2 | 661025 and subs. 669001 and subs. 672927 and subs. 679001 and subs. For use with C.2751 Interior For use with C.4517 Interior For use with C.4554/1 Interior |
| C.2539/2 AW.102/T | Nut, securing Side Lamp Casing to Wing Washer, Plain, under Nuts | | 4} | Fitted from Chassis No. 660001 to 661024 670001 to 672926 |
| C.4691 | INDICATOR (RED) IN SIDELAMP CASING | | ² } | Fitted to Chassis No. 661025 and subs. |
| C.4098/2 | Clip, Spring, securing Indicators | | 2] | 672927 and subs. |
| | ITEMS REQUIRED WHEN "FLASHING INDICATORS" ARE FITTED | | | FITTED TO EXPORT MODELS ONLY for Chassis No. 661025 and subs. 67927 and subs. 679001 and subs. |
| C.4518 C.5230 C.5232 NS.125/4D NN.125/L C.724 | Double-Relay Flasher-Unit (Tung Soi 241/D) Bracket, mounting Flasher Unit Screw, Set, securing Bracket Nut on Setscrews Washer, Shakeproof, under Nuts | | 1 1 3 3 3 | |
| C.2752 | TAIL/STOP LAMP (LUCAS 53151-488) | | 2 | Fitted from Chassis No. 660001 to 660130 |
| 3485 3484 3483 3427 615 | Rim only (572734) Glass only (572704) Body only (Rubber) (572703) Interior Assembly (552101) Bulb (12 volt, 6/24 watt) (189) | V.50 V.51 V.52 V.53 V.54 | 2 2 2 2 2 2 | 660145 to 660227 670001 to 670466 670488 to 670736 |
| C.2993 | TAIL/STOP LAMP (LUCAS 53178-488) | | 2 | Fitted from Chassis No. 660131 to 660144, 660228 to 660857, 670467 to 670487, 670737 to 671422, |
| 3485 3484 3483 3427 C.9125 | Rim only (572734) Glass only (572704) Body only (Rubber) (572703) Interior Assembly (552101) Bulb (12 volt, 6/24 watt) (353) | V.50 V.51 V.52 V.53 V.54 | 2 2 2 2 2 | 679001 to 679013 |
| C.2993/1 | TAIL/STOP LAMP (LUCAS 052626/A-488) | | 2 | Fitted to Chassis No. 660858 and subs. 669001 and subs. |
| 3485 3484 3483 3427 C.2525 | Rim only (572734) Glass only (572704) Body only (Rubber) (572703) Interior Assembly (552101) Bulb (12 volt 6/18 watt) (361) | | 2 2 2 2 2 | 671423 and subs. 679014 and subs. |

| | | DI | No see |
|---|--|--------------|--|
| Part No. | Description. | Plate No. | No. per Unit. Remarks. |
| BD.3050 BD.3051 BD.2964 BD.4529 BD.4530 BD.4550 BD.2964 C.3901 | Housing for L.H. Tail/Stop Lamp Housing for R.H. Tail/Stop Lamp Seal (Rubber) for Housing Housing for L.H. Tail/Stop Lamp Housing for R.H. Tail/Stop Lamp Stud for Housings Seal (Rubber) for Housings Switch, Stop Light (Lockheed 23388) | V.55 | Fitted from Chassis No. 660001 to 660058 7 Fitted from Chassis No. 7 F |
| C.2520 C.2783 | Cable, connecting Stop Light Switch Sleeve for Stop Light Switch Cable | ٧.55 | Fitted to Chassis No. 670185 and subs. |
| C.2838 | NUMBER PLATE ILLUMINATION AND REVERSE LAMP (LUCAS 53159/A — 469) | | 1 |
| 3479 3478 | Cover, complete with Window (572347) Window only (572328) | V.56 | 1 1 |
| 3477 | Beading (Rubber) (572326) | V.57 | 1 |
| 989 645 | Bulb, 12 volt, 6 Watt, for Number Plate Illumination Bulb, 12 volt, 24 watt, for Reverse Lamp (199) | V.58 V.59 | 2 1 |
| C.1083 C.4531 | Switch for Reverse Lamp (Lucas 31077/B—SS.10/LS) Gasket for Reverse Lamp Switch (Lucas 163682) | V.60 V.61 | 1 |
| C.2828 | HORN (LOW NOTE) (LUCAS 69032 — WT.29U) | V.62 | 1 |
| C.2827 | HORN (HIGH NOTE) (LUCAS 69033 — WT.29U) | V.62 | 1 |
| 3494 3493 3492 | Contact, Set (690741) Bracket (690617) Cover (600805) | | 2 2 2 |
| C.4550 C.2947 NS.125/7D NN.125/L NB.131/7D NN.131/L | Grommet for Horns (Lucas 690995) Bracket, mounting Horns Screw, Set, securing Horns to Brackets Nut on Setscrews Bolt, securing Brackets Nut on Bolts | | 2 2 4 4 4 |
| C.2782 | RELAY BOX FOR HORNS (LUCAS 33116/A — SB.40/L.2) | V.63 | 1 Fitted from Chassis No. 660001 to 660784 670001 to 671097 |
| C.4532 | RELAY BOX FOR HORNS (LUCAS 33135/B—SB.40/1) | | 1 Fitted to Chassis No. 660785 and subs. 671098 and subs. 669001 and subs. 679001 and subs. |
| C.2766 | STEERING COLUMN CONTROL (LUCAS 32809/F—CC.1/L.7) | \$.90 | 1 FITTED TO HOME MODELS ONLY |
| 2845 | Horn-Push Assembly (322167) | V.64 | 1 |
| 2844 2842 | Spring, Return, for Horn-Push (322166) Contact Assembly for Horn-Push (321824) | V.66 | 3 1 |
| 2846 | Rim (Chromium Plated) and Base Assembly (322168) | V.67 | 1 |
| 2865 2881 | Tube, Stator (323418) Plate, Stator, and Sleeve Assembly (324659) | V.68 | 1 1 |
| C.4514 | STEERING COLUMN CONTROL (LUCAS 32847) | | 1 FITTED TO EXPORT MODELS ONLY for Chassis No. 661025 and subs. 669001 and subs. 672927 and subs. 679001 and subs. |
| 2866 2879 2843 2877 | Base Assy, for Flashing Indicators Switch (323438) Lever operating Switch (324655) Plunger for Rotor (322150) Cam, Pawls and Springs (324527) | | 1 1 1 1 set |
| 2886 | Trafficator Switch Assembly (324693) | | 1 |
| | All other Spares as for C.2766. | | |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|--|--|--|--|--|
| C.2764 | WINDSCREEN WIPER (LUCAS 072651 — CR.4/GC.46) | | 1 | Fitted from Chassis No. 660001 to 660033 670001 to 670079 |
| 2667 3528 3509 3545 2658 3542 738747 | Motor only (75088) Armature (736012) Brush (supplied in set of 2) (729367) Cover, End (Bakelite) (738560) Wheelbox Assembly (72590) Drive, Flexible (Inner Cable) (45½" long) (736010) Casing, Outer (9½" long) | | 1 1 set 1 2 1 | |
| 3541 3529 | Casing, Outer $(2\frac{47.7}{32})$ long) (738009) Casing, Outer (3" long) (736080) | | 1 1 | |
| 3531 3533 | Arm only (736411) Blade only (736428) | | 2 2 | |
| C.2989 | WINDSCREEN WIPER (LUCAS 072700/B— CR.4/GC.46) | | 1 | Fitted from Chassis No. 660034 to 660058 670080 to 670184 |
| 2666 3528 3509 3545 2658 3542 736242 3541 3529 | Motor only (75084) Armature (736012) Brush (supplied in set of 2) (729367) Cover, End (Bakelite) (738560) Wheelbox Assembly (72590) Drive, Flexible (Inner Cable) (45½" long) (736010) Casing, Outer (5½" long) Casing, Outer (24½" long) (738009) Casing, Outer (3" long) (736080) | V.69 V.70 V.71 V.72 V.73 V.74 | 1 1 1 set 1 2 1 1 1 | |
| 3539 3540 3538 | Arm only R.H. (737624) Arm only, L.H. (737625) Blade only (737572) | V.75 V.76 V.77 | 1 1 2 | |
| C.4051 | WINDSCREEN WIPER (LUCAS 072700 — CR.4/GC.48) | | 1 | Fitted to Chassis No. 660059 and subs. 670185 and subs. |
| 2666 3528 3509 3545 2658 3542 5332 3541 3529 3529 | Motor only (75084) Armature (736012) Brush (supplied in set of 2) (729367) Cover, End (Bakelite) (738560) Wheelbox Assembly (72590) Drive, Flexible (Inner Cable) (45½" long) (736010) Casing, Outer (19½" long) (739596) Casing, Outer (24½" long) (738009) Casing, Outer (3" long) (736080) Grommet on Screen Wiper Spindle (734458) | V.69 V.70 V.71 V.72 V.73 V.74 | 1 1 1 set 1 2 1 1 1 1 1 | |
| 3539 3540 3538 | Arm only R.H. (737624) Arm only, L.H. (737625) Blade only (Laminated type) (737572) | V.75 V.76 V.77 | 1 1 2 | Fitted from Chassis No. 660001 to 661005 |
| 3562 | Blade only (Moulded type) (741680) | | 2 | 670001 to 672715 Fitted to Chassis No. 661006 and subs. 672716 and subs. |
| C.2670 | Bracket , mounting Screen Wiper Motor to Scuttle | V.78 | 1 | |
| FS.204/3D FN.104/L C.724 C.4052 FS.104/5D | Screw, Set, securing Bracket Nut on Setscrews Washer, Shakeproof, under Nuts Bracket, mounting Wheelboxes Screw, Set, securing Bracket | | 4 4 2 6 | Fitted to Chassis No. |
| FW.104/T FN.104/L C.724 | Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts | | 12 6 6 | 660059 and subs. 670185 and subs. |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | | |
|-------------------|--|--------------|------------------|-----------------------------|--------|-------|
| C.5231 | WINDSCREEN WIPER (LUCAS 072894— CRT.14) | | 1 | FITTED TO FIXED MODELS ONLY | HEAD | COUPE |
| 2668 3546 | Motor only (75143/A) Armature (739731) | | 1 | | | |
| 3509 | Brush (supplied in set of 2) (729367) | | 1 set | | | |
| 3561 | Cover, End (Bakelite) (741556) | | 1 | | | |
| 2661 5328 | Wheelbox Assembly (72630) Drive, Flexible (Inner Cable) (31 ** long) (736360) | | 1 | | | |
| 3548 | Casing, Outer (15\frac{1}{2} long) (739855) | | i | | | |
| 739933 | Casing, Outer (11 5 / long) | | i | | | |
| 3553 | Casing, Outer (3" long) (740031) | | 1 | | | |
| 3522 | Grommet on Wheelbox Spindles (734458) | | 2 | | | |
| 3539 | Arm only, R.H. (737624) | | 1 | | | |
| 3540 | Arm, only, L.H. (737625) | | 1 | | | |
| 3562 | Blade only (Moulded Type) (741680) | | 2 | | | |
| C.5224 | Bracket, mounting Wheelboxes | | 1 | | | |
| AS.502/4H | Screw, Set, securing Bracket Nut on Setscrews | | 1 | | | |
| AN.102/L C.723 | Washer, Shakeproof, under Nuts | | 7 | | | |
| AS.302/6H | Screw, Set, securing Wheelboxes | | 4 | | | |
| AW.102/T | Washer, Plain, on Setscrews | | 8 | | | |
| AN.102/L | Nut on Setscrews | | 4 | | | |
| C.723 | Washer, Shakeproof, under Nuts | | 4 | | | |
| 3556 | MOUNTING BRACKET FOR WINDSCREEN WIPER MOTOR (740753) | | 1 | FIXED HEAD COUP | E ONLY | r |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|---|--------------|------------------|--|
| C.2767 | BATTERY (LUCAS 4010200F - STXW.11E) | | 2 | |
| C.2768 C.2855/3 C.2855/2 C.2855/1 | Lid for Battery (Lucas 4159052) Rod, fixing Battery Lid (Lucas S.3022/3A) Nut on Rod (Lucas S.2122/4) Sleeve-Nut on Rod (Lucas 52017/5B) | | 2 4 4 4 | |
| C.2778 C.2833 C.2834 | Cable, Battery (Positive to Earth) (Lucas 810709) Cable, Battery (Positive to Negative) (Lucas 810321) Cable, Battery (Negative) (Lucas 859388) | | 1 1 1 | Fitted from Chassis No. 660001 to 660058 |
| C.2834/1 | Cable, Battery (Negative) (Lucas 860087) | | 1 | 670001 to 670184 Fitted to Chassis No. 660059 and subs. |
| C.2609 | Screw, securing Cables to Batterles (Lucas 186111) | | 4 | 670185 and subs. |
| C.2799/1 | BODY HARNESS (LUCAS 994611/B) | | 1 | FITTED TO R.H. DRIVE CARS ONLY |
| C.2800 | BODY HARNESS (LUCAS 994651/A) | | 1 | FITTED TO L.H. DRIVE CARS ONLY |
| C.2801/1 | PANEL HARNESS (LUCAS 994621/B) | | 1 | FITTED TO R.H. DRIVE CARS ONLY from Chassis No. 660001 to 660058 |
| C.2802/1 | PANEL HARNESS (LUCAS 994661/B) | | 1 | FITTED TO L.H. DRIVE CARS ONLY from Chassis No. 670001 to 670184 |
| C.2801/2 | PANEL HARNESS (LUCAS) | | 1 | FITTED TO R.H. DRIVE CARS ONLY For Chassis No. 660059 to 660934 669001 to 669002 |
| C.2802/2 | PANEL HARNESS (LUCAS) | | - 1 | FITTED TO L.H. DRIVE CARS ONLY For Chassis No. 670185 to 671878 679001 to 679315 |
| C.5321 | PANEL HARNESS (LUCAS 997751/B) | | 1 | FITTED TO R.H. DRIVE CARS ONLY For Chassis No. 660935 to 661025 |
| C.5322 | PANEL HARNESS (LUCAS 997761/D) | | 1 . | FITTED TO L.H. DRIVE CARS ONLY For Chassis No. 671879 to 672942 679316 to 680109 Also to 672944, 672945, 672949, 680111, 680112, 680115 |
| C.7129 | PANEL HARNESS | | 1 | FITTED TO R.H. DRIVE CARS ONLY For Chassis No. 661026 and subs, 669003 and subs. |
| C.7130 | PANEL HARNESS | | 1 | FITTED TO L.H. DRIVE CARS ONLY For Chassis No. 672950 and subs. 680116 and subs. Also to 672943, 672946, 672947, 672948, 680110, 680113, 680114 |
| C.5260 | ENGINE HARNESS (LUCAS) | | 1] | Fitted from Chassis No |
| C.5258 | JUNCTION BOX FOR ENGINE HARNESS (LUCAS) | | 1 | 671797 to 671878 679222 to 679315 |
| C.5213 | CHASSIS HARNESS (LUCAS 994601/K) | | 1 | FITTED TO R.H. DRIVE CARS ONLY |
| C.5214 | CHASSIS HARNESS (LUCAS 994641/J) | | 1 . | FITTED TO L.H. DRIVE CARS ONLY |

| Part No. | Description. | Plate No. | No. pe Unit. | |
|--|---|--------------|-----------------------|--|
| C.2831/1 | LUGGAGE BOOT HARNESS (LUCAS 994631/B) | | 1 | FITTED TO L.H. AND R.H. DRIVE CARS |
| C.2858 C.2859 M.108/4R | Conduit for Harness Conduit for Harness Screw, Wood, securing Conduits | | 1 8 | Fitted from Chassis No. 660001 to 660058 670001 to 670184 |
| C.5274 | HARNESS FOR FLASHER UNIT (EXPORT MODELS ONLY) | | 1 | FITTED TO R.H. DRIVE CARS ONLY For Chassis No. 661026 and subs. 669003 and subs. |
| C.5275 | HARNESS FOR FLASHER UNIT (EXPORT MODELS ONLY) | | | FITTED TO L.H. DRIVE CARS ONLY For Chassis No. 672950 and subs. 680116 and subs. Also to 672943, 672946, 672947, 672948, 680110, 680113, 680114 |
| | ELECTRICAL CABLES | | | |
| C.2770 C.2610 C.2611 C.5323 C.2884 C.2885 C.5211 | Cable (Petrol Pump) (Lucas 859386) Cable (Solenoid to Starter) (Lucas 999618) Cable (Coil to Distributor) (Lucas 999137) Cable (Coil to Distributor) (Lucas 999145) Cable (Carburetter Solenoid to Earth) (Lucas 859389) Cable (Carburetter Solenoid to Coil) (Lucas 859387) Cable (Control Box to Horn Relay) (Lucas 860350) Cable (Control Box to Horn Relay) (Lucas 860349) | | 1 1 1 1 1 1 1 | Fitted from Eng. No. W.1001 to W.4059 Fitted to Eng. No. W.4060 and subs. Fitted from Eng. No. W.1001 to W.4059 FITTED TO L.H. DRIVE CARS ONLY For Chassis No. 670098 and subs. FITTED TO R.H. DRIVE CARS ONLY For Chassis No. 660785 to 660816 |
| C.5241 C.5242 C.5243 C.5245 C.5511 C.5246 | Cable for L.H. Side Lamp (EXPORT MODELS ONLY) Cable for R.H. Side Lamp (EXPORT MODELS ONLY) Cable for Side Lamp (HOME MODELS ONLY) Cable for Interior Lights Cable for Interior Lights Cable for Interior Lights Switch | | 1 1 2 1 1 | Fitted to Chassis No. 661026 and subs. 669003 and subs. 672950 and subs. 680116 and subs. Also to 672943, 672946, 672947, 672948, 680110, 680113, 680114 FITTED TO FIXED HEAD COUPE MODELS ONLY FITTED TO DROP HEAD COUPE ONLY FITTED TO FIXED HEAD AND DROP HEAD COUPE ONLY |
| C.2520 | Cable for Stop Light Switch ELECTRICAL EARTH LEADS | | 1 | |
| C.2612 C.2895 C.5244 C.5247 C.5204 | Earth-Lead from Engine to Frame and from Body to Engine (Lucas 859340) Earth-Lead for Petrol Pumps Earth-Lead for Side Lamps Earth-Lead for Interior Lights Terminal, Earth, for Lamps (Lucas 860019) | | 2 1 2 2 | For Chassis Nos. see Side Lamp Cables FIXED HEAD MODELS ONLY |
| C.2783 C.2806 | CABLE SLEEVES Sleeve for Headlamp Cables (Lucas 859300) Sleeve for Sidelamp Cables (Lucas 859321) | | 2 1 | |

| C.1040/16 Clip, securing Panel Harness C.1040/19 Clip, securing Sidelamp Cables C.2956 Clip, securing Carburetter Solenoid, Oil Level C.1543/4 Clip, securing Carburetter Solenoid, Oil Level C.1040/2 Clip, securing Chasist Harness to L.H. Side C.1040/2 Clip, securing Dynamo Cable C.1071/2 Clip, securing Dynamo Cable C.1071/2 Clip, securing Dynamo Cable C.1071/2 Clip, securing Dynamo Cable C.1080/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tail Lamp Cables C.1080/6 Clip, securing Stop Light Switch Cable C.1080/6 Clip, securing Stop Light Switch Cable C.1080/16 Clip, securing Stop Light Switch Cable C.1080/17 Clip, securing Stop Stop Light Switch Cable C.1080/17 Clip, securing Body Harness (Junction Box End) C.1080/17 Clip, securing Body Harness (Rear Connector) C.1080/17 Clip, securing Switch Cable Clip, securing Reverse Light Switch Cable Clip, securing Chashis Harnes C.1080/17 Clip, securing Chashis Harnes C.1080/17 Clip, securing Switch Cable Clip, securing Switch Cable Clip, securing | Part No. | Description. | Plate No. per No. Unit. Remarks. |
|--|--------------------------|--|--|
| C.1071/2 Cilp, securing Body Harness (Junction Box End) C.1040/15 Cilp, securing Body Harness (Junction Box End) C.1040/16 Cilp, securing Body Harness (Junction Box End) C.1040/16 Cilp, securing Reverse Light Switch Cable C.1040/16 Cilp, securing Reverse Light Switch Cable C.1040/16 Cilp, securing Ferror Tank Cable C.1040/16 Cilp, securing Ferror Tank Cable C.1040/16 Cilp, securing Sidelamp Cables C.2956 Cilp, securing Graburetter Solenoid, Oil Level Switch and Coil Cables Associated Cables C.1040/16 Cilp, securing Chassis Harness to L.H. Side Cilp, securing Chassis Harness to L.H. Side Cilp, securing Chassis Harness to L.H. Side Cilp, securing Chassis Harness to Cross Member C.1040/12 Cilp, securing Chassis Harness to Cross Member C.1040/16 Cilp, securing Chassis Harness to Cross Member C.1040/17 Cilp, securing Soop Light Switch Cable Cilp, securing Sidelamp Cables Cilp, securing Sidelamp Cable Cilp, securing Sidelamp Cables Cilp, securing Sody Harness (Barr Connector) Cilp, securing Sody Harness (Barr Connector) Cilp, securing Sody Harness (Barr Connector) Cilp, securing Carburetter Cable Cilp, securing Reverse Light Switch Cable Cilp, securing Charles Harness to L.H. Side Member and Cross Member of Chassis Frame, As quired for R.H. Drive Cars. Cideology Cilp, securing Boot Harness Cilp, securing Sody Harness (Barr Connector) Cilp, securing Charles Harness Cilp, securing Charles Harness Cilp, securing Sody H | | | |
| C.1040/15 Clip, securing Body Harness (Rear Connector) C.1040/16 Clip, securing Reverse Light Switch Cable C.1040/16 Clip, securing Perrol Tank Cable C.1040/16 Clip, securing Panel Harness C.1040/16 Clip, securing Sidelamp Cables C.2056 Clip, securing Carburetter Solenold, Oil Level Switch and Coil Cables Clip, securing Chassis Barnes to L.H. Side C.1040/16 Clip, securing Chassis Barnes to L.H. Side C.1040/16 Clip, securing Chassis Barnes to L.H. Side C.1040/17 Clip, securing Boot Harness C.1040/17 Clip, securing Boot Harness C.2060 Clip, securing Boot Harness C.2060 Clip, securing Boot Harness C.2060 Clip, securing Boot Harness C.2060/17 Clip, securing Sidelamp Cables C.2060/17 Clip, securing Sidelamp Cables C.2060/17 Clip, securing Dipper Switch Cable C.2060/17 Clip, securing Dipper Switch Cable C.2060/17 Clip, securing Sidelamp Cables C.2060/17 Clip, securing Boot Harness C.2060/17 Clip, securing Boot Harness (Aunction Box End) C.2060/17 Clip, securing Boot Harness (Near Connector) C.2060/17 Clip, securing Carburetter Solenold, Oil Level C.2070 Clip, securing Connector Cables Clip, securing Soledamp Cables C.2070 Clip, securing Soledamp Cable | | CARS | |
| C.1040/9 Clip, securing Reverse Light Switch Cable C.1040/16 Clip, securing Reverse Light Switch Cable C.1040/16 Clip, securing Panel Harness C.1040/16 Clip, securing Panel Harness C.1040/16 Clip, securing Panel Harness C.1040/16 Clip, securing Sidelamp Cables C.1040/19 Clip, securing Sidelamp Cables C.2056 Clip, securing Carburetter Solenoid, Oil Level Switch and Coil Cables C.1040/19 Clip, securing Carburetter Solenoid, Oil Level Switch and Coil Cables C.1040/10 Clip, securing Chasis Harness to L.H. Side Member and Cross Member of Chasis Frane, also R.H. Haadlamp Cable C.1040/12 Clip, securing Dynamo Cable C.1040/12 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/16 Clip, securing Boot Harness C.1040/17 Clip, securing Boot Harness C.1040/17 Clip, securing Boot Harness C.1040/17 Clip, securing Stop Light Switch Cable C.1040/17 Clip, securing Dynamo Cable C.1040/17 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/17 Clip, securing Boot Harness C.1040/10 Clip, securing Dynamo Cable C.1040/10 Clip, securing Boot Harness C.1040/10 Clip, securing Boot Harness C.1040/10 Clip, securing Dynamo Cable Clip, securing Sidelamp Cables Clip, securing Sidelamp Cables Clip, securing Dynamo Cable Clip, securing Sidelamp Cables Clip, securing Cabrates Sidelamp Cable Clip, securing Character Solenoid, Oil Level Clip, securing Character Solenoid, Oil Level Clip, securing Character Solenoid, Oil Level Clip, securing Sidelamp Cables Clip, securing Sidelamp Cables Clip, securing Sidelamp | | | |
| C.1040/2 Clip, securing Reverse Light Switch Cable Clips, securing Pertol Tank Cable Clips, securing Pertol Tank Cable C.1040/16 Clips, securing Panel Harness C.1040/17 Clips, securing Sidelamp Cables C.2956 C.2956 Clips, securing Carborester Solenold, Oil Level C.1040/19 Clips, securing Carborester Solenold, Oil Level C.2956 Clips, securing Carborester Solenold, Oil Level Also R.H. Headalamp Cable Clips, securing Chassis Harness to L.H. Side Member and Cross Member of Chassis Frame, also R.H. Headalamp Cable Clips, securing Chassis Harness to Cross Member Clips, securing Dynamo Cable Clips, securing Boot Harness Clips, securing College Switch Cable Clips, securing Sidelamp Cables Clips, securing Sidelamp Cables Clips, securing Sidelamp Cables Clips, securing Dipper Switch Cable Clips, securing Starder Cable Clips, securing Boot Harness (Junction Box End) Clips, securing Boot Harness (Rar Connector) Clips, securing Carboretter Solenold, Oil Level Switch and Coil Connector Cables Clips, securing Chasis Harness (Rar Connector) Clips, securing | | Clip, securing Body Harness (Junction Box End) | |
| C.1040/9 Cilip, securing Petrol Tank Cable C.1040/16 Cilip, securing Panel Harness C.1040/16 Cilip, securing Sidelamp Cables C.2056 Cilip, securing Sidelamp Cables C.2056 Cilip, securing Carburetter Solenold, Oil Level Switch and Coil Cables C.1040/9 Cilip, securing Carburetter Solenold, Oil Level Switch and Coil Cables C.1040/12 Cilip, securing Chasis Harness to L.H. Side Hamber and Cross Hember of Chasis Frame, C.1040/12 Cilip, securing Dynamo Cable C.1040/12 Cilip, securing Dynamo Cable C.1040/17 Cilip, securing Dynamo Cable Cilip, securing Bood Harness Cilip, securing Stop Light Switch Cable Cilip, securing Stop Light Switch Cable Cilip, securing Stop Light Switch Cable Cilip, securing Dipper Switch Cable Cilip, securing Body Harness (Junction Box End) Cilip, securing Body Harness (Rear Connector) Cilip, securing Cable Target Rear Connector) Cilip, securing Chable Target Connector) Cilip, securing Sidelamp Cables Cilip, securing Petrol Tark Cable Cilip, securing Petrol Tark Cable Cilip, securing Sidelamp Cables Cil | | | |
| C.1040/9 Cilp, securing Sidelamp Cables C.2956 Cilp, securing Carburetter Solenold, Oil Level Switch and Coil Cables C.1543/4 Cilp, securing Carburetter Solenold, Oil Level Switch and Coil Cables C.1543/4 Cilp, securing Chastis Harness to L.H. Side Switch and Coil Cables C.1040/2 Cilp, securing Dynamo Cable C.1040/1 Cilp, securing Dynamo Cable C.1040/1 Cilp, securing Donamo Cable C.1040/1 Cilp, securing Book Harness, L.H. and R.H. Stop/ C.1040/1 Cilp, securing Book Harness, L.H. and R.H. Stop/ C.1040/1 Cilp, securing L.H. Stop/Tail Lamp Cable C.1040/17 Cilp, securing Stop Light Switch Cable C.1040/17 Cilp, securing Sidelamp Cables C.1040/17 Cilp, securing Sidelamp Cable C.1040/17 Cilp, sec | | Clip, securing Petrol Tank Cable | See 3 required for R.H. Drive Cars. 4 re |
| C.2956 Cilp, securing Carburetter Solenoid, Oil Level Switch and Coil Cables C.1543/4 Member and Cross Member of Chastis Frame, also R.H. Headiamp Cable C.1040/2 Cilp, securing Chastis Harness to L.H. Side Member and Cross Member of Chastis Frame, also R.H. Headiamp Cable C.1040/17 Cilp, securing Donamo Cable C.1040/17 Cilp, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.1040/17 Cilp, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.2888 Cilp, securing E.H. Stop/Tail Lamp Cable C.1040/17 Cilp, securing Stop Light Switch Cable C.1040/17 Cilp, securing Stop Light Switch Cable C.1040/17 Cilp, securing Stop Light Switch Cable C.1040/17 Cilp, securing Donamo Cable C.1040/17 Cilp, securing Donamo Cable C.1040/17 Cilp, securing Donamo Cable C.1040/17 Cilp, securing Sidelamp Cables C.1040/17 Cilp, securing Sidelamp Cable C.1040/17 Cilp, securing Stop Light Switch Cable C.1040/17 Cilp, securing Sidelamp Cables C.1040/17 Cilp, securing Stop Light Switch Cable C.1040/17 Cilp, securing Body Harness (Junction Box End) C.1040/17 Cilp, securing Body Harness (Junction Box End) C.1040/17 Cilp, securing Body Harness (Junction Box End) C.1040/17 Cilp, securing Body Harness (Marction Box End) C.1040/19 Cilp, securing Body Harness (Raar Connector) C.1040/19 Cilp, securing Sody Harness to L.H. Side Member and Cross Member of Chastis Frame, also R.H. Horn Cable to R.H. Side Member C.2796 Cilp, securing Sody Harness, L.H. and R.H. Stop/ Tall Lamp Cable C.1040/16 Cilp, securing Sody Harness, L.H. and R.H. Stop/ Tall Lamp Cable C.1040/16 Cilp, securing Sody Harness, L.H. and R.H. Stop/ Tall Lamp Cable C.104 | C.1040/16 | Clip, securing Panel Harness | |
| C.2956 | C.1040/9 | Clip, securing Sidelamp Cables | |
| C.1543/4 Cilip, securing Chassis Harness to L.H. Side Member and Cross Member of Chassis Frame, also R.H. Haddiamp Cable Cilip, securing Chassis Harness to Cross Member Cilip, securing Chassis Harness to Cross Member Cilip, securing Chassis Harness to Cross Member Cilip, securing Chassis Harness Cilip, securing Chassis Harness Cilip, securing Chassis Harness Cilip, securing Boot Harness, L.H. and R.H. Stop Cilip, securing Boot Harness Cilip, securing Chassis Harness Cilip, securing Chassis Harness Cilip, securing Chassis Mo. Cable Cilip, securing Stellam C | C.2956 | Clip, securing Carburetter Solenoid, Oil Level | |
| C.1040/2 Clip, securing Chassis Harness to Cross Member 2 C.1040/8 Clip, securing Dynamo Cable 1 C.1071/2 Clip, securing Dynamo Cable 2 C.1040/16 Clip, securing Boot Harness 1 C.1040/6 Clip, securing Boot Harness 1 C.1040/6 Clip, securing Boot Harness 1 C.1040/6 Clip, securing Event Cable 3 C.1040/6 Clip, securing Event Cable 1 Clip, securing Compension of C.1040/6 Clip, securing Clip Stope Cable 1 Clip, securing Clipper Switch Cable 2 C.1040/1 Clip, securing Sidelamp Cables 1 C.1040/1 Clip, securing Sidelamp Cables 2 Clip, securing Dipper Switch Cable 2 Clip, securing Clipper Switch Cable 2 Clip, securing Sidelamp Cables 2 Clip, securing Sody Harness (function Box End) 2 Clip, securing Body Harness (function Box End) 2 Clip, securing Body Harness (function Box End) 2 Clip, securing Body Harness (fact Connector) 1 Clip, securing Body Harness (fact Connector) 1 Clip, securing Body Harness (fact Connector) 1 Clip, securing Body Harness (fact Connector) 2 Clip, securing Event Cable 3 Clip, securing Carburetter Solenoid, Oil Level 4 Switch and Coil Connector Cables 3 Clip, securing Carburetter Solenoid, Oil Level 4 Switch and Coil Connector Cables 4 Clip, securing Carburetter Solenoid, Oil Level 4 Switch and Coil Connector Cables 5 Clip, securing Carburetter Solenoid, Oil Level 4 Switch and Coil Connector Cables 5 Clip, securing Carburetter Solenoid, Oil Level 5 Clip, securing Stop Liph Subars (Clip, securing Stop Liph Subars (Clip) Subars (Cli | C.1543/4 | Clip, securing Chassis Harness to L.H. Side Member and Cross Member of Chassis Frame, | |
| C.1040/8 Clip, securing Dynamo Cable C.1071/2 Clip, securing Boot Harness C.1040/6 Clip, securing Dipper Switch Cable 1 CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted from Chassis No. 660001 to 660058 CABLE CLIPS FOR L.H. DRIVE CARS ONLY Fitted from Chassis No. 670001 to 670184 C.1040/1 Clip, securing Dipper Switch Cable 1 C.1040/1 Clip, securing Dipper Switch Cable 2 C.1040/1 Clip, securing Starter Cable 2 C.1040/1 Clip, securing Starter Cable 2 C.1040/1 Clip, securing Starter Cable 2 CABLE CLIPS FOR L.H. AND R.H. DRIVE 660059 and subs. 670185 and subs | C 1040/2 | | 2 |
| C.1040/17 Cilp, securing Boot Harness Cilp, securing Stop Light Switch Cable C.1040/6 Cilp, securing Stop Light Switch Cable C.1040/10 Cilp, securing Stop Light Switch Cable C.1040/11 Cilp, securing Stop Light Switch Cable C.1040/10 Cilp, securing Stop Light Switch Cable C.1040/11 Cilp, securing Stop Light Switch Cable C.1040/11 Cilp, securing Stop Light Switch Cable C.1040/12 Cilp, securing Stop Light Switch Cable C.1040/17 Cilp, securing Stop Light Switch Cable C.1040/17 Cilp, securing Stop Light Switch Cable C.1040/17 Cilp, securing Body Harness (Junction Box End) C.1040/17 Cilp, securing Body Harness (Junction Box End) C.1040/17 Cilp, securing Body Harness (Junction Box End) C.1040/17 Cilp, securing Body Harness (Rear Connector) C.1040/10 Cilp, securing Reverse Light Switch Cable Cilp, securing Carburetter Solenoid, Oil Level Switch and Coil Connector Cables C.1040/2 Cilp, securing Stodelamp Cables C.1040/12 Cilp, securing Stodelamp Cables C.1040/12 Cilp, securing Stodelamp Cables C.1040/12 Cilp, securing Stodelamp Cables Cilp, securing Construence Construence C.1040/10 Cilp, securing Stodelamp Cables Cilp, securing Dynamo Cable Cilp, securing Stodelamp Cables Cilp, secu | | Clip, securing Dynamo Cable | |
| C.1040/6 C.1040/6 C.1040/6 C.2888 C.2040/6 C.2888 C.2888 C.2888 C.2040/6 C.2888 C.2888 C.2040/6 C.2888 C.2040/6 C.2888 C.2888 C.2040/6 C.2888 C.2956 C.2888 C.2040/6 C.2956 C.2888 C.2040/6 C.2956 C.2888 C.2040/7 C.2040/ | | Clip, securing Dynamo Cable | |
| Tail Lamp Cables Clip, securing L.H. Stop/Tail Lamp Cable Clip, securing L.H. Stop/Tail Lamp Cable Clip, securing Clips Sop Light Switch Cable Clip, securing Stop Light Switch Cable Clip, securing Stop Light Switch Cable Clip, securing Sidelamp Cables Clip, securing Sidelamp Cables Clip, securing Dipper Switch Cable Clip, securing Stop Light Annual R.H. DRIVE CABLE CLIPS FOR L.H. AND R.H. DRIVE CABLE CLIPS God Lamness (Junction Box End) Clip, securing Body Harness (Junction Box End) Clip, securing Body Harness (Rear Connector) Clip, 101, 101, 101, 101, 101, 101, 101, 10 | | Clip, securing Boot Harness | |
| CABLE CLIPS FOR R.H. DRIVE CARS ONLY C.1040/6 C.1040/17 Clip, securing Stop Light Switch Cable C.1040/17 Clip, securing Dipper Switch Cable C.1040/17 Clip, securing Sidelamp Cables C.1040/17 Clip, securing Dipper Switch Cable C.1040/17 Clip, securing Body Harness (Junction Box End) C.1059/11 Clip, securing Body Harness (Junction Box End) C.1040/17 Clip, securing Body Harness (Rear Connector) C.1040/17 Clip, securing Body Harness (Rear Connector) C.1040/19 Clip, securing Body Harness (Rear Connector) Clip, securing Switch Cable Clip, securing Chassis Harness to L.H. Side Clip, securing Chassis Harness to L.H. Side Clip, securing Chassis Harness to Cross Member Clip, securing Chassis Harness to Cross Member Clip, securing Chassis Harness to Cross Member Clip, securing Dynamo Cable to R.H. Side Member Clip, securing Dynamo Cable to C.H. Side Nember Clip, securing Speedometer Cable to Clutch Clip, securing Speedometer Cabl | | Tail Lamp Cables | |
| C.1040/6 Clip, securing Stop Light Switch Cable CABLE CLIPS FOR L.H. DRIVE CARS ONLY C.1040/1 Clip, securing Sidelamp Cables C.1040/6 Clip, securing Dipper Switch Cable C.1040/6 Clip, securing Dipper Switch Cable C.1040/1 Clip, securing Starter Cable C.1040/1 Clip, securing Starter Cable C.1040/1 Clip, securing Starter Cable CABLE CLIPS FOR L.H. AND R.H. DRIVE CARS CARS CARS CARS CARS CARS CI071/2 Clip, securing Body Harness (Junction Box End) C.1040/17 Clip, securing Body Harness (Junction Box End) C.1040/17 Clip, securing Body Harness (Rear Connector) C.1040/17 Clip, securing Body Harness (Rear Connector) C.1040/19 Clip, securing Body Harness (Rear Connector) C.1040/19 Clip, securing Body Harness (Rear Connector) C.1040/19 Clip, securing Petrol Tank Cable C.2956 Clip, securing Chasis Harness to L.H. Side Clip, securing Chasis Harness to L.H. Side Clip, securing Chasis Harness to Cross Member C.1040/2 Clip, securing Chasis Harness to Cross Member C.1040/2 Clip, securing R.H. Headlamp Cable C.2797 Clip, securing R.H. Headlamp Cable C.2797 Clip, securing Sidelamp Cable C.1040/10 Clip, securing Sout Harness C.1040/10 Clip, securing Dynamo Cable C.1040/10 Clip, securing Dynamo Cable C.1040/10 Clip, securing Dynamo Cable C.1040/10 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.2791 Clip, securing L.H. Stop/Tail Lamp Cable C.1040/10 Clip, securing Boot Harness, L.H. and R.H. Stop/ C.1040/10 Clip, securing Boot Harness, L.H. and R.H. Stop/ C.1040/10 Clip, securing Boot Harness, L.H. and R.H. Stop/ C.1040/10 Clip, securing Boot Harness, L.H. and R.H. Stop/ C.1040/10 Clip, securing Boot Harness, L.H. and R.H. Stop/ C.1040/10 Clip, securing Stop Light Switch Cable C.2791 Clip, securing Stop Light Switch Cable C.1040/10 Clip, se | C.2888 | Clip, securing L.H. Stop/Tail Lamp Cable | 3 |
| C.1040/17 Clip, securing Dipper Switch Cable CABLE CLIPS FOR L.H. DRIVE CARS ONLY C.1040/6 Clip, securing Sidelamp Cables C.1040/17 Clip, securing Sidelamp Cables C.1040/17 Clip, securing Starter Cable CABLE CLIPS FOR L.H. AND R.H. DRIVE CARS CARS CABLE CLIPS FOR L.H. AND R.H. DRIVE CARS C.1071/2 Clip, securing Body Harness (Junction Box End) C.1040/17 Clip, securing Body Harness (Junction Box End) C.1040/17 Clip, securing Body Harness (Rear Connector) C.1040/19 Clip, securing Body Harness (Rear Connector) C.1040/19 Clip, securing Body Harness (Rear Connector) C.1040/19 Clip, securing Reverse Light Switch Cable C.2796 Clip, securing Reverse Light Switch Cable C.2796 Clip, securing Carburetter Solenoid, Oil Level Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member C.1040/2 Clip, securing Chassis Harness to L.H. Side Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member C.1040/2 Clip, securing Sidelamp Cable C.2797 Clip, securing Sidelamp Cable C.2797 Clip, securing Sidelamp Cable C.1040/12 Clip, securing Sidelamp Cable C.1040/12 Clip, securing Sidelamp Cable C.1040/12 Clip, securing Sidelamp Cable C.1040/14 Clip, securing Sidelamp Cable C.1040/16 Clip, securing Sidelamp Cable C.1040/16 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. Fitted to Chassis No. 660059 and subs. | | CABLE CLIPS FOR R.H. DRIVE CARS ONLY | |
| C.1040/1 Clip, securing Sidelamp Cables | | Clip, securing Stop Light Switch Cable Clip, securing Dipper Switch Cable | |
| C.1040/1 C.1040/6 C.1040/17 CIlp, securing Sidelamp Cables C.1040/17 CIlp, securing Dipper Switch Cable C.1040/17 CIlp, securing Body Harness (Junction Box End) C.105/12 C.105/13 C.1040/17 CIlp, securing Body Harness (Junction Box End) C.105/14 C.105/16 C.1040/17 CIlp, securing Body Harness (Junction Box End) C.1040/17 CIlp, securing Body Harness (Junction Box End) C.1040/17 CIlp, securing Body Harness (Rear Connector) C.1040/19 CIlp, securing Body Harness (Rear Connector) C.1040/19 CIlp, securing Body Harness (Rear Connector) C.1040/19 CIlp, securing Reverse Light Switch Cable C.1040/19 CIlp, securing Carburetter Solenoid, Oil Level Switch and Coil Connector Cables C.1040/19 C.1040/19 C.1040/19 C.1040/19 C.1040/19 C.1040/10 C | | CABLE CLIPS FOR L.H. DRIVE CARS ONLY | |
| C.1040/17 Clip, securing Starter Cable CABLE CLIPS FOR L.H. AND R.H. DRIVE CARS Fitted to Chassis No. 660059 and subs. 670185 and subs | C.1040/1 | | 1 |
| CARS C.1071/2 | | | |
| C.1071/2 Clip, securing Body Harness (Junction Box End) 1 C.1040/17 Clip, securing Body Harness (Junction Box End) 2 C.1040/17 Clip, securing Body Harness (Rear Connector) 1 C.1040/9 Clip, securing Reverse Light Switch Cable 1 C.1040/9 Clip, securing Reverse Light Switch Cable 3 C.1040/9 Clip, securing Reverse Light Switch Cable 3 C.2956 Clip, securing Carburetter Solenoid, Oil Level 4 Switch and Coil Connector Cables 1 C.1040/9 Clip, securing Chassis Harness to L.H. Side 11 Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member C.1040/2 Clip, securing Chassis Harness to Cross Member 2 C.2796 Clip, securing Chassis Harness to Cross Member C.1040/2 Clip, securing Chassis Harness to Cross Member 2 C.2796 Clip, securing R.H. Headlamp Cable 1 C.2797 Clip, securing B.H. Headlamp Cable 1 C.2797 Clip, securing Sidelamp Cables 2 C.1040/8 Clip, securing Dynamo Cable 1 C.1040/9 Clip, securing Boot Harness L.H. and R.H. Stop/ 5 Tail Lamp Cables 2 C.1040/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ 5 Tail Lamp Cables 1 C.2711 Clip, securing Stop Light Switch Cable 1 Housing Cover Plate 1 CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. | | | |
| C.1040/17 Clip, securing Body Harness (Junction Box End) 2 C.1040/17 Clip, securing Body Harness (Rear Connector) 1 C.1040/19 Clip, securing Reverse Light Switch Cable 1 C.1040/19 Clip, securing Reverse Light Switch Cable 3 C.2956 Clip, securing Petrol Tank Cable 3 C.2956 Clip, securing Carburetter Solenoid, Oil Level 4 Switch and Coil Connector Cables 1 C.2796 Clip, securing Sidelamp Cables 1 C.1543/4 Clip, securing Chassis Harness to L.H. Side 1 Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member 1 C.1040/2 Clip, securing Chassis Harness to Cross Member 1 C.2797 Clip, securing L.H. Headlamp Cable 1 C.2797 Clip, securing Sidelamp Cables 1 C.1040/8 Clip, securing Dynamo Cable 1 C.1071/2 Clip, securing Boot Harness 1 C.1040/17 Clip, securing Boot Harness 1 C.1040/17 Clip, securing Boot Harness 1 C.1040/6 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Stop Light Switch Cable 1 Clip, securing Sidelamp Cables 2 C.1040/6 Clip, securing Sidelamp Cables 2 C.1040/6 Clip, securing Stop Light Switch Cable 1 Clip, securing Sidelamp Cables 2 C.1040/9 Clip, securing Panel Harness 3 | | CARS | |
| C.1040/17 Clip, securing Body Harness (Rear Connector) 1 C.1040/9 Clip, securing Reverse Light Switch Cable 1 C.1040/9 Clip, securing Reverse Light Switch Cable 1 C.1040/9 Clip, securing Reverse Light Switch Cable 3 C.2956 Clip, securing Carburetter Solenoid, Oil Level 4 Switch and Coil Connector Cables 1 C.2796 Clip, securing Sidelamp Cables 1 C.1543/4 Clip, securing Chassis Harness to L.H. Side 11 Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member Clip, securing Chassis Harness to Cross Member 2 C.2796 Clip, securing Chassis Harness to Cross Member 2 C.2797 Clip, securing L.H. Headlamp Cable 1 CLip, securing Sidelamp Cable 1 CLip, securing Sidelamp Cable 2 C.1040/8 Clip, securing Dynamo Cable 2 C.1040/17 Clip, securing Dynamo Cable 2 C.1040/17 Clip, securing Boot Harness, L.H. and R.H. Stop/Tail Lamp Cable 2 C.1040/6 Clip, securing Speedometer Cable to Clutch 1 Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Sidelamp Cables 2 Clip, securing Sidelamp Cable 2 Clip, securing Sidelamp Cable 3 Clip, securing Sidelamp Cable 4 Clip, securing Sidelamp Cable 5 Clip, securing Sidelamp Cable 6 Clip, securing Sidelamp Cable 9 Clip Sidelamp | | Clip, securing Body Harness (Junction Box End) | |
| C.1040/9 Clip, securing Bodý Harness (Rear Connector) C.1040/2 Clip, securing Reverse Light Switch Cable C.1040/9 Clip, securing Petrol Tank Cable C.2956 Clip, securing Carburetter Solenoid, Oil Level Switch and Coll Connector Cables C.2796 Clip, securing Sidelamp Cables C.1040/9 Clip, securing Sidelamp Cables C.1040/4 Clip, securing Chassis Harness to L.H. Side Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member C.1040/2 Clip, securing Chassis Harness to Cross Member C.2796 Clip, securing Chassis Harness to Cross Member C.2797 Clip, securing R.H. Headlamp Cable C.2797 Clip, securing L.H. Headlamp Cable C.1040/8 Clip, securing Dynamo Cable C.1040/17 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/17 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.2888 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Stop Light Switch Cable Clip, securing Sidelamp Cables C.1040/9 Clip, securing Sidelamp Cables C.1040/9 Clip, securing Sidelamp Cables Clip, securing Panel Harness 3 | | Clip, securing Body Harness (Rear Connector) | 1 |
| C.1040/9 C.1956 Clip, securing Petrol Tank Cable C.2956 Clip, securing Carburetter Solenoid, Oil Level Switch and Coil Connector Cables C.2796 Clip, securing Sidelamp Cables C.1543/4 Clip, securing Chassis Harness to L.H. Side Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member C.1040/2 Clip, securing Chassis Harness to Cross Member C.2796 Clip, securing Chassis Harness to Cross Member C.2797 Clip, securing L.H. Headlamp Cable Clip, securing L.H. Headlamp Cable Clip, securing Sidelamp Cables C.1040/8 Clip, securing Dynamo Cable C.1040/17 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/6 Clip, securing Boot Harness Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Stop Light Switch Cable Clip, securing Sidelamp Cables Clip, securing Panel Harness 3 | | Clip, securing Body Harness (Rear Connector) | 3 |
| C.2956 Clip, securing Carburetter Solenoid, Oil Level Switch and Coil Connector Cables C.2796 Clip, securing Sidelamp Cables C.1543/4 Clip, securing Chassis Harness to L.H. Side Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member C.1040/2 Clip, securing Chassis Harness to Cross Member C.2796 Clip, securing R.H. Headlamp Cable C.2797 Clip, securing R.H. Headlamp Cable C.1040/8 Clip, securing Dynamo Cable C.1040/8 Clip, securing Dynamo Cable C.1040/17 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/6 Clip, securing Boot Harness C.1040/6 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. Fitted to Chassis No. 660059 and subs. | | Clip, securing Reverse Light Switch Cable | |
| Switch and Coil Connector Cables C.2796 Clip, securing Sidelamp Cables C.1543/4 Clip, securing Chassis Harness to L.H. Side Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member C.1040/2 Clip, securing Chassis Harness to Cross Member C.2796 Clip, securing R.H. Headlamp Cable C.2797 Clip, securing R.H. Headlamp Cable C.2797 Clip, securing L.H. Headlamp Cable C.1040/8 Clip, securing Dynamo Cable C.1040/8 Clip, securing Dynamo Cable C.1040/17 Clip, securing Dynamo Cable C.1040/6 Clip, securing Boot Harness C.1040/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables Clip, securing L.H. Stop/Tail Lamp Cable C.2711 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. Fitted to Chassis No. 660059 and subs. | | | |
| C.2796 Clip, securing Sidelamp Cables C.1543/4 Clip, securing Chassis Harness to L.H. Side Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member C.1040/2 Clip, securing Chassis Harness to Cross Member C.2796 Clip, securing R.H. Headlamp Cable C.2797 Clip, securing L.H. Headlamp Cable C.1040/2 Clip, securing Sidelamp Cables C.1040/8 Clip, securing Dynamo Cable C.1040/8 Clip, securing Dynamo Cable C.1071/2 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.2888 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Sidelamp Cables C.1040/9 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Panel Harness 3 | C.12750 | Switch and Coil Connector Cables | • |
| Member and Cross Member of Chassis Frame, also R.H. Horn Cable to R.H. Side Member C.1040/2 Clip, securing Chassis Harness to Cross Member C.2796 Clip, securing R.H. Headlamp Cable C.2797 Clip, securing L.H. Headlamp Cable C.2797 Clip, securing Sidelamp Cable C.1040/8 Clip, securing Dynamo Cable C.1040/17 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/17 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.2888 Clip, securing L.H. Stop/Tail Lamp Cable C.2711 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Sidelamp Cables C.1040/9 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Panel Harness 3 | | Clip, securing Sidelamp Cables | |
| C.1040/2 Clip, securing Chassis Harness to Cross Member C.2796 Clip, securing R.H. Headlamp Cable C.2797 Clip, securing Sidelamp Cable BD.328 Clip, securing Sidelamp Cables C.1040/8 Clip, securing Dynamo Cable C.1071/2 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.2888 Clip, securing L.H. Stop/Tail Lamp Cable C.2711 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Sidelamp Cables C.1040/9 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Panel Harness 3 | C.1343/4 | Member and Cross Member of Chassis Frame, | " |
| C.2796 C.2797 Clip, securing R.H. Headlamp Cable C.2797 Clip, securing L.H. Headlamp Cable C.1040/8 C.1040/8 C.105, securing Dynamo Cable C.1071/2 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.2888 Clip, securing L.H. Stop/Tail Lamp Cable C.2711 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Stop Light Switch Cable C.1040/9 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Panel Harness 3 | | | • |
| C.2797 Clip, securing L.H. Headlamp Cable BD.328 Clip, securing Sidelamp Cables C.1040/8 Clip, securing Dynamo Cable C.1071/2 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.2888 Clip, securing L.H. Stop/Tail Lamp Cable C.2711 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Stop Light Switch Cable C.1040/9 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Panel Harness 3 | | Clip, securing Chassis Harness to Cross Member | |
| BD.328 Clip, securing Sidelamp Cables 2 C.1040/8 Clip, securing Dynamo Cable 1 C.1071/2 Clip, securing Dynamo Cable 2 C.1040/17 Clip, securing Boot Harness 1 C.1040/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tail Lamp Cables 5 C.2888 Clip, securing L.H. Stop/Tail Lamp Cable 4 C.2711 Clip, securing Speedometer Cable to Clutch Housing Cover Plate 5 CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Stop Light Switch Cable 1 C.1040/9 Clip, securing Sidelamp Cables 2 C.1040/16 Clip, securing Panel Harness 3 | | Clip, securing K.H. Headlamp Cable | |
| C.1040/8 Clip, securing Dynamo Cable C.1071/2 Clip, securing Dynamo Cable C.1040/17 Clip, securing Boot Harness C.1040/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tail Lamp Cables C.2888 Clip, securing L.H. Stop/Tail Lamp Cable C.2711 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Stop Light Switch Cable C.1040/9 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Panel Harness 3 | | Clip, securing Sidelamp Cables | 2 |
| C.1040/17 Clip, securing Boot Harness C.1040/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.2888 Clip, securing L.H. Stop/Tail Lamp Cable C.2711 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Stop Light Switch Cable C.1040/9 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Panel Harness 3 | | Clip, securing Dynamo Cable | |
| C.1040/6 Clip, securing Boot Harness, L.H. and R.H. Stop/ Tall Lamp Cables C.2888 Clip, securing L.H. Stop/Tail Lamp Cable C.2711 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY Fitted to Chassis No. 660059 and subs. C.1040/6 Clip, securing Stop Light Switch Cable C.1040/9 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Panel Harness 3 | | | |
| C.2888 Clip, securing L.H. Stop/Tail Lamp Cable C.2711 Clip, securing Speedometer Cable to Clutch Housing Cover Plate CABLE CLIPS FOR R.H. DRIVE CARS ONLY C.1040/6 Clip, securing Stop Light Switch Cable C.1040/9 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Panel Harness 3 | | Clip, securing Boot Harness, L.H. and R.H. Stop/ | |
| CABLE CLIPS FOR R.H. DRIVE CARS ONLY C.1040/6 C.1040/9 C.1040/16 Clip, securing Stop Light Switch Cable C.1040/16 Clip, securing Sidelamp Cables C.1040/16 Clip, securing Panel Harness 3 | C.2888 C. 2711 | Clip, securing L.H. Stop/Tail Lamp Cable Clip, securing Speedometer Cable to Clutch | |
| C.1040/6 Clip, securing Stop Light Switch Cable 1 C.1040/9 Clip, securing Sidelamp Cables 2 C.1040/16 Clip, securing Panel Harness 3 | | | |
| C.1040/9 Clip, securing Sidelamp Cables 2 C.1040/16 Clip, securing Panel Harness 3 | C.1040/6 | Clip, securing Stop Light Switch Cable | 1 |
| | C.1040/9 | Clip, securing Sidelamp Cables | |
| | C.1040/16 C.1040/17 | Clip, securing Panel Harness Clip, securing Dipper Switch Cable | 3 2 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|-----------------------------------|--|--------------|------------------|---|
| | CABLE CLIPS FOR L.H. DRIVE CARS ONLY | | | Fitted to Chassis No. 670185 and subs. |
| C.1040/6 C.1040/8 C.1040/17 | Clip, securing Dipper Switch Cables Clip, securing Panel Harness (Fuse Box End) Clip, securing Starter Cable | | 2 1 2 | |
| C.1543/6 | Clip, securing Panel Harness (at each end) | | 2 | |
| | GROMMETS | | | Fitted from Chassis No. 660001 to 660058 670001 to 670184 |
| 513 | Grommet for Oil and Thermometer Pipes (through Scuttle) | | 1 | 070001 20 070104 |
| C.974 | Grommet for Reverse Light Switch and Number Plate Illumination Cables | | 3 | |
| C.975 C.977 | Grommet for Petrol Pump Cable Grommet for Rear Bumper Studs and Speedo- | | 1 3 | |
| C.1426 | meter Cable Grommet for Petrol Pipes | , | 2 | |
| C.2706 | Grommet for Rev. Counter and Speedometer Cables (through Scuttle) | | 2 | |
| C.2707 | Grommet for Panel Harness (R.H. side of Scuttle) and Starter Cable | | 2 | |
| C.2708 C.2784 | Grommet for Panel Harness (L.H. side of Scuttle) Grommet for Reverse Light Cable | | 1 | |
| C.2850 | Grommet for Sidelamp Wires | | 2 | |
| | GROMMETS | | | Fitted to Chassis No. 660059 and subs. 670185 and subs. |
| 51 3 | Grommet for Oil and Thermometer Pipes (through Scuttle) | | 1 | *************************************** |
| C.974 | Grommet for Reverse Light Switch, Number Plate Illumination and Petrol Pump Cables | - | 4 | |
| C.975 C.977 | Grommet for Petrol Pump Cable Grommet for Rear Bumper Studs and Speedo- meter Cable | | 1 3 | |
| C.1426 | Grommet for Petrol Pump Cable, Panel Harness (Centre) and in Panel | | 7 | |
| C.2706 | Grommet for Body Harness, Rev. Counter, Speedometer, Starter and Petrol Tank Cables | | 5 | |
| C.2707 | Grommet for Panel Harness (R.H. side of Scuttle) Starter, Headlamp and Battery Cables | | 7 | |
| C. 2708 C. 2850 | Grommet for Panel Harness (L.H. side of Scuttle) Grommet for Sidelamp Wires | | 1 2 | |

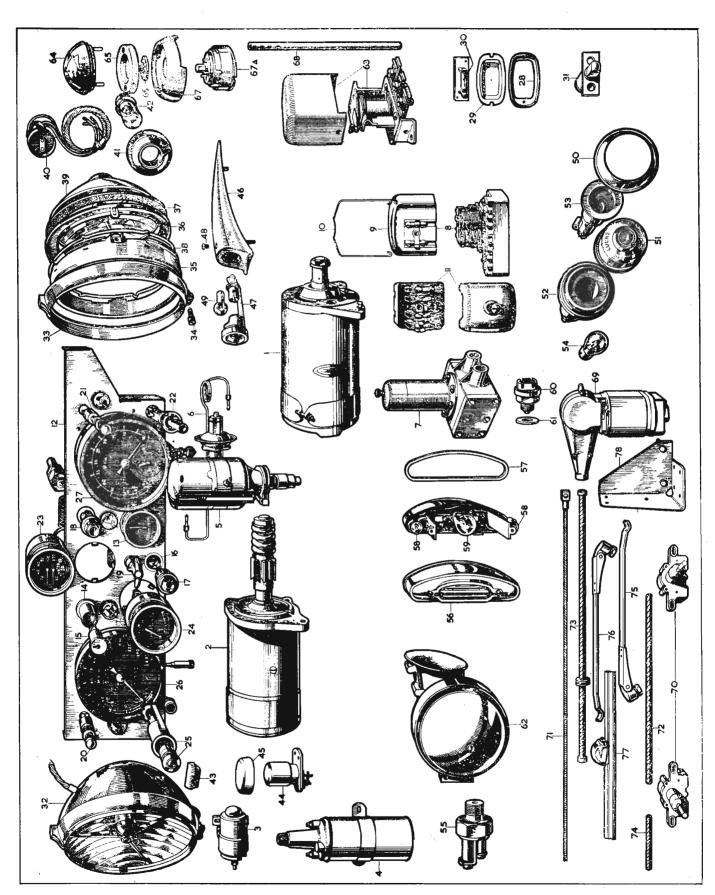


PLATE V

TOOL KIT

For use when Wire Spoke Road Wheels are fitted

1

| | | Unit. | Remarks. |
|------------------------|--|-----------|---|
| C.991 | Oil Gun (Hydraulic) | 1 | Fitted from Chassis No. 660001 to 660881 670001 to 671598 679001 to 679055 |
| C.4560 | Grease Gun (Tecalemit GB.2788) | 1 . | Fitted to Chassis No. 660882 and subs. 669001 and subs 671599 and subs. 679056 and subs |
| .993 | Extractor for Tyre Valve | 1 | |
| .2883 | Starting Handle | - | Fitted from Chassis No. 660001 to 660028 670001 to 670068 |
| 2955 | Wheelbrace | 1 | |
| .2953 | Jack | 1 | |
| .2954 | Ratchet-Lever, operating Jack | 1 | |
| .9 9 7 | Pump (complete with Flex) | 1 | |
| 072 | Key for Budget Lock | 1 | |
| .3993 | Gauge for Valve Timing | 1 | |
| .2999 | Container for Valve Timing Gauge | 1 | |
| .4292 | Blanking-Plate for Air Scoops | 2 | |
| .1001 | Tyre Levers | 2 | CHAPPER PROPERTY AND A SECOND |
| .4075 | Feeler Gauge for Plugs and Tappets | | SUPERSEDED BY C.5587 |
| .5587 | Feeler Gauge for Plugs and Tappets | | SUPERSEDES C.4075 |
| .2957 | Wrench, for use when Bleeding Brakes | 1 | |
| .2958 | Tube, Bleeder, and Container | 1 | |
| .996 | Pliers Screwdriver for Distributor | 1 | Fired from Eng. No. |
| :.1002 | Screwdilger for Distributor | ' | Fitted from Eng. No. W.1001 to W.5508 |
| 5444 | Screwdriver for Distributor | 1 | Fitted to Eng. No. W.5509 and subs. |
| 2.28 | Screwdriver | 1 | |
| 2.31 | Spanner, Box, ¾"×↓" B.S.F. Spanner, Box, ½"×¾" B.S.F. | 1 | |
| .32 | Spanner, Box, 🏰 "× 🖟 " B.S.F. | 1 | |
| .33 | Spanner, Box, $\frac{7}{16}$ " × $\frac{1}{4}$ " B.S.F. | 1 | |
| .179 | Spanner, Box, for Sparking Plugs | 1 | |
| .2585 | Spanner, Box, for Torsion Bar, 2" S.A.E. | 1 | Not required when C.4096 is used |
| .4094 | Spanner, Box, 7 × 1 S.A.E. Spanner, Box, 7 × 2 S.A.E. | 1 | |
| .4095 | Spanner, BOX, A X 1 S.A.E. | 1 | |
| .4096 34 | Spanner, Box, \$" × 1" S.A.E. | 1 | |
| 3 4 2896 | Tommy-Bar (Short) for Box Spanners Tommy-Bar (Long) for Box Spanners | 1 | |
| 2896 998 | Spanner, Open Ended, $\frac{1}{4}$ $\times \frac{1}{16}$ B.S.F. | 4 | |
| .999 | Spanner, Open Ended, \$ \times 18" \text{B.S.F.} | i | |
| .2587 | Spanner, Open Ended, 18 × 8 5.3.1. Spanner, Open Ended, 18 × 8 5.3.1. | i | |
| .2588 | Spanner, Open Ended, #"×4" S.A.E. | i | |
| .2589 | Spanner, Open Ended, #"×#" S.A.E. | i | |
| | Spanner, Adjustable | . 1 | |
| C.994 | | | |

C.992

Hammer (Copper and Rawhide)

LIST OF EXTRAS

| Part No. | Description. | Plate No. pe No. Unit. | |
|--|--|---------------------------|--|
| | NOTE.—THE FOLLOWING ITEMS ARE SUPPLIED TO SPECIAL ORDER ONLY: | | |
| C.2988 | FOG LAMP (LUCAS 053135/A SFT.700/S) | See remarks | I off or 2 off as required. |
| C.2985 C.2986 C.2744 C.976 | Bracket, mounting Fog Lamp on R.H. side Bracket, mounting Fog Lamp on L.H. side Switch for Fog Lamp (Lucas 031216) Grommet for Fog Lamp | 1 1 1 1 See | I required if I Lamp is fitted. 2 r |
| C.1071/2 | Clip, Bowden | remarks See | quired if 2 Lamps are fitted. 3 required if 1 Lamp is fitted. 6 r |
| C.4086 C.4087 C.4091 C.4092 C.4088 C.4086 C.4089 C.4091 C.4093 C.4090 | Cable for Fog Lamp (Red and Green, 4' long) Cable for Fog Lamp (Red and Black, 12' long) Cable for Fog Lamp (Red and Black, 8' long) Sleeve for Cables (4' long) Cable for Fog Lamp (Red and Green, 4' long) Cable for Fog Lamp (Red and Black, 21' long) Cable for Fog Lamp (Red and Black, 21' long) Cable for Fog Lamp (Red and Black, 20' long) Cable for Fog Lamp (Red and Black, 20' long) Sleeve for Cables (8' long) | remarks 1 | quired if 2 Lamps are fitted. REQUIRED WHEN I LAMP IS FITTE TO R.H. DRIVE CARS REQUIRED WHEN I LAMP IS FITTE TO L.H. DRIVE CARS REQUIRED WHEN I LAMP IS FITTE REQUIRED WHEN 2 LAMPS AF FITTED TO R.H. DRIVE CARS REQUIRED WHEN 2 LAMPS AF FITTED TO L.H. DRIVE CARS REQUIRED WHEN 2 LAMPS AF FITTED TO L.H. DRIVE CARS REQUIRED WHEN 2 LAMPS AF FITTED |
| | | | en e |
| BD.9586 | SUIT CASES (TWO PER SET SHAPED TO FIT LUGGAGE COMPARTMENT OF OPEN 2-SEATER, FIXED HEAD OR DROPHEAD COUPE) | 1 pair . | |
| | | | |
| | | · · · · · · · · | |
| C.4063 | CAR RADIO ASSEMBLY (RADIOMOBILE RM.100) (CONSISTING OF RECEIVER UNIT, POWER UNIT, AERIAL, ETC.) | 1 | LONG/MEDIUM WAVE BAND |
| C.4600 C.4601 C.4602 C.4603 C.4604 C.4605 C.4606 | Receiver Unit (RM.100). Power Unit Aerial Assembly Aerial Lead Split Lead Assembly (Power Pack to Receiver) Screw (Parker Kalon) Condensor (1 MFD) for Dynamo and Coil (RMO.1A) Resistor (5,000 OHMS) for Distributor (RMO.2) NOTE.—Car Radio C.4063 is suitable for use in the following countries: British Isles, Austria, Belgium, Czechoslavakia, Denmark, Finland, France, Germany, Holland, Madeira, Norway, Roumania, Sweden, Switzerland. | 1 1 1 1 1 2 1 1 | |
| C.4064 | CAR RADIO ASSEMBLY (RADIOMOBILE 4012) (CONSISTING OF RECEIVER UNIT, POWER UNIT, AERIAL, ETC.) | 1 | MEDIUM WAVE BAND |
| C.4608 | Receiver Unit (4012). All other components as for C.4063. | | |
| | NOTE.—Car Radio C.4064 is suitable for use in the following countries: Algeria, Argentine, Bahamas, Brazil, Canada, Ceylon, Chile, Cuba, Egypt, Gibraltar, Greece, Iran, Iraq, Malaya, Malta, Mexico, Portugal, Slam, Spain, Tangiers, Uruguay, U.S.A., Italy. | | |

| Part No. | Description. | Plate No. | No. pe Unit. | | |
|---|--|--------------|---|--|--------|
| C.4065 | CAR RADIO ASSEMBLY (RADIOMOBILE 4014) (CONSISTING OF RECEIVER UNIT, POWER UNIT, AERIAL, ETC.) | | 1 | MEDIUM WAVE BAND | |
| C.4609 | Receiver Unit (4014) All other components as for C.4063. | | 1 | | |
| | NOTE.—Car Radio C.4065 is suitable for use in the following countries: Australia, New Zealand. | | | | |
| | | | | | |
| C.4066 | CAR RADIO ASSEMBLY (RADIOMOBILE 4050) (CONSISTING OF RECEIVER UNIT, POWER UNIT, AERIAL, ETC.) | | 1 | SHORT/MEDIUM WAV | E BAND |
| C.4610 C.4611 | Receiver Unit (4050) Loudspeaker (External) All other components as for C.4063. | | 1 | | |
| | NOTE.—Car Radio C.4066 is suitable for use in the following countries: China, Cyprus, Gambia, Gold Coast, British Guiana, India, Jamaica, Japan, Kenya, Lebanon, Nigeria, Nyasaland, Mauritius, Palestine, Panama, Peru, Tanganyika, Rhodesia, Syria, Trinidad, Uganda, Venezuela, Union of South Africa. | | | | |
| C.4606 C.4612 | Condenser (RMO.1A) for Petrol Pump Condenser (RMO.1E) for Electric Clock | | 1 | | |
| C.4067 | RADIO INSTALLATION (DETAILS REQUIRED FOR FITTING RADIO ASSEMBLY C.4063) | | 1 | | |
| C.4068 | RADIO INSTALLATION (DETAILS REQUIRED FOR FITTING RADIO ASSEMBLY C.4064) | | 1 | | |
| C.4069 | RADIO INSTALLATION (DETAILS REQUIRED FOR FITTING RADIO ASSEMBLY C.4065) | | 1 | | |
| BD.4229 | Bracket, mounting Power Unit | | 2 | Fitted from Chassis No. 660001 to | |
| C.4527 | Bracket, mounting Power Unit | | 2 | 670001 to Fitted to Chassis No. and subs. and subs. | |
| BD.4227 BD.4228 BD.2365 AS.302/5H AN.102/L AW.102/T C.723 C.4055 C.4056 AS.305/5H AN.102/L AW.102/T C.723 FS.105/4D FW.105/T FN.105/L C.725 FS.104/3D FW.204/T C.724 | Bracket, L.H. mounting Receiver Unit Bracket, R.H., mounting Receiver Unit Plate, Tapping for Brackets Screw, Set, securing Brackets Nut on Setscrews Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews Bracket Assembly, L.H., mounting Receiver Unit Bracket Assembly, R.H., mounting Receiver Unit Screw, Set, securing Brackets Nut, on Setscrews Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews Screw, Set, securing Brackets Washer, Plain, on Setscrews Nut on Setscrews Nut on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Screw, Set, securing Brackets Washer, Plain, on Setscrews Washer, Plain, on Setscrews Washer, Shakeproof, under Nuts Screw, Set, securing Brackets Washer, Plain, on Setscrews Washer, Plain, on Setscrews | | 1 1 2 14 6 8 14 1 1 8 2 6 8 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 | Fitted from Chassis No. 660001 to 660058 670001 to 670184 Fitted to Chassis No. 660059 and subs. 670185 and subs. | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|---|--|--------------|---|--|
| C.4070 | RADIO INSTALLATION (DETAILS REQUIRED FOR FITTING RADIO ASSEMBLY C.4066) | | 1 | |
| BD.4229 | Bracket, mounting Power Unit | | 2 | Fitted from Chassis No. 660001 to |
| C.4527 | Bracket, mounting Power Unit | | 2 | 670001 to Fitted to Chassis No. and subs. and subs. |
| BD.4227 BD.4228 BD.4228 BD.2365 AS.302/5H AN.102/L AW.102/T C.723 C.4056 AS.305/5H AN.102/L AW.102/T C.723 FS.105/4D FW.105/L C.725 C.4061 AS.302/8H AW.102/T AN.102/L C.723 C.4062 M.102/T AN.102/L C.723 C.4062 M.102/T AN.102/L C.723 C.4062 M.102/T AN.102/T AN.102/L C.723 C.4062 M.102/T AN.102/L | Bracket, L.H., mounting Receiver Unit Bracket, R.H., mounting Receiver Unit Plate, Tapping, for Brackets Screw, Set, securing Brackets Nut on Setscrews Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews Bracket, Assembly, L.H., mounting Receiver Unit Bracket Assembly, R.H., mounting Receiver Unit Screw, Set, securing Brackets Nut on Setscrews Washer, Plain, on Setscrews Washer, Plain, on Setscrews Screw, Set, securing Brackets Washer, Shakeproof, on Setscrews Nut, on Setscrews Nut, on Setscrews Nut, on Setscrews Washer, Shakeproof, under Nuts Piece, Packing, for Loudspeaker Screw, Set, securing Packing Piece Washer, Plain, on Setscrews Nut on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Piece, Packing, Assy., for Loudspeaker Screw, Wood, securing Packing Piece Washer, Cup, on Woodscrews Cover (Waterproof) for back of External Loud- | | 1 1 2 14 6 8 14 1 1 8 2 6 8 2 2 2 2 1 4 4 4 4 1 1 4 4 1 1 | Fitted from Chassis No. 660001 to 660058 670001 to 670184 Fitted to Chassis No. 660059 and subs. 670185 and subs. Fitted from Chassis No. 660001 to 660058 670001 to 670184 Fitted to Chassis No. 660059 and subs. 670185 and subs. |
| C.4568 C.4569 | speaker Lead for Speaker (RMO.501 \times 5' long) Lead for Speaker (RMO.501 \times 2' 6" long) | | 1 | R.H. DRIVE CARS ONLY L.H. DRIVE CARS ONLY |
| C.5378 | CAR RADIO ASSY. (RADIOMOBILE RM.4200) (CONSISTING OF RECEIVER UNIT, POWER UNIT, AERIAL, ETC.) | | 1 | LONG/MEDIUM WAVE BAND |
| C.5363 C.5364 C.5365 C.4611 C.5371 C.5339 C.5367 C.5368 C.4607 | Receiver Unit (RM.4200 VAT) Power Unit (RMH.46028/B) Aerial (AW.371/1) Loudspeaker (RMH.35340/X) Lead for Loudspeaker (RMR.5021×7' 6" long) Gauze for Loudspeaker (RMO.167) Condenser (Coil) (RMO.1A/T.1) Condenser (Dynamo) (RMO.1A/T.2) Condenser (Distributor) (RMO.2) NOTE.—Car Radio C.5378 is suitable for use in the following countries:— Austria, Belgium, British Isles, Czechoslovakia, Denmark, Finland, France, Germany, Holland, Madeira, Norway, Roumania, Sweden, Switzerland, Turkey. | | 1 1 1 1 1 1 1 1 1 | |
| C.5379 | CAR RADIO ASSY. (RADIOMOBILE RM.4202) (CONSISTING OF RECEIVER UNIT, POWER UNIT, AERIAL, ETC.) | | 1 | MEDIUM WAVE BAND |
| C.5370 | Receiver Unit (RM.4202 VAT) All other components as for C.5378. NOTE.—Car Radio C.5379 is suitable for use in the following countries:— Algeria, Argentine, Australia, Bahamas, Brazil, Canada, Ceylon, Chile, Cuba, Egypt, Gibraltar, Greece, Iran, Iraq, Malaya, Malta, Mexico, New Zealand, Portugal, Siam, Spain, Tangiers, Uruguay, U.S.A., Italy, Puerto Rico. | | 1 | |

| Part No. | Description. | Plate No. per No. Unit. Remarks. |
|--|---|--|
| C.5380 | CAR RADIO ASSY. (RADIOMOBILE RM.4300) (CONSISTING OF RECEIVER UNIT, POWER UNIT, AERIAL, ETC.) | 1 SHORT WAVE BAND |
| C.5373 | Receiver Unit (RM.4300) | 1 |
| | All other components as for C.5378. | |
| | NOTE.—Car Radio C.5380 is suitable for use in the following countries:— British Guiana, China, Cyprus, Dutch West Indies, Gambia, Gold Coast, Hawaii, India, Indonesia, Jamaica, Japan, Jordan, Kenya, Lebanon, Madagascar Mauritius, Morocco, Nigeria, Nyasaland, Palestine, Panama, Peru, Rhodesia, Syria, Tanganyika, Trinidad, Uganda, Union of South Africa, Venezuela. | |
| C.4055 | MOUNTING BRACKET ASSEMBLY, L.H. | 1 |
| C.4056 | MOUNTING BRACKET ASSEMBLY, R.H. | 1 |
| C.4057 C.4058 | MOUNTING BRACKET, L.H. FRONT MOUNTING BRACKET, R.H. FRONT | 1 |
| C.4059 | MOUNTING BRACKET ASSY., L.H. REAR | 1 |
| C.4060 | MOUNTING BRACKET ASSY., R.H. REAR | 1 |
| AS.302/5H AW.102/T AN.102/L C.723 FS.104/3D FW.102/T C.724 NS.125/5D NN.125/L C.724 BD.538/7 AW.102/T BD.524/4 C.1040/17 BD.538/7 C.975 | Screw, Set, securing Receiver Unit Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, on Setscrews Screw, Set, securing Receiver Unit Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews Screw, Set, securing Power Unit Nut on Setscrews Washer, Shakeproof, under Nuts Screw, Self-Tapping, for Loudspeaker Mounting Washer, Plain, on Self-Tapping Screws Rivet, Blfurcated, securing Loudspeaker Gauze Clip, securing Receiver Unit/Power Unit Cable Screw, Self-Tapping, securing Cable Clips Grommet, in Side Frame under Scuttle structure | 8 6 2 8 2 2 2 4 4 4 4 4 4 4 3 3 |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. | |
|------------------------------------|---|--------------|------------------|--|-----|
| C.4171 | AUXILIARY PETROL TANK | | 1) | For use from Chassis | No. |
| C.4172 | Pipe, Intermediate Air Vent (from Auxiliary to Main Tanks) | | 1 } | 660001 to 660058 670001 to 670184 | |
| C.4173 | HOSE, CONNECTING AUXILIARY AND MAIN PETROL TANKS | | 2 | For use from Chassis 660001 to 660058 | No. |
| C.823 | Clip, securing Hose to Tanks | | 4 | 670001 to 670184 | |
| C.4175 | STRAPS, SECURING AUXILIARY PETROL TANK | | 2 | | |
| C.4175/1 NB.131/16D NN.131/L | Washer, Special, for Tank Straps Bolt, for Tank Straps Nut on Bolts | | 4 4 4 | For use from Chassis 660001 to 660058 670001 to 670184 | No. |
| C.4176 C.4368 C.4369 | Washer, Reinforcing, for Tank Mounting Felt $(1\frac{1}{2}'' \times \frac{3}{15}'' \times 27'')$ under Tank Straps Felt $(14'' \times 31'')$ under Auxiliary Tank | | 2 2 1 | | |
| C.4174 | MAIN PETROL TANK | | • 1 | For use from Chassis 660001 to 660058 670001 to 670184 | No. |
| C.4359 | AUXILIARY PETROL TANK | | 1] | For use with Chassis | No. |
| C.4370 | Pipe, Intermediate Air Vent (from Auxiliary to Main | | 1 | 660059 and subs. 670185 and subs. | |
| C.4371 | Tanks) Tube (Rubber) connecting Air Vent Pipes | | 1 | 669001 and subs. | |
| BD.3221 | Tube (Rubber) connecting Air Vent Pipes | | iJ | 679001 and subs. 667001 and subs. 677001 and subs. | |
| C.4173 | HOSE, CONNECTING AUXILIARY AND MAIN PETROL TANKS | | 2 | For use with Chassis 660059 and subs. 670185 and subs. | No. |
| C.823 | Clip, securing Hose to Tanks | | 4 | 669001 and subs. 679001 and subs. 667001 and subs. 677001 and subs. | |
| C.4367 | STRAPS, SECURING AUXILIARY PETROL TANK | | 2 | | |
| C.4175/1 | Washer, Special, for Tank Straps | | 4 | For use with Chassis I 660059 and subs. | No. |
| NB.131/16D | Bolt, securing Tank Straps | | 4 } | 670185 and subs. 669001 and subs. | |
| NN.131/L C.740 | Nut on Bolts Washer, Shakeproof, under Nuts | | 4 4 | 679001 and subs. | |
| C.4368 C.4369 | Felt $(1\frac{1}{2}^n \times \frac{3}{6}^n \times 27^n)$ under Tank Straps Felt $(14^n \times 31^n)$ under Auxiliary Tank | | 2 1 | 667001 and subs. 677001 and subs. | , |
| C.4366 | MAIN PETROL TANK | | 1 | For use with Chassis 1 660059 and subs. 670185 and subs. | No. |
| C.7494 | MAIN PETROL TANK | | 1 | For use with Chassis N 669001 and subs. 679001 and subs. | No. |
| C.8215 | MAIN PETROL TANK | | 1 | For use with Chassis I 667001 and subs. 677001 and subs. | No. |
| | SPARE WHEEL MOUNTING WHEN AUXILIARY PETROL TANK IS FITTED | | | | |
| C.4177 | Screw-Plate, on R.H. Boot Floor | | 1 | For use with Chassis I | No. |
| C.984 | Tee-Nut under R.H. Boot Floor | | 6 | 660001 and subs. 670001 and subs. | |
| AS.502/5H C.4180 | Screw, Set, securing Screw-Plate to R.H. Boot Floor Stud for Spare Wheel Clamp | | 6 | 669001 and subs. | |
| C.4179 C.704/2 | Knob on Stud Pin (Mills) securing Knob to Stud | | 1 | 679001 and subs. 667001 and subs. | |
| C.4178 | Disc, on Stud, clamping Spare Wheel | | 1 | 677001 and subs. | |
| FG.105/X | Circlip, securing Disc to Stud | | il | | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|---|--------------|------------------|--|
| BD. 44 70 | RACING SCREEN ASSY., L.H., COMPLETE | | 1) F | FITTED TO "SPECIAL EQUIPMENT" |
| BD.4471 | RACING SCREEN ASSY., R.H., COMPLETE | | 1 | MODELS (i.e., Cars bearing the prefix "S" to the Chassis number) |
| | NOTE.—BD.4470 and BD.4471 comprise Screen Assembly, Cowlings and all fittings. | | Ź | |
| | | | | |
| BD.4289 | RACING SCREEN ASSEMBLY | | 2 | |
| BD.4290 BD.4294 BD.3071/2 | Frame only (complete with Pivots) Glass only for Racing Screen Everseal between Glass and Frame (1½"×.078"×17") | | 2 2 | |
| | | | | |
| | | | | |
| BD.4295 | SUPPORT, INNER, FOR RACING SCREEN | | 2 | |
| BD.4296 | SUPPORT, OUTER, FOR RACING SCREEN | | 2 | • |
| FS.104/4D FW.104/T C.724 | Screw, Set, securing Supports Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews | | 8 8 8 | |
| BD.4298 | WING NUT, ADJUSTING RACING SCREENS | | 2 | |
| BD.541/11 | Washer, Plain, under Wing Nuts | | 2 | |
| | | | | . * |
| BD.4299 | COWLING ASSEMBLY, MOUNTING L.H. RACING SCREEN | | 1 | |
| BD.4300 | COWLING ASSEMBLY, MOUNTING R.H. RACING SCREEN | | 1 | |
| FS.104/5D FW.104/T 1861 FN.104/L C.724 | Screw, Set, securing Cowlings Washer, Plain, on Setscrews Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts | | 8 8 8 8 | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|------------------------------|---|--------------|------------------|---|
| | SHIELD ASSEMBLY FOR UNDERSIDE OF CHASSIS FRAME | | | |
| BD.4474 | FRONT PANEL ASSEMBLY, R.H., FOR UNDERSHIELD | | 1 | |
| BD.4475 | FRONT PANEL ASSEMBLY, L.H., FOR UNDERSHIELD | | 1 | |
| FS.104/4D 1861 BD.4491 | Screw, Set, securing Front Panels Washer, Plain, on Setscrews Washer (Rubber) on Setscrews | | 3 3 3 | |
| BD.4476 | SUPPORT BRACKET ASSEMBLY FOR FRONT PANELS | | 1 | |
| C.4377 | SUPPORT BRACKET ASSY, FOR R.H. FRONT WING AND UNDERSHIELD | | 1 , | WHEN THESE ITEMS ARE FITTED, FRONT WING STEADIES ARE NOT |
| C.4378 | SUPPORT BRACKET ASSY, FOR L.H. FRONT WING AND UNDERSHIELD | | 1 | REQUIRED |
| BD.4477 | CENTRE PANEL ASSY. FOR UNDERSHIELD | | 1 | |
| BD.4945 | REAR PANEL ASSY. FOR UNDERSHIELD | | 1 | |
| BD.4948 | Piece, Packing (1"×1"×27" Wood) at rear of Rear | | 1 | |
| FB.104/12D FW.104/T | Panel Bolt, securing Rear Panel Washer, Plain, on Bolts Nut on Bolts | | 3 3 3 | |
| FN.104/L C.724 | Washer, Shakeproof, under Nuts | | 3 | |
| BD.4946 | SIDE PANEL ASSY., R.H., FOR UNDERSHIELD | | 1 | |
| BD.4947 | SIDE PANEL ASSY., L.H., FOR UNDERSHIELD | | 1 | |
| C.4167 | Plate, Tapped (long) on Chassis Frame, for fixing of | | 15 | |
| C.4168 | Undershields Plate, Tapped (short) on Chassis Frame, for fixing of Undershields | | 6 | |
| FS.104/4D 1861 BD.4491 | Screw, Set, securing Undershields to Chassis Frame Washer, Plain, on Setscrews Washer (Rubber) on Setscrews | | 49 49 49 | |

| Part No. | Description. | Plate No. | No. per Unit. | Remarks. |
|--|--|--------------|-----------------------|---|
| BD.5893 | BUCKET SEAT ASSEMBLY (RACING TYPE) | | 2 | |
| BD.7804 | CUSHION ASSEMBLY FOR BUCKET SEATS | | 2 | |
| BD.77% BD.7797 | FLOORBOARD ASSY., L.H. FOR USE ONLY WHEN SPECIAL BUCKET SEATS FLOORBOARD ASSY., R.H. ARE FITTED | | 1 | FITTED TO RIGHT HAND DRIVE CARS ONLY |
| BD.7794 BD.7795 | FLOORBOARD ASSY., L.H. FOR USE ONLY WHEN SPECIAL BUCKET SEATS ARE FITTED | | 1 } | FITTED TO LEFT HAND DRIVE CAR ONLY |
| BD.7793 | FIXING PLATE ASSY. FOR MOUNTING OF BUCKET SEATS | | 8 | |
| NS.519/4H NS.519/6H NS.519/4H FW.105/T NN.131/L C.725 | Screw, Set, securing Fixing Plates to L.H. Floorboards Screw, Set, securing Fixing Plates to L.H. Floorboards Screw, Set, securing Fixing Plates to R.H. Floorboards Washer, Plain, on Setscrews Nut, on Setscrews, securing Seats to Fixing Plates Washer, Shakeproof, under Nuts | | 4 4 8 8 8 | |
| C.5726 | EXTERNAL LUGGAGE RACK | | 1 | FITTED TO TONNEAU PANEL |
| C.5660 | EXTERNAL LUGGAGE RACK | | 1 | FITTED TO BOOT LID |
| 6982 | EXTERNAL LUGGAGE RACK (WITH DETACHABLE FEET) | | 1 | FITTED TO BOOT LID |
| C.5572 | BADGE BAR | | 1 | |

The following is a list of BOLTS, SETSCREWS, NUTS, WASHERS, ETC., USED ON XK 120 MODELS

BOLTS

| | | | Number | r per Car | • | |
|--------------------------|--|---|---------------|-----------|----------------------|--|
| Part No. | Thread. | Length. | L.H.D. | R.H.D. | Remarks. | |
| CB.131/16D | å A.N.C. | 2" | 1 | 1 | Std. Hex. Head | |
| FB.104/12D | ₽ B.S.F. | 117 | 19 | 19 | 22 22 13 | |
| FB.104/14D | ₹" B.S.F. | 1 ફ ੈ″ | 2 | 2 | " " " | |
| FB.104/21D | ₹″ B.S.F. | 21 | 4 | 4 | " " | |
| FB.105/12D | ∯″ B.S.F. | 11 | 6 | 6 | " " | |
| FB.105/14D | 音" B.S.F. | ! ! . | 2 | 2 2 | ,, ,, ,, | |
| FB.105/15D | å″ B.S.F. | 11, | 2 2 | 2 2 | " " | |
| FB.105/22D FB.105/24D | * B.S.F. * B.S.F. * B.S.F. | 2 j * 3 * 3 * 3 * 4 * 4 * 4 * 4 * 4 * 4 * 4 | 2 | 2 | ,, ,, | |
| FB.108/14D | ₹ B.S.F. | 18" | 4 | 4 | ** ** ** ** ** ** | |
| FB.204/10D | 1" B.S.F. | 13° 13° | 16 | 16 | Thin ,, ,, | |
| FB.504/10H | ≟″ B.S.F. | 1}″ | 2 | 2 | Countersunk Head | |
| NB.125/10D | ≟″ A.N.F. | 1 } " 2" | 4 | 4 | Std. Hex. Head | |
| NB.125/16D | į̃" A.N.F. | | 5 | 5 | ,, ,, ,, | |
| NB.131/5D | ∯″ A.N.F. | §~ | 4 | 4 | " " " | |
| NB.131/6D | _格 " A.N.F. | ₹″ | 6 | 6 | """ | |
| NB.131/6F | ፟ _ፙ ፝ A.N.F. | 1" | 2 | 2 | " " " (H.T.S.) | |
| NB.131/7D | 🥻 ″ A.N.F. | 4 | 7 2 | 7 2 | " " | |
| NB.131/8D | & A.N.F. | 1 1 / | 2 | 2 | " " | |
| NB.131/8.5D NB.131/9D | ፝ቈ ້ ″ A.N.F. ፟ቈ້″ A.N.F. | 1 18" 11" | 12 | 12 | " " | |
| NB.131/10D | %" A.N.F. | 11. | 14 | '4 | 11 11 21 | |
| NB.131/11D | ₩ A.N.F. | 187 | 3 | ż | " " " | |
| NB.131/11F | A.N.F. | 14" | 4 | 4 | " " " (H.T.S.) | |
| NB.131/12D | ₩ A.N.F. | 1å* 1å* | 2 | 2 | " " " | |
| NB.131/13D | 👬 " A.N.F. | 11 | 2 | 2 | " " " | |
| NB.131/14D | ∯″ A.N.F. | 1 ½ * 2 * | 1 | 1 | | |
| NB.131/16D | ∯″ A.N.F. | 2" | 5 | 5 | ** ** ** | |
| NB.131/17D | A.N.F. | 21" | 1 | 1 | , " " " | |
| NB.131/19D | A.N.F. | 2 1 " 2 1 " | 4 6 | 6 | " " | |
| NB.131/21D | §″ A.N.F. &″ A.N.F. | 21 | 2 | 2 | " " . | |
| NB.131/23D NB.131/36D | ₩ A.N.F. | 41, | 2 | 2 |)))) ₁) | |
| NB.137/6D | # A.N.F. | 71, | 11 | 10 | 11 11 11 | |
| NB.137/7D | ₹″ A.N.F. | ž* | 8 | 8 | | |
| NB.137/8D | 4" A.N.F. | 1,7 | _ | 2 | " " " | |
| NB.137/9D | * A.N.F. | 11," | 4 | 4 | " " " | |
| NB.137/12D | ẫ″ A.N.F. | 11 " | 2 | 2 | ** ** ** | |
| NB.137/14D | ₹″ A.N.F. | 1 <u>\$</u> " 2" | 12 | 12 | ,, ,, | |
| NB.137/16D | 1' A.N.F. | 2" | 2 | 2 | ** ** ** | |
| NB.137/23D | ∄ ″ A.N.F. | 37 | 19 2 | 19 2 | ** ** ** | |
| NB.137/24D | ¾ ″ A.N.F. ¾ ″ A.N.F. | 3** | 4 | 4 | " " | |
| NB.137/27D NB.143/16D | ₹ A.N.F. | 34° 2° | 4 | 4 | 11 11 11 | |
| NB.143/23F | ₹ A.N.F. | 21" | 6 | 6 | ", ", ", (H.T.S.) | |
| NB.143/25D | 7. A.N.F. | 31." | 6 | 6 | " " " | |
| NB.150/10D | 1 A.N.F. | 11." | 2 | 2 | 11 10 10 | |
| NB.150/16D | i" A.N.F. | 1 1 2 ° 2 ° | 1 | 2 1 | " " " | |
| NB.150/22D | į̃″ A.N.F. | 2}* 3* | 2 | 2 | 11 11 11 | |
| NB.150/24D | ₫″ A.N.F. | 3* | 2 | 2 2 | ** ** ** | |
| NB.150/32D | ₫″ A.N.F. | 4" | 2 | 2 | ** ** | |
| NB.150/41D | ⅓″ A.N.F. | 51." 6" | 2 | 2 | ** ** ** | |
| NB.150/48D | ₹″ A.N.F. | 6" 21" | 4 | 4 | ** ** ** | |
| NB.156/30D | 操"A.N.F. | 34″ 2″ | 2 | 2 | Thin ", ", (H.T.S.) | |
| NB.237/16F NB.313/3H | ∦″ A.N.F. No. 6 A.N.F. | 4.* | 4 | 4 | Cheese Head | |
| NB.316/5H | No. 8 A.N.F. | ₹ | 2 | 2 | Chiese Fieau | |
| NB.519/8D | No. 10 A.N.F. | 12 | 2 | 2 | Countersunk Head | |
| | | | | | | |

COACHBOLTS

| Number per Car | | | | | |
|----------------|--------------------|---------|--------|--------|-----------------------|
| Part No. | Thread. | Length. | L.H.D. | R.H.D. | Remarks. |
| | | | | | |
| FC.105/17V | <u>∱</u> в″ В.Ѕ.F. | 21/2 | 8 | 8 | Cup Head, Square Neck |

SETSCREWS

| Part No. Thread. Length. Number per Car. AS.102/3D AS.102/3D 2 B.A. \$ 1 1 1 1 Std. Hex Head AS.102/4P 2 B.A. \$ 1 12 12 12 | | | | Number non Co | |
|---|--------------------------|-------------------------|--------------------|--------------------|---------------------------------------|
| AS.102/5D 2 B.A. 1 | Part No. | Thread. | Length. | | |
| AS.102/AFD AS.102/SD BA. 1 | AS.102/3D | 2 B.A | <u>8</u> " | 1 | 1 Std. Hex Head |
| AS.302/4H | | | å″ | | 10 |
| AS.302/4H | | | 5,7 | | 2 |
| AS.302/4H | | | <u>3</u> ″ | | 10 Cheese Head |
| AS.302/6H 2 B.A. 12 12 12 | | | ₹" | | |
| AS.302/9H 2 B.A. 18 2 2 2,,,,,, | | | 8″ | | |
| AS.302/9H 2 B.A. 18 2 2 2,,,,,, | | | 47 | | |
| AS.303/4H AS.304/4H AS.304/4H AS.402/3H AS.402/3H AS.402/3H AS.402/3H AS.502/2H BA. AS.502/2H BA. AS.502/2H BA. AS.502/2H BA. AS.502/3H BA. BA. BA. BA. BA. BA. BA. BA | | | 11" | 2 | 7 " " 2 |
| AS.303/4H AS.304/4H AS.304/4H AS.402/3H AS.402/3H AS.402/3H AS.402/3H AS.502/2H BA. AS.502/2H BA. AS.502/2H BA. AS.502/2H BA. AS.502/3H BA. BA. BA. BA. BA. BA. BA. BA | | | 1 8 " | 4 | • |
| AS.502/9H 2 B.A. 1½" 24 24 24 3 | | | `i″ | | 9 " |
| AS.502/9H 2 B.A. 1½" 24 24 24 3 | | | 3/ | 6 | 6 " " |
| AS.502/9H 2 B.A. 1½" 24 24 24 | | | <u>i</u> ." | 2 | 2 " " |
| AS.502/9H 2 B.A. 1½" 24 24 24 | | | 3 " | 2 | 2 Round Head |
| AS.502/9H 2 B.A. 1½" 24 24 24 | | | $\frac{1}{2}$ | 5 | |
| AS.502/9H 2 B.A. 1½" 24 24 24 | | | 4 ″ | | 2.4 |
| AS.502/9H 2 B.A. 1½" 24 24 24 3 | | | \$ 1″ | | 40 |
| AS.502/9H 2 B.A. 1½" 24 24 24 | | | 1″ | | 14 |
| AS.502/9H 2 B.A. 1½" 24 24 24 | | | 2 ≜ * | 8 | 8 |
| AS.502/9H 2 B.A. 1½" 24 24,, AS.502/9H 2 B.A. 1½" 10 10,, AS.503/2H 3 B.A. 1½" 20 20,,,,,, | | | 1″ | 12 1 | 12 ", ", |
| CS.125/5D | AS.502/9H | | 1], " | 24 2 | 24 ,, ,, |
| CS.125/5D | | | 1½″ | | |
| CS.125/5D | | | <u>‡</u> ″ | 20 2 | |
| CS.125/5D | | | ½″_ | 3 | |
| CS.419/3H No. 10 A.N.C. \$\frac{1}{2}\$" 5 5 5 Round Head FS.104/3D \$\frac{1}{2}\$" B.S.F. \$\frac{1}{2}\$" 137 136,,,,,,, | | ‡" A.N.C. | 8 | 4 | |
| CS.419/3H No. 10 A.N.C. \$\frac{1}{2}\$" 5 5 5 Round Head FS.104/3D \$\frac{1}{2}\$" B.S.F. \$\frac{1}{2}\$" 137 136,,,,,,, | | ξ // Δ N C | ₹ 5 ″ | 7 | |
| FS.104/6D | | No. 8 A.N.C. | ž" | . 6 | |
| FS.104/6D | | | <u>\$</u> * | 5 | |
| FS.104/6D | | | <u> </u> | 10 1 | |
| FS.104/6D | | ∦″ B.S.F. | ½″. | 137 13 | |
| FS.104/8D | | ₹″ B.S.F. | §″ | | |
| FS.105/4D | | | 4 # " | | A |
| FS.105/6D | | | 1,0 | | 10 " " |
| FS.105/6D | | | <u>2</u> | | |
| FS.105/7D | | ∯″ B.S.F. | \$ \$ * | | A |
| FS.105/9D | | ♣″ B.S.F. | 7 .* | 2 | 2 , , , , |
| FS.105/9D | | ິ ຄິ″ B.S.F. | 1″ | 4 | . " " " |
| FS.106/4D | | 16″ B.S.F. | 1 1 7 | | |
| FS.106/10D | | | 1 1 2 " | 4 | |
| FS.107/8D | | | 41" | 2 | 2 , , , |
| FS.107/8D | | | 12" | 12 1 | 12 ,, ,, ,, |
| FS.205/7D | | 7. BSF | 17 | 6 | , , , , , , , , , , , , , , , , , , , |
| FS.404/3D | | | 2" | ž | 7 Thin |
| FS.404/3D | | | <u>\$</u> ″ | $\bar{\mathbf{z}}$ | 2 Cheese Head |
| FS.504/6H | FS.404/3D | ₫″ B.S.F. | <u>3</u> ″ | . 4 | 4 Round Head |
| FS.504/6H | | | 1 " | | |
| FS.504/6H | | | · ½" | | |
| FS.504/10H 1" B.S.F. 11" 22 22 ,, ,, | | | 2." | | |
| FS.504/10H 1" B.S.F. 11" 22 22 ,, ,, | | | 12 | | |
| PC FOAMAGE IN DCF 4IM A | | | 1" 41" | | no. |
| | FS.504/10H FS.504/12H | ∄″ B.S.F. | 11" | | A |
| FS.504/20H 1 B.S.F. 11 4 4 , , , , , , , , , , , , , , , , | | | 21,4 | | |

SETSCREWS (continued)

| | | | Number | per Car | |
|---------------------|-------------------|----------------|--------|---------|-------------------|
| Part No. | Thread. | Length. | L.H.D. | R.H.D. | Remarks. |
| NS.119/2D | No. 10 A.N.F. | ł" | 2 | 2 2 | Std. Hex. Head |
| NS.119/10D | No. 10 A.N.F. | 14 | 2 | | ,, ,, ,, |
| NS.125/4D | ₹″ A.N.F. | <u>i</u> ~ | 53 | 55 | ,, ,, ,, |
| NS.125/5D | ₫″ A.N.F. | 8 ″ | 4 | 4 | ,, ,, ,, |
| NS.125/7D | ₫″ A.N.F. | ₹* | 4 | 4 | " " |
| NS.125/16D | ∄″ A.N.F. | 2* | 5 | 5 | ,, ,, ,, |
| NS.131/4D | ∯″ A.N.F. | 1 ″ | 4 | 4 | " " " |
| N\$.131/4F | ẫ" A.N.F. | i." | 1 | 1 | ,, ,, (H.T.S.) |
| NS.131/5D | ∰″ A.N.F. | ŧ" | 4 | 4 | " " |
| NS.131/6D | · A.N.F. | <u>į</u> " | 46 | 46 | " " " |
| NS.131/12D | ẫ″ A.N.F. | 1≟″ | 4 | 4 | " " |
| NS.137/3D | ₽ A.N.F. | Ī' | 1 | 1 | " " " |
| NS.137/5D | ∦″ A.N.F. | 1 " | 1 | 1 | " " " |
| VS.137/5F | ≛″ A.N.F. | ¥″ | 1 | 1 | " " " (H.T.S.) |
| NS.137/6D | ≟ ″ A.N.F. | ž" | 6 | 6 | " " |
| NS.137/6.5D | ₫" A.N.F. | #" | 6 | 6 | " " |
| NS.137/9H | ≜ ″ A.N.F. | 1 🖟 | 8 | 8 | " " |
| NS.1 37 /10D | ∦″ A.N.F. | 11/ | 7 | 7 | " " |
| NS.137/15F | ≛″ A.N.F. | 14" | 2 | 2 | ,, ,, ,, (H.T.S.) |
| NS.237/6D | ≛″ A.N.F. | i" | 2 | 2 | Thin ,, ,, |
| NS.237/6F | ≛ ″ A.N.F. | į. | 2 | 2 | " " " (H.T.S.) |
| NS.316/3H | Ňo. 8 A.N.F. | ā" | 4 | 4 | Cheese Head |
| NS.319/5H | No. 10 A.N.F. | * " | 1 | 1 | ** ** |
| NS.325/3H | ⅓ ″ A.N.F. | ¥" | 2 | 2 | " " |
| NS.325/5H | ≟″ A.N.F. | ě ″ | 3 | 3 | " " |
| NS.325/8H | Ī″ A.N.F. | 1″ | 2 | 2 | " " |
| NS.525/4D | ≟″ A.N.F. | ↓ ″ | 5 | 5 | Countersunk Head |
| NS.525/5H | ≟" A.N.F. | <u>\$</u> * | 16 | 16 | " |
| NS.525/6H | }" A.N.F. | å" | 8 | 8 | " |
| NS.525/8H | 1" A.N.F. | 17 | 4 | 4 | " " |
| NS.525/12H | 1" A.N.F. | 114" | À | Á | " " |

NUTS

| | | Number | r per Car | |
|----------|-----------------|--------|-----------|-------------------|
| Part No. | Thread. | L.H.D. | R.H.D. | Remarks. |
| AN.102/L | 2 B.A. | 187 | 189 | Plain Hexagonal |
| AN.104/L | 4 B.A. | 18 | 18 | " |
| FN.102/L | ₽" B.S.F. | 12 | 12 | " " |
| FN.104/L | ₫" B.S.F. | 239 | 239 | " " |
| N.105/L | A B.S.F. | 32 | 32 | " " |
| FN.106/L | ₽ B.S.F. | 19 | 19 | " " |
| FN.108/L | ₽" B.S.F. | 1 | 1 | |
| FN.204/L | ≟″ B.S.F. | 6 | 6 | Lock Nut |
| FN.206/L | ₽" B.S.F. | 2 | 2 | |
| FN.405/L | A″ B.S.F. | 2 | 2 | Slotted Nut |
| N.407/L | 7 B.S.F. | 4 | 4 | |
| U.104/N | ₽ B.S.F. | ż | ż | Steel Wing Nut |
| NN.116/L | No. 8 A.N.F. | 3 | 3 | Plain Hexagonal |
| NN.119/L | No. 10 A.N.F. | 5 | 5 | |
| NN.125/L | ₹" A.N.F. | 20 | 20 | " " |
| NN.131/L | ∦″ A.N.F. | 55 | 55 | " " |
| NN.131/Q | ₩ A.N.F. | 16 | 16 | ,, ,, (Bronze) |
| NN.137/L | ₹ A.N.F. | 30 | 30 | |
| NN.137/Q | # A.N.F. | 8 | 8 | ,, ,, (Bronze) |
| NN.143/L | ₹ A.N.F. | 2 | ິ້ງ | |
| | ₩ A.N.F. | 2 | £ . | " " |
| NN.150/L | ፈ" A.N.F. | 1 | 4 | Lock Nut " |
| NN.243/L | TO ANIE | 1 | 4 | LOCK INUT |
| NN.256/L | 豪" A.N.F. | ı | | O to - "Classes d |
| NN.737/L | ₹ A.N.F. | 8 | 8 | Regular Slotted |
| NN.743/L | ፈ" A.N.F. | 2 | 2 | ** |
| NN.750/L | £ \(\alpha\). | 2 | 2 | " |
| NN.756/L | ∦ A.N.F. | t | 6 | 6 M |
| NV.137/L | ∦″ A.N.F. | 2 | 2 | Square Nut |

WASHERS

| Part No. | Bolt Dia. | Outside Dia. | Thickness. | L.H.D. | per Car R.H.D. | Remarks. |
|----------|-------------|--|------------|---------|-------------------|--------------------|
| AW.102/C | 2 B.A. | ½ ″ | ·056″ | 18 | 18 | Plain (Brass) |
| AW.102/E | 2 B.A. | ½" ½" | .056" | 1 | 1 | " (Copper) |
| AW.102/T | 2 B.A. | | ·056″ | 90 | 90 | ,, (Steel) |
| AW.104/T | 4 B.A. | 型。 18.″ ·375″ | .056″ | 10 | 10 | ,, (Steel) |
| FG.102/X | ₹" B.S.F | ·375″ | ·064" | 2 | 2 | Single Coil Spring |
| FG.104/X | å″ B.S.F. | ·437″ | ·064″ | 26 | 26 | |
| FG.105/X | 16″ B.S.F. | -500″ | .080″ | 201 | 201 | ,, ,, |
| FG.106/X | §″ B.S.F. | -600″ | ·104″ | 62 | 62 | " " |
| FG.108/X | រ៉ូ″ B.S.F. | ·786″ | ·128″ | 2 | 2 | " " |
| FW.104/C | ∄″ B.S.F. | | ·056″ | 34 | 34 | Plain (Brass) |
| FW.104/E | ∄″ B.S.F. | 90 " 10 | .056″ | 20 | 20 | (Canaa) |
| FW.104/T | ∄″ B.S.F. | 16 9 " | 056″ | 248 | 248 | (Secol) |
| FW.105/E | ∄″ B.S.F. | 16 5″ | ·072″ | 24 | 24 | (Connon) |
| FW.105/T | ∯″ B.S.F. | 8 5.″ | ·072″ | 52 | 52 | (Secol) |
| FW.106/E | ∯″ B.S.F. | 8/ | .072* | 52 2 | 2 | (Cannon) |
| FW.106/T | ∦″ B.S.F. | 3" | ·072* | 38 | 38 | (\$400) |
| FW.108/T | រ៉ឺ″ B.S.F. | .1" | ·092″ | 7 | 7 |)Cecol) |
| FW.204/T | ≟″ B.S.F. | ·625″ | ·056″ | Á | A 5 | Bevelled (Steel) |
| FW.205/T | 18″ B.S.F. | ·750″ | ·072″ | 4 | 4 |)Cenal\ |
| FW.206/T | ₹" B.S.F. | ·875″ | .072″ | 7 | 2 | (Canal) |
| FW.207/T | 78 B.S.F | 1″ | .092″ | 4 | 4 | (Stool) |
| FW.208/T | ት" B.S.F. | 1.125″ | .092″ | 6 | 4 | ,, (Steel) |

WOODSCREWS

| Gauge. No. 4 No. 4 No. 6 No. 6 | Length. | L.H.D. 192 | per Car R.H.D. | Remarks. Countersunk Head | |
|--------------------------------|---|--|-------------------|----------------------------|-------|
| No. 4 No. 6 | 3.″ | | 192 | | |
| No. 4 No. 6 | 3.″ | | 192 | Countomunk Hood | |
| No. 6 | 3.″ | 24 | | Countersunk Head | |
| | 3 // | 36 | 36 | ,, ,, | |
| No. 6 | <u>3</u> ″ | 44 | 44 | " | |
| | å" | 10 | 10 | " " | |
| No. 6 | <u>\$</u> " | 28 | 28 | " " | |
| | .ş.,* | 67 | 67 | | |
| No. 6 | 17 | 20 | 20 | | |
| | 11" | 18 | 18 | | |
| | 2 3″ | 8 | 8 | | |
| | 8 1″ | 3 | | | |
| | 3" | 97 | 97 | ** | |
| | 7" | | 10 | ** | |
| | 17 | | | ** ** | |
| | | | | *** | |
| | 14 | ა ა | | 99" , A 99 | |
| | 1 2 " | 30 | | 11 | |
| | 14" | .2 | 2 | ** | |
| | 8" | 3 | 3 | ** | |
| | ₹″ | 4 | 4 | 11 | |
| No. 10 | ₹″ | 8 | | ,, | |
| No. 10 | 1″ | 34 | 34 | " " | |
| | 1}" | 16 | 16 | ., | |
| No. 10 | 14" | 18 | 18 | | |
| | 1\$" | | 6 | ** | |
| | 3," | 2 | 2 | | |
| | ž" | 4 | 4 | | |
| | 3," | i | í | | |
| | 3″ | <u> </u> | 4 | | |
| | ā" | 4 | 7 | | |
| | No. 6 No. 6 No. 8 No. 8 No. 8 No. 8 No. 8 No. 10 | No. 6 No. 6 No. 6 No. 8 No. 14 No. 10 No. 10 | No. 6 | No. 6 | No. 6 |

CLEVIS PINS

| Part No. | Shank Dia. | Head Dia. | Head Thickness | Length. | Number L.H.D. | per Car R.H.D. | Remarks. | |
|-------------------------------------|--------------------|----------------------------------|-------------------------|-------------------------|------------------|-------------------|----------|--|
| J.103/11S J.103/13S J.103/15S | 3 ″ 3 ″ 18 ″ | 9 " 82" 9 " 82 " | -070* -070* -070* | 118 " 13 " 16 " | 1 1 | 1 | | |
| .103/133 .104/6\$.105/11\$ | 18 18 18 | 16 . 16 . 18 . | ·130* ·130* ·130* | 16 8" 11 " 13" | 6 2 1 | 6 2 1 | | |
| 1.106/10S 1.106/17S | 3.** 8 3.** | 17 ** 17 ** 17 ** 17 ** | ·130″ ·130″ | 1 18" | 1 | 1 | | |

SPLIT PINS

| Number per Car | | | | | | | |
|----------------|------------|----------------|--------|----------|-----------------|--|--|
| Part No. | Diameter. | Length. | L.H.D. | R.H.D. | Remarks. | | |
| L.102/4U | ¥., | 1 ″ | 6 | . 6 | "Drivopen" Type | | |
| L.102/6U | ÷." | <u>~</u> | 2 | 2 | " " | | |
| L.102.5/8U | £ " | 1" | 8 | 8 | " " | | |
| 103/6Ü | 3 " | 3 ″ | 7 | 7 | 11 11 | | |
| 103/7U | 32 " | Ž ″ | 30 | 30 | 11 11 | | |
| 103/8∪ | *** | 1* | 12 | 12 | " " | | |
| 103.5/8U | Ã" | 1″ | 12 | 12 | " | | |
| 104/10U | į. | 11" | 17 | 17 | " | | |
| 104/11U | រុំ* | 18" | 1 | 1 | , 29 99 | | |
| 104/12U | i ″ | 1 🖁 " | 2 | 2 | 19 31 | | |
| 105/10U | å. * | 11." | 2 | 2 | | | |
| 105/12U | 3° 7 | 11" | 6 | <u> </u> | ,, ,, ,, ,, | | |

DOWELS

| Number per Car | | | | | | |
|----------------|------------|------------|--------|--------|--------------|--|
| Part No. | Diameter. | Length. | L.H.D. | R.H.D. | Remarks. | |
| OD.105/6H | 4 ″ | 3.° | 4 | 4 | Steel | |
| OD.106/4J | i" | <u>1</u> " | 2 | 2 | Silver Steel | |

RIVETS

| | | | | per Car | |
|----------------------------------|----------------------|------------------|----------|----------|---|
| Part No. | Diameter. | Length. | L.H.D. | R.H.D. | Remarks. |
| R.302/5Z | 1 ″″ | 18 " | 4 | 4 | Flat Head (Copper) |
| R.303/7W R.303/8W R.304/7W | 18 " 18 " 18 " | 18 2 7.** | 8 | 8 | ,, ,, (Steel) ,, ,, (Steel) |
| R.502/10 W | # " _ | 16 5." 8." | 4 | 4 | ,, ,, (Steel) 90° Countersunk Head (Steel) |
| R.503/7W R.504/11W | 18 1. | 76 11." | 24 12 | 24 12 | 90° ,, ,, (Steel) 90° ,, ,, (Steel) |
| R.604/8W | ì. | 10 | 4 | 4 | 120° ,, ,, (Steel) |